


Digital Piano

USER MANUAL

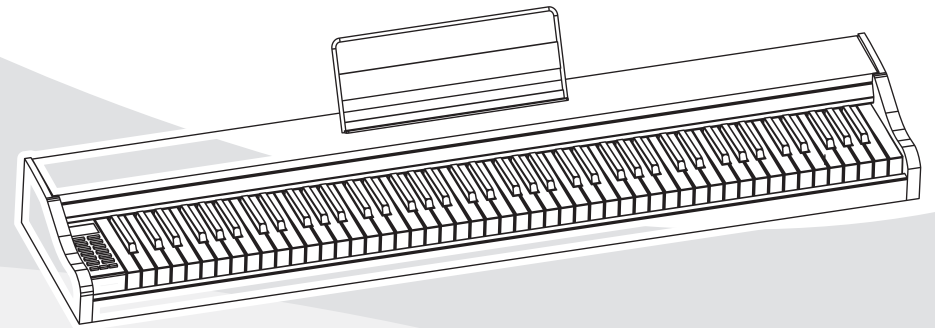

THE CAGE IS NOT INCLUDED FOR INFORMATIONAL PURPOSES ONLY

Welcome To Use Digital Piano

Thank you for your purchase of this digital keyboard. This digital keyboard is elegant and refined, combined perfectly with handle and timbre of traditional keyboard and latest electronic technology of the present age.

- ◆ Before using this musical instrument, you should read this manual book in detail.
- ◆ please keep all user files properly as to look up when needed in days to come

CONTTENT

1.Function Introduction	2-3
2.Safety Caution	4-5
3.JACK SOCKET	5
4.FUNCTIONAL INDICATOR	6
5.Connection	7
6.BASIC OPERATION	8-10
7.Tone List	11-14
8.Rhythm List	15-17
9.Demo List	18-19
10.Single Finger Chord List	20
11.Multi-Finger Chord List	21-22
12.Product Maintenance.....	23
13.Safety warning	23
14.Warranty Card	24

Function Introduction

Appealing tone

It adopts Dream source, with digitization sampling, which provide vivid as acoustical experience for your performance

128 tones that are plentiful and top grade

which include 128 standard GM tones,

100 preset rhythms

There are 100 rhythms, including all sorts of accompaniments, ranging from rock-and-roll to pop music and jazz, which enable you to experience various feelings.

88 Demo songs

88 demos of various styles are selected with great care to be played.

USB / MIDI terminal

Use USB or MiDI terminal, and you can connect it to the computer or other MIDI devices for interaction and creation quickly and conveniently.

function list

- 88 Keys Keyboard
- 128 Tones
- 100 Rhythms
- 88 Demos in the library
- LED display
- Master volume / Acc volume control
- Tempo control / Transpose control
- chord function
- Accompaniment synchronization
- Keyboard split function
- Touch control / Transfer metronome
- USB/MIDI capability
- Headphone jack / Stereo audio input

Safety Caution

WARNING

Smoke,peculiar smell,overheat

When this musical instrument smokes, gives off peculiar smell or is overheat, continuing in service may result in fire and electric shock. When the above cases occur, you shall carry out the following operations immediately.

- 1.turn power off .
- 2.please unplug plug of AC transformer from the outlet.
- 3.contact your dealer.

AC transformer

● The misapplication of AC transformer may result in fire and electric shock. You shall abide by the following caution notes.

1. You shall use special AC transformer appointed for this product.
2. You shall use AC power supply whose output voltage is within the range of voltage rating marked on the AC transformer.
3. You shall not make the outlet and power extension line overload

You shall never touch AC transformer with wet hand, otherwise it may result in electric shock.

- please use AC transformer where may not touch water. Water may result in fire and electric shock.
- You shall never place vase or any other containers with water on AC transformer. Water may result in fire and electric shock

Notice

AC transformer


• The misapplication of AC transformer may result in fire and electric shock. You shall abide by the following caution notes.

1. You shall never place power line near kiln or other heaters.
2. When unplugged from the outlet, the power line shall never be pulled and dragged.
You shall grasp the body of AC transformer plug.

3. You shall insert the AC transformer into the outlet to the end.

Volume

You shall never play music with high volume for a long time. When using earphone, you shall take particular care. Too high volume may do harm to your hearing.

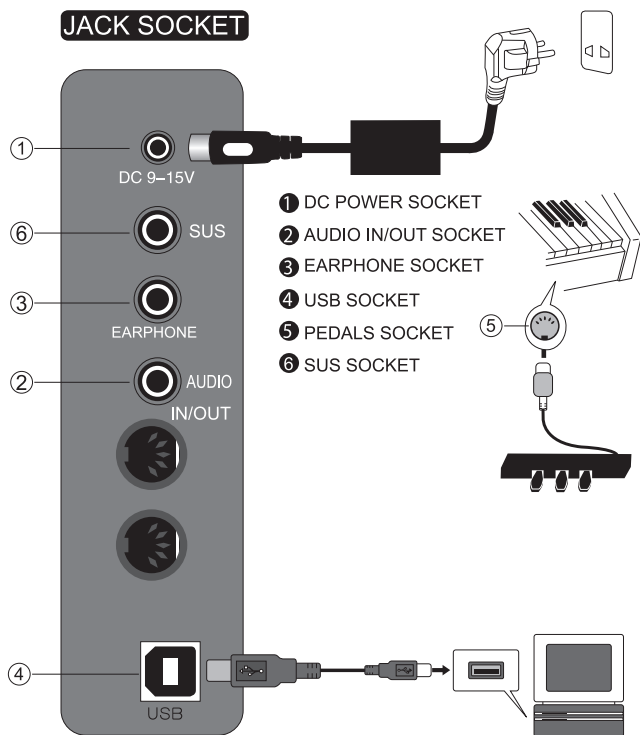

FUNCTLANAL INDICATOR



Connection

Audio Input Interface

Before external audio signal is connected to this product, please turn down the volume of tone source at first. Adjust the volume to the satisfactory level after connection.

Connecting wire, which is sold into the open where both ends are standard plugs (for instance : for MP3)

or one end is standard plug while the other end is two needle shaped plug (for instance: for DCD) , is used to connect tone source output unit and digital keyboard, and when you switch on power switches of tone source instrument and digital keyboard, you can play music on the tone source instrument of the digital keyboard, or you can also play music while play the musical instrument

USB / MIDI Interfaces

MIDI is initial letters of Musical Instrument Digital Interface in English. MIDI is the standard connecting system of communication between digital keyboard and music instrument with MIDI USB or MIDI interfaces of this digital keyboard can be used to connected with music instrument accompanied with MIDI and computer.

Earphone Output Terminal

This product has one earphone output faucets, and turn down volume of the digital keyboard at first before connecting earphone. Adjust the volume to the satisfactory level after connection

Basic Operation

Piano performance

1. Press the power switch, and the power indicator and digital tube will light up, and then you can enter the playing state.

2. Play music on the piano keys.

Volume adjustment

Press the "volume +" or "volume -" button to increase or decrease the volume until it is satisfactory.

Timbre selection

1. Press "timbre/rhythm" button, and the indicator light will be on to enter timbre mode.

2. Press "select +" or "select -" to select any timbre, and the corresponding timbre number will be displayed digitally.

3. When the power switch is turned on, it is preset to the piano tone, with a total of 128 tones.

Rhythm selection

1. Press the "Tone/Rhythm" button, the key light goes out and enters the rhythm mode.

2. Press "Select+" or "Select-" to select any rhythm, digital display of the corresponding rhythm number.

3. Press the "Start/Stop" key to start playing the selected rhythm. Pressing "Insert 1" or "Insert 2" inserts a piece of cross-door music to stop the rhythm play press "Start/Stop".

Speed adjustment

1. Press the "Speed" button and press "Select+" or "Select-" to adjust the speed and speed.
2. Speed control range (20-280), power-up preset in paragraph 120.

Chord accompaniment

1. Select the desired rhythm to play.
2. Press and hold the "Tone/Rhythm" and "Function" buttons at the same time to enter the chord state.
3. Playing chords can be played differently on the accompaniment keyboard (1-34 keys from left) according to different fingering.
4. Press and hold the "Tone/Rhythm" and "Function" buttons again to turn off the chord function.

Shift ingdulation

1. Press the "Function" button, digital display "0" into the transfer selection function.
- 2.2. Press "Select +" or "Select-" to select different shift values (-12-12).

Force function

1. Press the "function" button, the function light lights up, digital display inverted "F" when entering the force adjustment function.
2. Use "Select+" or "Select-" to select force on or force off.

Metronome features

Press the metronome button, the light lights up, the metronome function starts, and then press the key metronome function off.

Built-in Demo Song

1. At the same time, press and hold the "Select +" "Select -" Digital display of the current demonstration song number, start playing the demonstration song continuously.
2. Entering the demonstration mode can also be "select +" or "select-" to select a

different demonstration song.

3. Press "Select+" and "Select-" again to exit the demonstration mode.

Recording

1. Key disc note recording

Press the "Start/Stop" and "INTRO/End" buttons simultaneously to digitally display "REC" into recording mode, recording 5000 notes.

2. Sounding Press "Insert 1" and "Insert 2" digitally display "PLY" to play the recorded notes.

SPLIT

1. Press the "Function" button, the function light goes on, and the digital display of the first letter "S" enters dual keyboard selection mode.
2. Use "Select +" or "Select-" to select both keyboard on or double keyboard off.
3. Play notes on the keyboard, at this time playing the keyboard left and right each issued the corresponding sound of the instrument

DUAL

1. Press the "Function" button, the function light goes on, and the digital display of the first letter "d" enters dual selection mode.
2. Use "Select+" or "Select-" to select a two-tone on or two-tone switch.
3. Play notes on the keyboard, at which point playing the keyboard can emit two corresponding resonance tones at the same time.

Accompaniment volume adjustment

1. Press the "function" button, the function light lights up, digital display "024" into and put accompaniment volume adjustment mode.
2. Use "Select +" or "Select-" to select a different accompaniment volume (0-32).

Storage function

1. After setting the various parameters that need to be remembered at present, you can press and hold the "Storage 1" or "Storage 2" button, the corresponding light flashes to indicate that the current setting has been remembered.
2. When playing, you need to release the corresponding parameters, just press the corresponding button to release quickly.

USER MANUAL

TONE LIST:

	128 TONE
(Number)	Instrument
PIANO	
1	PIANO GRD
2	PIANO BRITE
3	PIANO ELEC
4	HONKY-TONK
5	E PIANO1
6	E PIANO2
7	HARPSCRD
8	CLAVI
GLOCK	
9	CELESTA
10	GLOCKNSPL
11	MUSIC BOX
12	VIBRAPHONE
13	MARIMBA
14	XYLOPHONE
15	TUBULR BELLS
16	DULCIMER

	ORGAN
17	HAMND ORG
18	PERC ORG
19	ROCK ORG
20	CHURCH ORG
21	REED ORG
22	ACCORDN 1
23	HARMONICA
24	ACCORDN 2
GUITAR	
25	GTR NYLON
26	GTR STEEL
27	GTR JAZZ
28	GTR CLEAN
29	GTR MUTED
30	GTR OVRDRV
31	GTR DISTRT
32	GTR HRMNX
BASS	
33	ACOU BASS
34	FINGR BASS

USER MANUAL

35	PICK BASS
36	FRETLS BASS
37	SLAP BAS 1
38	SLAP BAS 2
39	SYN BASS 1
40	SYN BASS 2
STRING	
41	VIOLIN
42	VIOLA
43	CELLO
44	CONTRABASS
45	STR TREM
46	STR PIZZ
47	HARP
48	TIMPANI
CONCERT	
49	STRINGS 1
50	STRINGS 2
51	STR SYN 1
52	STR SYN 2
53	CHOIR AAHS

54	VOICE OOHS
55	VOICE SYN
56	ORCH HIT
BRASS	
57	TRUMPT
58	TROMBONE
59	TUBA
60	MUTE TPT
61	FR HORN
62	BRASS SECT
63	BRASS SYN 1
64	BRASS SYN 2
PIPE	
65	SAX SOPRANO
66	SAX ALTO
67	SAX TENOR
68	SAX BTONE
69	OBOE
70	ENG HORN
71	BASSON

USER MANUAL

72	CLARINET	88	BASS LEAD
WOODPIPE		SYNTH VOICE	
73	PICCOLO	89	NEW AGE
74	FLUTE	90	WARM PAD
75	RECORDER	91	POLY SYNTH
76	PAN FLUTE	92	CHOIR PAD
77	BOTTLE BLOWN	93	BOW GLASS
78	SHAKHACHI	94	METAL PAD
79	WHISTLE	95	HALO PAD
80	OCARINA	96	SWEEP
SYNTH PIPE		SYNTH EFFECT	
81	SQR WAVE	97	RAIN FX
82	SAW TOOTH	98	SNDTRK FX
83	CALLIOPE	99	CRYSTAL FX
84	CHIFF	100	ATMOSPH FX
85	CHARANG	101	BRIGHT FX
86	VOICE LEAD	102	GOBLIN FX
87	5TH LEAD	103	ECHO FX

USER MANUAL

104	SCI-FI FX	120	REVRS CYM
FOLK SOUND		EFFECT	
105	SITAR	121	GTR NOISE
106	BANJO	122	BREATH
107	SHAMISEN	123	SEASHORE
108	KOTO	124	BIRD TWEET
109	KALIMBA	125	TELEPHONE
110	BAGPIPE	126	HELICOPTER
111	FIDDLE	127	APPLAUSE
112	SHANAI	128	GUNSHOT
PERCUSSION			
113	TINKLE BELL		
114	AGOGO		
115	STEEL DRM		
116	WOODBK		
117	TAIKO DRM		
118	MLDY TOM		
119	SYNTH DRM		

USER MANUAL

RHYTHM LIST:

Category	NO	RHYTHM
8 BEAT	001	8 Beat 1
	002	8 Beat 2
	003	8 Beat 3
	004	8 Beat 4
	005	8 Beat Heat
	006	8 Beat Pop 1
	007	8 Beat Pop 2
BALLAD	008	Ballad 1
	009	Ballad 2
	010	Guitar Ballad
	011	Organ Ballad
	012	Bluse Ballad
	013	Epic Ballad
	014	Rock Ballad
	015	Slow Ballad
	016	Pop Ballad
	017	Electro Pop Ballad
018	Polk Ballad	
16 BEAT	019	16 Beat 1
	020	16 Beat 2
	021	16 Beat 3
	022	16 Beat 4
	023	16 Beat Funk
	024	16 Beat Pop
LATIN	025	16 Beat Ballad
	026	Bossa Nova 1
	027	Guitar Bossa
	028	Pop Bossa
	029	Tango
	030	Cha Cha
COUNTRY	031	Rhumba
	032	TEX TEX
	033	Country

USER MANUAL

	034	Country Rock
	035	Country Shuffle
	036	Country Swing
	037	Country Ballad
	038	Country Waltz
ROCK R&B	039	50' s Rock
	040	Heavy Metal
	041	Rock 1
	042	Rock 2
	043	Soft Rock
	044	Slow Rock
	045	Hard Rock
	046	Rock & Roll 1
RHYTHM&BLUES	047	Rock & Roll 2
	048	Chicago Blues
	049	Fast Gospel
	050	Groove Soul
	051	Rap
	052	GospelSl
	053	Blues
	054	Slow Blues
	055	Foxtrot
Disco	056	Disco Tropic
	057	Disco Hands
	058	Two Step
	059	Polk Pop
	060	Waltz 1
	061	Waltz Pop 1
WORLD MUSIC	062	Waltz Pop 2
	063	Rai
	064	Twist 1
	065	Twist 2
	066	Miami Pop
	067	Motown

USER MANUAL

	068	Reggae
	069	Swing Reggae
	070	Mambo
	071	Beguine
	072	Musette
DANCE	073	House
	074	Slow Fox
	075	Vienna Waltz
	076	Salsa
	077	Disco
	078	Hip Hop Pop
	079	Analog Pop
	080	Club Dance
JAZZ&SWING	081	Boogie
	082	Funky Pop
	083	Jazz Rock
	084	Swing 1
	085	Dixieland
	086	Jazz Samba
TRADITIONAL	087	March
	088	US. March
	089	Samba
	090	Polka
	091	Polka Ober
	092	Tarantella
	093	Slow Waltz
	094	Ober Waltz
PINIST	095	Piano Ballad
	096	Waltz 2
	097	Guitar Waltz
	098	2/4 Piano 1
	099	3/4 Piano 1
	100	4/4 Piano 1

USER MANUAL

DEMO LIST:

NO	SongName
001	MinutWlz
002	DJ Dance
003	Fountian
004	SpanGirl
005	SonataPn
006	SuperSng
007	LittlBee
008	HorseRac
009	Nocturne
010	TheSpain
011	BusyTran
012	Mexico
013	MozartPn
014	Minuet
015	Nifuma
016	Disco
017	FolkSong
018	Girl Sea
019	LittStar
020	KindeGtn
021	Wahaha
022	Duck&Cik

















































NO	SongName
023	Humorous
024	Joy Song
025	GoingHom
026	Dove
027	Auldlang
028	Moonligh
029	HapyBirh
030	PraiseSng
031	Dolly
032	Market
033	Family
034	A cradle
035	At Home
036	Seasons
037	YearsAgo
038	Pigeons
039	InnerVic
040	Violin
041	Swan
042	Musettes
043	GypsyRnd
044	Serenade

USER MANUAL

NO	SongName	NO	SongName
045	Polka	067	PaperBoy
046	SoilPull	068	Swallow
047	Trout	069	New Year
048	Send-off	070	Edelweis
049	March	071	MoonRivr
050	ForElise	072	Beyer 10
051	SwaniRiv	073	Beyer 20
052	France	074	Beyer 30
053	Danube	075	Beyer 40
054	Hungary	076	Beyer 50
055	Spaceman	077	Beyer 60
056	Patriot	078	Beyer 70
057	Cuckoo	079	Beyer 71
058	SingKite	080	Beyer 72
059	TongChil	081	Beyer 75
060	DoReMi	082	Beyer 76
061	We Happy	083	Beyer 77
062	LittlBee	084	Beyer 78
063	Russia	085	Beyer 79
064	Plaster	086	Beyer 80
065	Foison	087	Beyer 90
066	JingleBe	088	Beyer 98

USER MANUAL

Single Finger Chord List

	M	m	7	m7
C				
C#				
D				
D#				
E				
F				
F#				
G				
G#				
A				
A#				
B				

Multi-finger Chord List

C	Cm	C7	Cm7	Cdim7	CM7	Cm7 ⁻⁵	Cdim
C [♯] /(D [♭])	C [♯] /(D [♭])m	C [♯] /(D [♭])7	C [♯] /(D [♭])m7	C [♯] /(D [♭])dim7	C [♯] /(D [♭])M7	C [♯] /(D [♭])m7 ⁻⁵	C [♯] /(D [♭])dim
D	Dm	D7	Dm7	Ddim7	DM7	Dm7 ⁻⁵	Ddim
(D [♯])/E [♭]	(D [♯])/E [♭] m	(D [♯])/E [♭] 7	(D [♯])/E [♭] m7		(D [♯])/E [♭] M7	(D [♯])/E [♭] m7 ⁻⁵	(D [♯])/E [♭] dim
E	Em	E7	Em7		EM7	Em7 ⁻⁵	Edim
F	Fm	F7	Fm7		FM7	Fm7 ⁻⁵	Fdim
F [♯] /(G [♭])	F [♯] /(G [♭])m	F [♯] /(G [♭])7	F [♯] /(G [♭])m7		F [♯] /(G [♭])M7	F [♯] /(G [♭])m7 ⁻⁵	F [♯] /(G [♭])dim
G	Gm	G7	Gm7		GM7	Gm7 ⁻⁵	Gdim
(G [♯])/A [♭]	(G [♯])/A [♭] m	(G [♯])/A [♭] 7	(G [♯])/A [♭] m7		(G [♯])/A [♭] M7	(G [♯])/A [♭] m7 ⁻⁵	(G [♯])/A [♭] dim
A	Am	A7	Am7		AM7	Am7 ⁻⁵	Adim
(A [♯])/B [♭]	(A [♯])/B [♭] m	(A [♯])/B [♭] 7	(A [♯])/B [♭] m7		(A [♯])/B [♭] M7	(A [♯])/B [♭] m7 ⁻⁵	(A [♯])/B [♭] dim
B	Bm	B7	Bm7		BM7	Bm7 ⁻⁵	Bdim

Caug	Csus4	C7sus4	Cm add9	CmM7	C7 ⁻⁵	Cadd9
C [♯] /(D [♭])aug	C [♯] /(D [♭])sus4	C [♯] /(D [♭])7sus4	C [♯] /(D [♭])m add9	C [♯] /(D [♭])mM7	C [♯] /(D [♭])7 ⁻⁵	C [♯] /(D [♭])add9
Daug	Dsus4	D7sus4	Dm add9	DmM7	D7 ⁻⁵	Dadd9
(D [♯])/E [♭] aug	(D [♯])/E [♭] sus4	(D [♯])/E [♭] 7sus4	(D [♯])/E [♭] m add9	(D [♯])/E [♭] mM7	(D [♯])/E [♭] 7 ⁻⁵	(D [♯])/E [♭] add9
Esus4	E7sus4	Em add9	EmM7	E7 ⁻⁵	Eadd9	
Fsus4	F7sus4	Fm add9	FmM7	F7 ⁻⁵	Fadd9	
F [♯] /(G [♭])sus4	F [♯] /(G [♭])7sus4	F [♯] /(G [♭])m add9	F [♯] /(G [♭])mM7	F [♯] /(G [♭])7 ⁻⁵	F [♯] /(G [♭])add9	
Gsus4	G7sus4	Gm add9	GmM7	G7 ⁻⁵	Gadd9	
(G [♯])/A [♭] sus4	(G [♯])/A [♭] 7sus4	(G [♯])/A [♭] m add9	(G [♯])/A [♭] mM7	(G [♯])/A [♭] 7 ⁻⁵	(G [♯])/A [♭] add9	
Asus4	A7sus4	Am add9	AmM7	A7 ⁻⁵	Aadd9	
(A [♯])/B [♭] sus4	(A [♯])/B [♭] 7sus4	(A [♯])/B [♭] m add9	(A [♯])/B [♭] mM7	(A [♯])/B [♭] 7 ⁻⁵	(A [♯])/B [♭] add9	
Bsus4	B7sus4	Bm add9	BmM7	B7 ⁻⁵	Badd9	

Product Maintenance

Careful and good maintenance and production of this product play a very important role in lengthen service life of the product and decrease fault.

Avoid heating, Damping or direct Sunlight

You shall not have the musical instrument exposed to sunlight in excess, or placed where is near air conditioner or baking hot

you should not use it near TV set or radios

This musical instrument may lead to video or audio disturbance on TV set and

Radio. In that case, you shall move the musical instrument away from TV set or radio

You should not use paint, thinner or similar chemicals to clean

You can clean this product a piece of soft cloth with weak solution and neutral detergent. The piece of cloth shall be dipped and wrung out in the solution until

it is dry approximately.

you should avoid quake and collision

The product shall be handled with care when removing with strict prohibition of strenuous quake and collision in order not to make outer shell or innerelectronic components damaged.

Avoid using where is easy to be affected by abnormal high and low temperatures

Too high or low temperature may make pictures on LCD screen turn to be gray and hard to be identified. When you have the product under normal temperature, the case will be corrected automatically.

Safety warning:

This product is an electronic and electrical product.

The long-term use of the circuit components may cause failures. It is recommended that the safe use period is 2 years.

After the safe use period, please regularly inspect the product. If you find any problems, please do not continue to use it. Cause a safety accident!

Warranty Card

1. Normal use of this product, if there is a failure due to quality problems, from the date of purchase (the payment voucher on the purchase date shall prevail), you can enjoy one-year free warranty service, and lifetime paid maintenance after the warranty period.

2. During the warranty period, if any damage is caused by improper use or storage, a material fee will be charged.

3. Free warranty will not be provided in the following cases:

- a: The payment voucher that proves the date of purchase cannot be presented
- b: The purchase date has been modified
- c: Damage caused by incorrect use by the user
- d: Failure caused by irresistible factors such as fire, flood, earthquake, lightning strike, etc.
- e: Failure caused by disassembly without permission