


Digital Piano

USER MANUAL

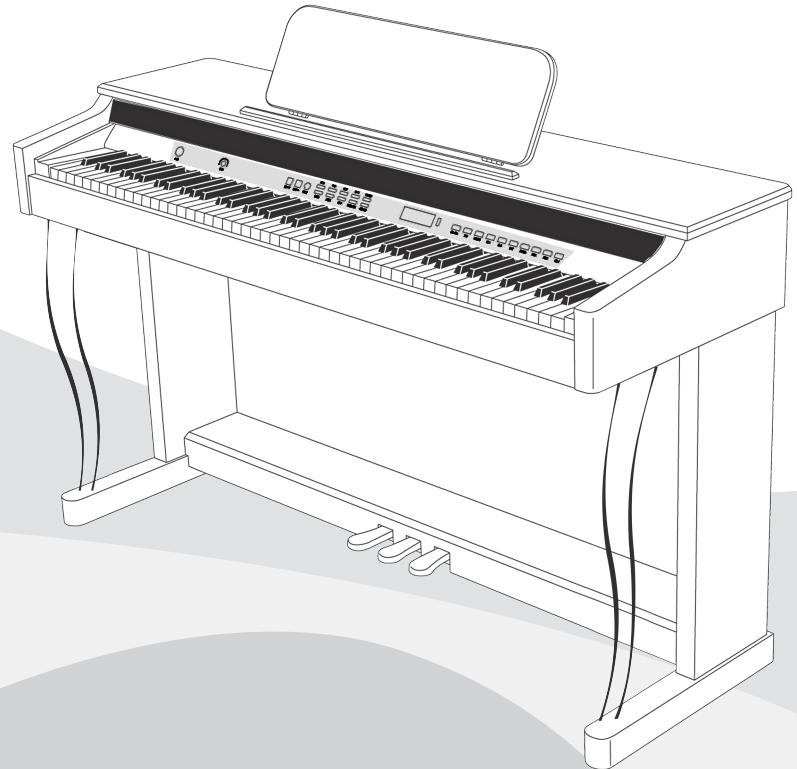

Welcome To Use Digital Piano

Thank you for your purchase of this digital keyboard. This digital keyboard is elegant and refined, combined perfectly with handle and timbre of traditional keyboard and latest electronic technology of the present age.

- ◆ Before using this musical instrument, you should read this manual book in detail.
- ◆ please keep all user files properly as to look up when needed in days to come

CONTENT

1. Function Introduction	2-3
2. Safety Caution	4-5
3. Installation Graphic Representation	5
4. FUNCTIONAL INDICATOR	6
5. Connection	7
6. JACK SOCKET	8
7. BASIC OPERATION	9-12
8. Tone List	13-16
9. Rhythm List	17-20
10. Demo List	21-22
11. Single Finger Chord List	23
12. Multi-Finger Chord List	24-25
13. Product Maintenance	26

Function Introduction

Appealing tone

It adopts Dream source , with digitization sampling, which provide vivid as acoustical experience for your performance

302 tones that are plentiful and top grade

which include 128 standard GM tones,

200 preset rhythms

There are 600 rhythms, including all sorts of accompaniments, ranging from rock-and-roll to pop music and jazz, which enable you to experience various feelings.

110 Demo songs

110 demos of various styles are selected with great care to be played.

USB / MIDI terminal

Use USB or MIDI terminal, and you can connect it to the computer or other MIDI devices for interaction and creation quickly and conveniently .

function list

- 88 Keys Keyboard
- 302 Tones
- 200 Rhythms
- 110Demos in the library
- Keyboard percussion
- LCD display
- Master volume / Chord volume control
- Tempo control / Transpose control
- chord function
- Accompaniment synchronization
- Keyboard split function
- Touch control / Transfer metronome
- USB/MIDI capability
- Headphone jack / Stereo audio input

Safety Caution

Warning

Smoke , peculiar smell, overheat

When this musical instrument smokes, gives off peculiar smell or is overheated, continuing in service may result in fire and electric shock. When the above cases occur, you shall carry out the following operations immediately.

- 1.turn power off .
- 2.please unplug plug of AC transformer from the outlet.
- 3.contact your dealer.

AC transformer

- The misapplication of AC transformer may result in fire and electric shock. You shall abide by the following caution notes.

1. You shall use special AC transformer appointed for this product.
2. You shall use AC power supply whose output voltage is within the range of voltage rating marked on the AC transformer.
3. You shall not make the outlet and power extension line overload

You shall never touch AC transformer with wet hand, otherwise it may result in electric shock.

- please use AC transformer where may not touch water. Water may result in fire and electric shock.
- You shall never place vase or any other containers with water on AC transformer .Water may result in fire and electric shock

USER MANUAL

USER MANUAL

Notice

AC transformer

- The misapplication of AC transformer may result in fire and electric shock. You shall abide by the following caution notes.

1. You shall never place power line near kiln or other heaters.
 2. When unplugged from the outlet, the power line shall never be pulled and dragged.


You shall grasp the body of AC transformer plug.

3. You shall insert the AC transformer into the outlet to the end.

Volume


You shall never play music with high volume for a long time. When using earphone, you shall take particular care. Too high volume may do harm to your hearing.

Installation Graphic Representation

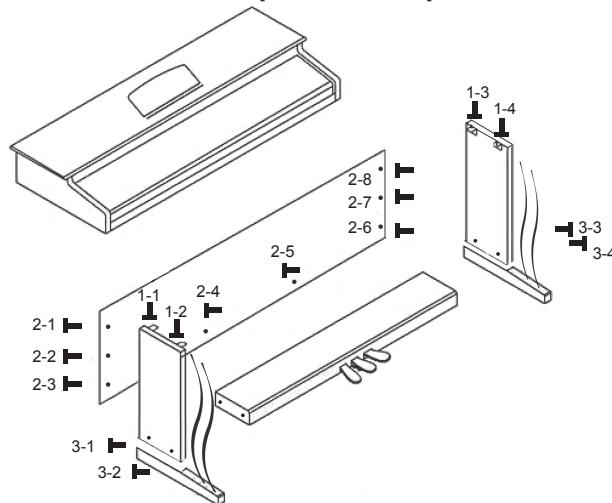

1. 1-1 to 1-4 plastic fix part screw M6X25 (4PCS)
 2. 2-1 to 2-8 screws M6X20 (8 PCS)
 3. 3-1 to 3-4 screws M6X60 (4 PCS)

FUNCTLANAL INDICATOR

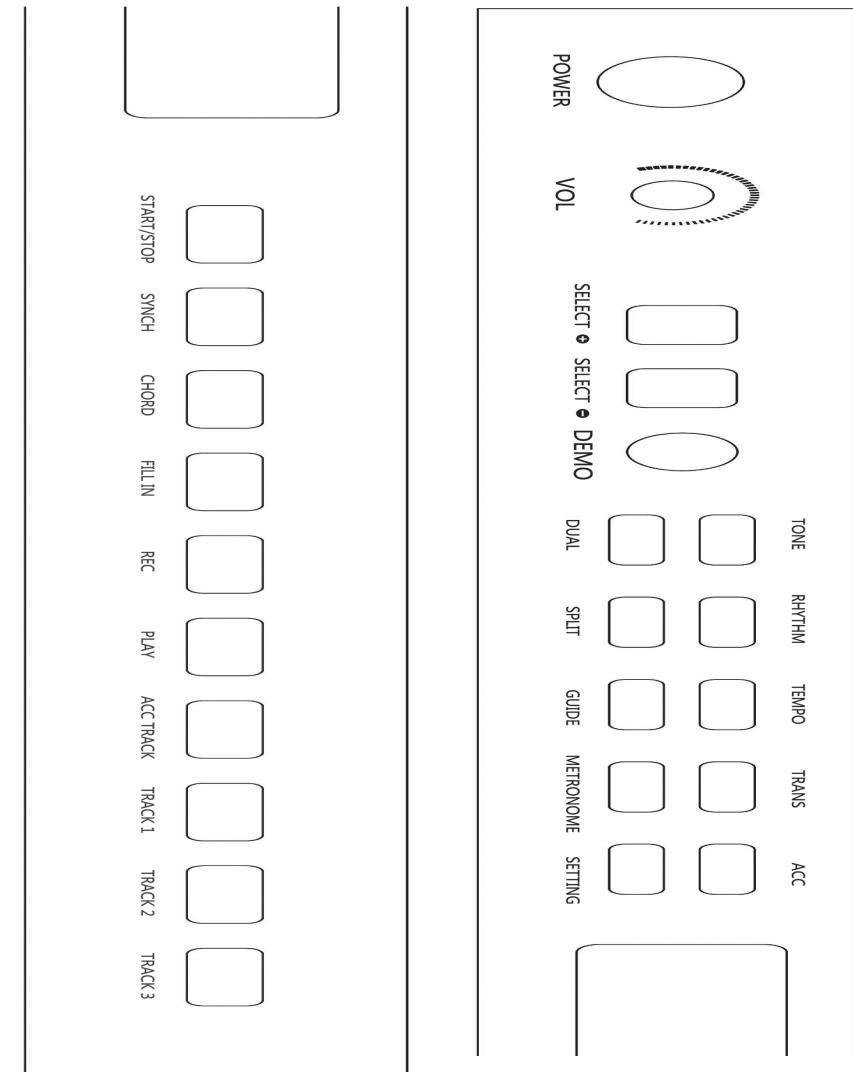

Connection

JACK SOCKET

Audio Input Interface

Before external audio signal is connected to this product, please turn down the volume of tone source at first. Adjust the volume to the satisfactory level after connection.

Connecting wire, which is sold into the open where both ends are standard plugs (for instance : for MP3)


or one end is standard plug while the other end is two needle shaped plug (for instance : for DCD), is used to connect tone source output unit and digital keyboard , and when you switch on power switches of tone source instrument and digital keyboard, you can play music on the tone source instrument of the digital keyboard, or you can also play music while play the musical instrument

USB / MIDI Interfaces

MIDI is initial letters of Musical Instrument Digital Interface in English. MIDI is the standard connecting system of communication between digital keyboard and music instrument with MIDI USB or MIDI interfaces of this digital keyboard can be used to connected with music instrument accompanied with MIDI and computer.

Earphone Output Terminal

This product has one earphone output faucet, and turn down volume of the digital keyboard at first before connecting earphone. Adjust the volume to the satisfactory level after connection

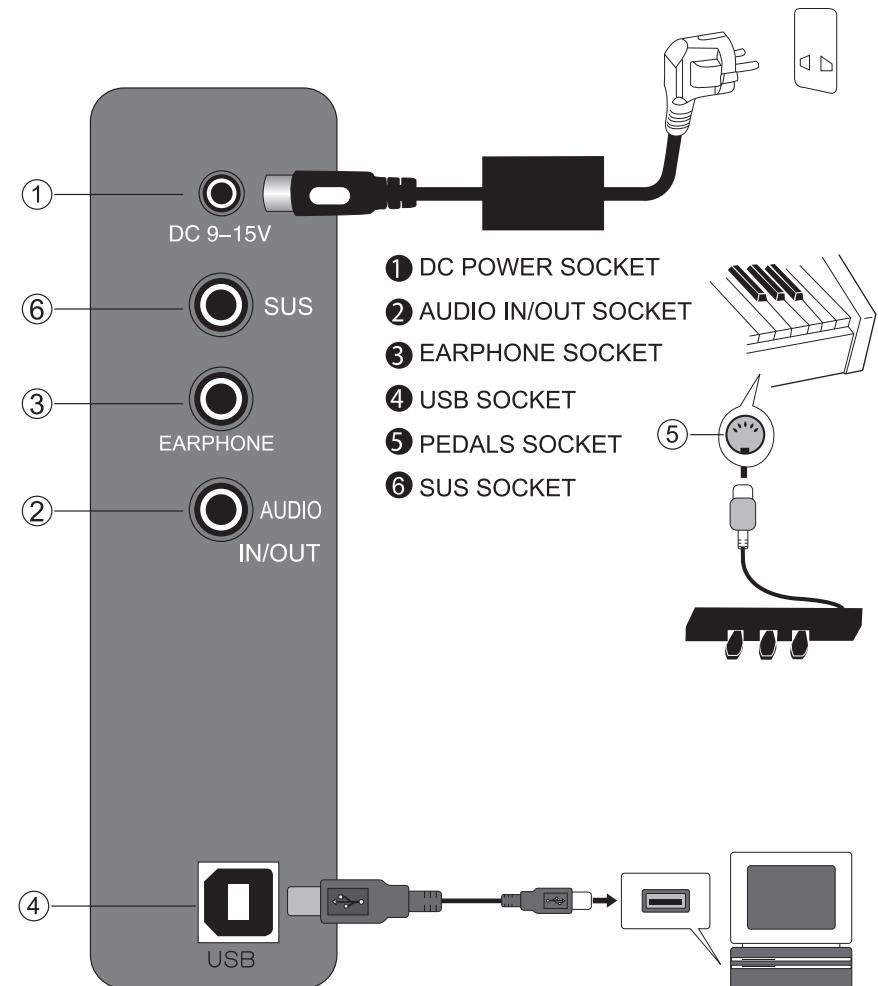

Piano performance

1. Press the power switch, The LCD screen lit up and then you can enter the playing state.
2. Play music on the piano keys.

Volume adjustment

Use the volume knob to increase or decrease the volume until you are satisfied.

Timbre selection

1. Press " TONE " button, enter timbre mode.
2. Press "select +" or "select -" to select any timbre, and the corresponding timbre number will be displayed LCD.
3. When the power switch is turned on, it is preset to the piano tone

Rhythm selection

1. Press the " Rhythm" button, enters the rhythm mode.
2. Press "Select+" or "Select-" to select any rhythm, digital display of the corresponding rhythm number.
3. Press the "Start/Stop" key to start playing the selected rhythm.
to stop the rhythm play press "Start/Stop".
4. In the rhythm playing process, press the "ACC " button, and then press "select +" or "select -" to adjust the rhythm volume.
5. Press "FILL IN" button to insert a door rhythm when playing rhythm.

Speed adjustment

1. Press the "Tempo"button,then press "Select+" or "Select-" to adjust the speed and speed.
2. Speed control range (20-280), power-up preset in paragraph 120.

Chord accompaniment

1. Select the desired rhythm to play.
- 2.Press the " chord" key to enter the chord state.
The response of this violin that conforms to the method of playing multi-finger chords is multi-finger chords, and the response of those that do not conform to the rule of playing multi-finger chords is identified by single-finger chords.
3. Playing chords can be played differently on the accompaniment keyboard (1-34 keys from left) according to different fingering.
- 4.Press the "chord" button again to turn off the chord function.

Synchronous start

Select the rhythm to use before beginning, set the speed value and select the chord accompaniment.

1. In the rhythmic state, press the "synch" button to enter the synchronous start state.
2. Play and key , and the accompaniment will start playing automatically.
3. To cancel the synchronization function, press the "start/stop" button.

Transposing control

- 1.Press the "TRANS" button, then press "select +" or "select -" to select the trans.
- 2.The trans control has 25 segments (-12 -- 12), and the 13th segment is preset when starting up.

Force control

1. Short press the "SETTING" button to select the power on or off, and the power is turned on by default.
2. Long press the "SETTING" key to enter the force adjustment function, press "select +" or "select -" to choose 1-2-3-4-5. Boot default level 3.

Metronome features

1. Short press "metronome" button for metronome function, long press "metronome" button for metronome selection function.
2. Press "select +" or "select -" to select 8 beats.

Built-in Demo Song

1. Press the "demo" button to display the current demo number and start playing the demo. Press this key again to stop.
2. After entering the demo mode, you can also select different demo songs by "select +" or "select -".

Recording

1. Press the recording key and the accompaniment track or track 1-3 at the same time to enter the recording mode. Press any key to start recording. The maximum number of recordings is 5000.
2. Press the accompaniment track or intertrack 1-3, and then press the "play" button to play the recorded notes.

SPLIT

1. Enter the timbre mode first and choose an instrument as the main timbre.
2. Press the "SPLIT" button to enter the timbre selection mode.
3. Use "SELECT +" or "SELECT -" to select another instrument as the split tone.

4. Play notes on the key disc. At this time, play notes on the left and right sides of the key disc and make corresponding musical instrument sounds.
5. Press the "SPLIT" button again to cancel the segmentation of the key disk and return to the normal keyboard state.

The dual tone

1. Enter the timbre mode first and choose an instrument as the main timbre.
2. Press the "DUAL" button to enter the second tone selection mode.
3. Use "SELECT +" or "SELECT -" to select another instrument as the second tone.
4. Play notes on the key disc, in which case two corresponding resonant sounds can be produced simultaneously.
5. Press the "DUAL" button again to return to the normal tone state.

Teaching functions

Press the "GUIDE" button to start teaching (the teaching track starts from track 18), press the "select +" or "select -" button to select the track to be taught, then start playing the keyboard, the song will be played, stop playing the keyboard, the song will pause. Press the "GUIDE" button again to stop teaching.

USER MANUAL

TONE LIST:

(Number)	Instrument
PIANO	
001	GRAND PIANO 1
002	BRIGHT PIANO 1
003	PIANO ELEC
004	HONKY-TONK
005	E PIANO1
006	E PIANO2
007	GRAND HARPSICHORD
008	CLAVI CHORD 1
GLOCK	
009	CELESTA
010	GLOCKENSPIEL 1
011	MUSIC BOX 1
012	VIBRAPHONE 1
013	MARIMBA 1
014	XYLOPHONE 1
015	TUBULR BELLS 1
016	DULCIMER 1
ORGAN	
017	HAND ORGAN 1
018	PERCHY ORGAN 1
019	ROCK ORGAN
020	CHURCH ORGAN 1
021	REED ORGAN 1
022	ACCORDN 1
023	HARMONICA 1
024	TANGO ACCORDN 1
GUITAR	
025	GUITAR NYLON 1
026	GUITAR STEEL 1
027	GUITAR JAZZ 1
028	GUITAR CLEAN 1

029	GUITAR MUTED 1
030	GUITAR OVRDRV
031	GUITAR DISTRT 1
032	GUITAR HRMNX
BASS	
033	ACOUSTIC BASS 1
034	FINGER BASS 1
035	ELECT BASS 1
036	FRETLS BASS
037	SLAP BASS 1
038	SLAP BASS 2
039	SYN BASS 1
040	SYN BASS 2
STRING	
041	VIOLIN 1
042	VIOLA 1
043	CELLO 1
044	CONTRABASS 1
045	STR TREM 1
046	STR PIZZ
047	HARP 1
048	TIMPANI 1
CONCERT	
049	STRINGS 1
050	STRINGS 2
051	STR SYN 1
052	STR SYN 2
053	CHOIR AAHS 1
054	VOICE OOHS 1
055	VOICE SYN
056	ORCH HIT 1
BRASS	
057	TRUMPT 1
058	TROMBONE 1
059	TUBA 1
060	MUTE TPT 1
061	FR HORN 1
062	BRASS SECT 1
063	BRASS SYN 1
064	BRASS SYN 2
PIPE	

065	SAX SOPRANO
066	SAX ALTO 1
067	SAX TENOR 1
068	SAX BTONE 1
069	OBOE 1
070	ENG HORN 1
071	BASSON 1
072	CLARINET 1
WOODPIPE	
073	PICCOLO 1
074	FLUTE 1
075	RECORDER 1
076	PAN FLUTE
077	BOTTLE BLOWN
078	SHAKHACHI
079	WHISTLE 1
080	OCARINA
SYNTH PIPE	
081	SQR WAVE
082	SAW TOOTH
083	CALLIOPE
084	CHIFF
085	CHARANG
086	VOICE
087	FIFTHS
088	BASS LEAD
SYNTH VOICE	
089	NEW AGE
090	WARM PAD
091	POLY SYNTH
092	CHOIR PAD 1
093	BOW GLASS 1
094	METAL PAD 1
095	HALO PAD 1
096	SWEEP
SYNTH EFFECT	
097	RAIN FX
098	SNDTRK FX
099	CRYSTAL FX
100	ATMOSPH FX
FOLK SOUND	
101	BRIGHT FX
102	GOBLIN FX
103	ECHO FX
104	SCI-FI FX
PERCUSSION	
105	SITAR 1
106	BANJO 1
107	SHAMISEN 1
108	KOTO 1
109	KALIMBA
110	BAGPIPE
111	FIDDLE
112	SHANAI
EFFECT	
121	GTR NOISE
122	BREATH 1
123	SEASHORE
124	BIRD TWEET 1
125	TELEPHONE
126	HELICOPTER
127	APPLAUSE
128	GUNSHOT 1
OTHER TONE	
129	GRAND PIANO2
130	GRAND PIANO3
131	GRAND PIANO4
132	GRAND PIANO /W 1
133	GRAND PIANO /W 2
134	GRAND PIANO /W 3
135	BRIGHTNESS PIANO 1
136	BRIGHTNESS PIANO 2
137	BRIGHTNESS PIANO 3

USER MANUAL

USER MANUAL

138	GRAND PIANO DARK 1
139	GRAND PIANO DARK 2
140	VELOCITY CROSS PIANO 1
141	VELOCITY CROSS PIANO 2
142	SOFT GRAND PIANO 1
143	SOFT GRAND PIANO 2
144	SOFT GRAND PIANO 3
145	STEREO BRIGHT PIANO
146	BRIGHT PIANO 2
147	BRIGHT PIANO 3
148	BRIGHT PIANO 4
149	BRIGHT PIANO 5
150	BRIGHT PIANO /W 1
151	BRIGHT PIANO /W 2
152	SOFT BRIGHT PIANO 1
153	SOFT BRIGHT PIANO 2
154	DEEP BRIGHT PIANO
155	VELOCITY CROSS BRIGHT PIANO
156	DETUNED E.PIANO 1
157	DETUNED E.PIANO 2
158	DETUNED E.PIANO 3
159	BRIGHT E.PIANO 1
160	BRIGHT E.PIANO 2
161	BRIGHT E.PIANO 3
162	BRIGHT E.PIANO 4
163	E.PIANO /W 1
164	E.PIANO /W 2
165	E.PIANO /W 3
166	E.PIANO /W 4
167	DARK E.PIANO 1
168	DARK E.PIANO 2
169	DARK E.PIANO 3
170	DARK E.PIANO 4
171	SOFT HONKY-TONK 1
172	SOFT HONKY-TONK 2
173	VELOCITY CROSS HONKY-TONK
174	DARK HONKY-TONK 1
175	DARK HONKY-TONK 2
176	HONKY-TONK /W 1
177	HONKY-TONK /W 2

178	HONKY-TONK /W 3
179	HONKY-TONK /W 4
180	SHORT HONKY-TONK 1
181	SHORT HONKY-TONK 2
182	E.PIANO 1/W
183	E.PIANO 2/W
184	E.PIANO 3/W
185	E.PIANO 4/W
186	E.PIANO 5/W
187	E.PIANO 6/W
188	SOFT E.PIANO 1
189	SOFT E.PIANO 2
190	SOFT E.PIANO 3
191	SOFT E.PIANO 4
192	HARD E.PIANO 1
193	HARD E.PIANO 2
194	SHORT E.PIANO 1
195	SHORT E.PIANO 2
196	BRIGHTNESS E.P 1
197	BRIGHTNESS E.P 2
198	HARPSICHORD 1
199	HARPSICHORD 2
200	SOFT HARPSICHORD 1
201	SOFT HARPSICHORD 2
202	BRIGHT HARPSICHORD 1
203	BRIGHT HARPSICHORD 2
204	DARK HARPSICHORD 1
205	DARK HARPSICHORD 2
206	HARD HARPSICHORD 1
207	HARD HARPSICHORD 2
208	CLAVI CHORD 2
209	CLAVI CHORD 3
210	CLAVI /W
211	BRIGHT CLAVI
212	DARK CLAVI
213	PERCHY CLAVI
214	BRIGHT CELESTA
215	SHORT CELESTA
216	PERCHY CELESTA
217	DUET CELESTA

218	CELESTA HARMONIC
219	GLOCKENSPIEL 2
220	GLOCKENSPIEL 3
221	GLOCKENSPIEL 4
222	BRIGHT GLOCKENSPIEL
223	DARK GLOCKENSPIEL
224	GLOCKENSPIEL /W 1
225	GLOCKENSPIEL /W 2
226	MUSIC BOX 2
227	MUSIC BOX 3
228	MUSIC BOX 4
229	TOY MUSIC BOX
230	BRIGHT MUSIC BOX
231	DARK MUSIC BOX
232	VIBRAPHONE 2
233	VIBRAPHONE 3
234	SYN VIBRAPHONE
235	HARD VIBRAPHONE
236	VIBRAPHONE /W 1
237	VIBRAPHONE /W 2
238	VIBRAPHONE SOFT
239	MARIMBA 2
240	MARIMBA /W
241	DARK MARIMBA
242	BRIGHT MARIMBA
243	DUTED MARIMBA
244	DARK MARIMBA
245	XYLOPHONE 2
246	XYLOPHONE 3
247	VELOCITY CROSS XYLOPHONE
248	DISTR XYLOPHONE
249	BRIGHT XYLOPHONE
250	FAST XYLOPHONE
251	SLOW XYLOPHONE
252	TUBULR BELLS 2
253	TUBULR BELLS 3
254	TUBULR BELLS 4
255	SYN TUBULR BELLS
256	TUBULR BELLS DARK
257	DULCIMER 2
258	DULCIMER 3

259	SANTUR
260	HAND ORGAN 2
261	HAND ORGAN 3
262	SOFT HAND ORGAN
263	BRIGHT SOFT HAMND ORGAN
264	HAMND ORGAN DETUNED
265	PERCHY ORGAN 2
266	PERCHY ORGAN 3
267	BRIGHT PERCHY ORGAN
268	DISTR PERCHY ORGAN
269	ROTART ORGAN
270	SLOW ROTART ORGAN
271	1960 ROCK ORGAN
272	1980 ROCK ORGAN
273	BRIGHT ROCK ORGAN
274	DARK ROCK ORGAN
275	SOFT ROCK ORGAN
276	CHURCH ORGAN 2
277	CHURCH ORGAN 3
278	CHURCH ORGAN 4
279	CHURCH ORGAN 5
280	CHURCH ORGAN 6
281	CHURCH ORGAN /W 1
282	CHURCH ORGAN /W 2
283	BIRGHT CHURCH ORGAN 1
284	BIRGHT CHURCH ORGAN 2
285	DARK CHURCH ORGAN 1
286	DARK CHURCH ORGAN 2
287	SOUL CHURCH ORGAN
288	CHURCH ORGAN HARMONIC
289	CHURCH ORGAN SLOW
290	CHURCH ORGAN FAST
291	SOFT CHURCH ORGAN
292	REED ORGAN 2
293	REED ORGAN 3
294	REED ORGAN 4
295	REED ORGAN 5
296	BRIGHT REED ORGAN
297	DARK REED ORGAN
298	REED ORGAN /W
299	FAST REED ORGAN
300	SLOW REED ORGAN
301	SOFT REED ORGAN
302	HARD REED ORGAN

USER MANUAL

RHYTHM LIST:

8 BEAT	001	8 Beat 1A
	002	8 Beat 2A
	003	8 Beat 3A
	004	8 Beat 4A
	005	8 Beat HeatA
	006	8 Beat Pop 1A
	007	8 Beat Pop 2A
BALLAD	008	Ballad 1A
	009	Ballad 2A
	010	Guitar BalladA
	011	Organ BalladA
	012	Bluse BalladA
	013	Epic BalladA
	014	Rock BalladA
	015	Slow BalladA
	016	Pop Ballad
	017	Electro Pop_BalladA
	018	Polk BalladA
16 BEAT	019	16 Beat 1A
	020	16 Beat 2A
	021	16 Beat 3A
	022	16 Beat 4A
	023	16 Beat FunkA
	024	16 Beat Pop A
	025	16 Beat BalladA
LATIN	026	Bossa Nova 1A
	027	Guitar BossaA
	028	Pop BossaA
	029	TangoA
	030	Cha ChaA
	031	RhumbaA
	032	TEX TEXA
COUNTRY	033	CountryA
	034	Country RockA
	035	Country ShuffleA
	036	Country SwingA
	037	Country BalladA
	038	Country WaltzA
ROCK R&B	039	50's RockA
	040	Heavy MetalA
	041	Rock 1A
	042	Rock 2A
	043	Soft RockA
	044	Slow RockA
	045	Hard RockA
	046	Rock & Roll 1A
	047	Rock & Roll 2A
RHYTHM&BLUES	048	Chicago BluesA
	049	Fast GospelA
	050	Groove SoulA
	051	RapA
	052	GospelS1A
	053	BluesA
	054	Slow BluesA
	055	FoxtrotA

USER MANUAL

Disco	056	Disco TropicA
	057	Disco HandsA
	058	Two StepA
	059	Polk PopA
	060	Waltz 1A
	061	Waltz Pop 1A
	062	Waltz Pop 2A
WORLD MUSIC	063	RaiA
	064	Twist 1A
	065	Twist 2A
	066	Miami PopA
	067	MotownA
	068	ReggaeA
	069	Swing ReggaeA
	070	MamboA
	071	BeguineA
	072	MusetteA
DANCE	073	HouseA
	074	Slow FoxA
	075	Vienna WaltzA
	076	SalsaA
	077	DiscoA
	078	Hip Hop PopA
	079	Analog PopA
	080	Club DanceA
JAZZ&SWING	081	BoogieA
	082	Funky PopA
	083	Jazz RockA
	084	Swing 1A
	085	DixielandA
	086	Jazz SambaA
TRADITIONAL	087	MarchA
	088	US. MarchA
	089	Samba A
	090	PolkaA
	091	Polka OberA
	092	TarantellaA
	093	Slow WaltzA
	094	Ober WaltzA
PINIST	095	Piano BalladA
	096	Waltz 2A
	097	Guitar WaltzA
	098	2/4 Piano 1A
	099	3/4 Piano 1A
	100	4/4 Piano 1A

USER MANUAL

8 BEAT	101	8 Beat 1B
	102	8 Beat 2B
	103	8 Beat 3B
	104	8 Beat 4B
	105	8 Beat HeatB
	106	8 Beat Pop 1B
	107	8 Beat Pop 2B
BALLAD	108	Ballad 1B
	109	Ballad 2B
	110	Guitar BalladB
	111	Organ BalladB
	112	Bluse BalladB
	113	Epic BalladB
	114	Rock BalladB
	115	Slow BalladB
	116	Pop BalladB
	117	Electro Pop BalladB
	118	Polk BalladB
16 BEAT	119	16 Beat 1B
	120	16 Beat 2B
	121	16 Beat 3B
	122	16 Beat 4B
	123	16 Beat FunkB
	124	16 Beat Pop B
	125	16 Beat BalladB
LATIN	126	Bossa Nova 1B
	127	Guitar BossaB
	128	Pop BossaB
	129	TangoB
	130	Cha ChaB
	131	Rhumbab
	132	TEX TEXB
COUNTRY	133	CountryB
	134	Country RockB
	135	Country ShuffleB
	136	Country SwingB
	137	Country BalladB
	138	Country WaltzB
ROCK R&B	139	50's RockB
	140	Heavy MetalB
	141	Rock 1B
	142	Rock 2B
	143	Soft RockB
	144	Slow RockB
	145	Hard RockB
	146	Rock & Roll 1B
	147	Rock & Roll 2B

USER MANUAL

RHYTHM&BLUES	148	Chicago BluesB
	149	Fast GospelB
	150	Groove SoulB
	151	RapB
	152	GospelS1B
	153	BluesB
	154	Slow BluesB
	155	FoxtrotB
Disco	156	Disco TropicB
	157	Disco HandsB
	158	Two StepB
	159	Polk PopB
	160	Waltz 1B
	161	Waltz Pop 1B
	162	Waltz Pop 2B
WORLD MUSIC	163	RaiB
	164	Twist 1B
	165	Twist 2B
	166	Miami PopB
	167	MotownB
	168	ReggaeB
	169	Swing ReggaeB
	170	MamboB
	171	BeguineB
	172	MusetteB
DANCE	173	HouseB
	174	Slow FoxB
	175	Vienna WaltzB
	176	SalsaB
	177	DiscoB
	178	Hip Hop PopB
	179	Analog PopB
	180	Club DanceB
JAZZ&SWING	181	BoogieB
	182	Funky PopB
	183	Jazz RockB
	184	Swing 1B
	185	DixielandB
	186	Jazz SambaB
TRADITIONAL	187	MarchB
	188	US. MarchB
	189	SambaB
	190	PolkaB
	191	Polka OberB
	192	TarantellaB
	193	Slow WaltzB
	194	Ober WaltzB
PINIST	195	Piano BalladB
	196	Waltz 2B
	197	Guitar WaltzB
	198	2/4 Piano 1B
	199	3/4 Piano 1B
	200	4/4 Piano 1B

USER MANUAL

DEMO LIST:

NO	SongName	035	At Home
001	MinutWlz	036	Seasons
002	DJ Dance	037	YearsAgo
003	Fountain	038	Pigeons
004	SpanGirl	039	InnerVic
005	SonataPn	040	Violin
006	SuperSng	041	Swan
007	Litt1Bee	042	Musettes
008	HorseRac	043	GypsyRnd
009	Nocturne	044	Serenade
010	TheSpain	045	Polka
011	BusyTran	046	SoilPull
012	Mexico	047	Trout
013	MozartPn	048	Send-off
014	Minuet	049	March
015	Nifuma	050	ForElise
016	Disco	051	SwaniRiv
017	FolkSong	052	France
018	Girl Sea	053	Danube
019	LittStar	054	Hungary
020	KindeGtn	055	Spaceman
021	Wahaha	056	Patriot
022	Duck&Cik	057	Cuckoo
023	Humorous	058	SingKite
024	Joy Song	059	TongChil
025	GoingHom	060	DoReMi
026	Dove	061	We Happy
027	Auldlang	062	Litt1Bee
028	Moonligh	063	Russia
029	HapyBirh	064	Plaster
030	PraiseSng	065	Foison
031	Dolly	066	JingleBe
032	Market	067	PaperBoy
033	Family	068	Swallow
034	A cradle	069	New Year

USER MANUAL

070	Edelweis	092	Beyer 28
071	MoonRivr	093	Beyer 29
072	Beyer 10	094	Beyer 31
073	Beyer 20	095	Beyer 106
074	Beyer 30	096	Beyer 48
075	Beyer 40	097	Beyer 52
076	Beyer 50	098	Beyer 107
077	Beyer 60	099	Beyer 18
078	Beyer 70	100	Beyer 21
079	Beyer 71	101	Beyer 23
080	Beyer 72	102	Beyer 25
081	Beyer 75	103	Beyer 36
082	Beyer 76	104	Beyer 84
083	Beyer 77	105	Beyer 88
084	Beyer 78	106	Beyer 32
085	Beyer 79	107	Beyer 35
086	Beyer 80	108	Beyer 11
087	Beyer 90	109	Beyer 16
088	Beyer 98	110	Beyer 18
089	Beyer 99		
090	Beyer 26		
091	Beyer 27		

USER MANUAL


Single Finger Chord List

	M	m	7	m7
C				
C#				
D				
D#				
E				
F				
F#				
G				
G#				
A				
A#				
B				

USER MANUAL

Multi-finger Chord List

C	Cm	C7	Cm7	Cdim7	CM7	Cm7-5	Cdim
C#/(D♭)	C#/(D♭) m	C#/(D♭)7	C#/(D♭)m7	C#/(D♭)dim7	C#/(D♭)M7	C#/(D♭)m7-5	C#/(D♭)dim
D	Dm	D7	Dm7	Ddim7	DM7	Dm7-5	Ddim
(D#)/E♭	(D#)/E♭m	(D#)/E♭7	(D#)/E♭m7	(D#)/E♭M7	(D#)/E♭m7-5	(D#)/E♭dim	
E	Em	E7	Em7		EM7	Em7-5	Edim
F	Fm	F7	Fm7		FM7	Fm7-5	Fdim
F#/(G♭)	F#/(G♭)m	F#/(G♭)7	F#/(G♭)m7		F#/(G♭)M7	F#/(G♭)m7-5	F#/(G♭)dim
G	Gm	G7	Gm7		GM7	Gm7-5	Gdim
(G#)/A♭	(G#)/A♭m	(G#)/A♭7	(G#)/A♭m7		(G#)/A♭M7	(G#)/A♭m7-5	(G#)/A♭dim
A	Am	A7	Am7		AM7	Am7-5	Adim
(A#)/B♭	(A#)/B♭m	(A#)/B♭7	(A#)/B♭m7		(A#)/B♭M7	(A#)/B♭m7-5	(A#)/B♭dim
B	Bm	B7	Bm7		BM7	Bm7-5	Bdim

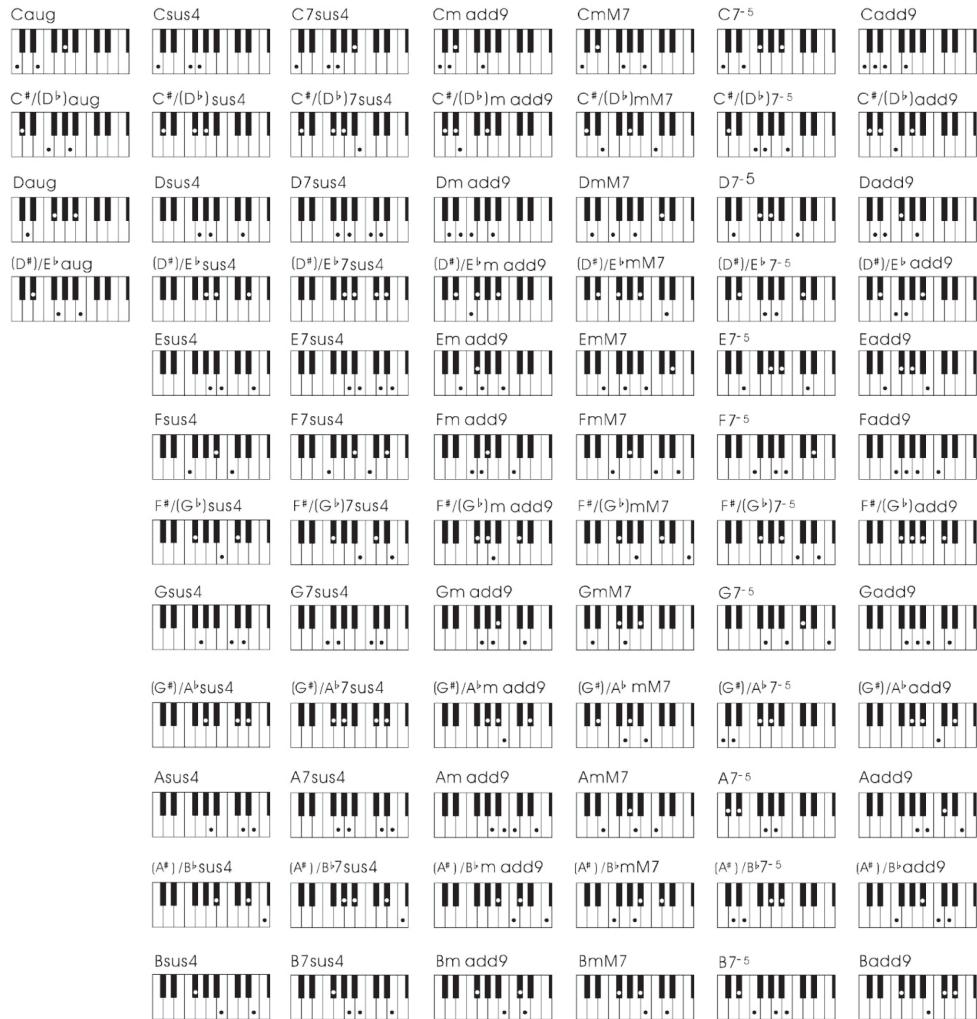

Product Maintenance

Careful and good maintenance and production of this product play a very important role in lengthen service life of the product and decrease fault.

Avoid heating, Damping or direct Sunlight

You shall not have the musical instrument exposed to sunlight in excess, or placed where is near air conditioner or baking hot

you should not use it near TV set or radios

This musical instrument may lead to video or audio disturbance on TV set and Radio. In that case, you shall move the musical instrument away from TV set or radio

You should not use paint, thinner or similar chemicals to clean

You can clean this product a piece of soft cloth with weak solution and neutral detergent. The piece of cloth shall be dipped and wrung out in the solution until it is dry approximately.

you should avoid quake and collision

The product shall be handled with care when removing with strict prohibition of strenuous quake and collision in order not to make outer shell or innerelectronic components damaged.

Avoid using where is easy to be affected by abnormal high and low temperatures

Too high or low temperature may make pictures on LCD screen turn to be gray and hard to be identified. When you have the product under normal temperature, the case will be corrected automatically.

Safety warning:

This product is an electronic and electrical product.

The long-term use of the circuit components may cause failures. It is recommended that the safe use period is 2 years.

After the safe use period, please regularly inspect the product. If you find any problems, please do not continue to use it. Cause a safety accident!

USER MANUAL

Warranty Card

1. Normal use of this product, if there is a failure due to quality problems, from the date of purchase (the payment voucher on the purchase date shall prevail), you can enjoy one-year free warranty service, and lifetime paid maintenance after the warranty period.
2. During the warranty period, if any damage is caused by improper use or storage, a material fee will be charged.
3. Free warranty will not be provided in the following cases:
 - a: The payment voucher that proves the date of purchase cannot be presented
 - b: The purchase date has been modified
 - c: Damage caused by incorrect use by the user
 - d: Failure caused by irresistible factors such as fire, flood, earthquake, lightning strike, etc.
 - e: Failure caused by disassembly without permission