
Digital Piano

USER MANUAL

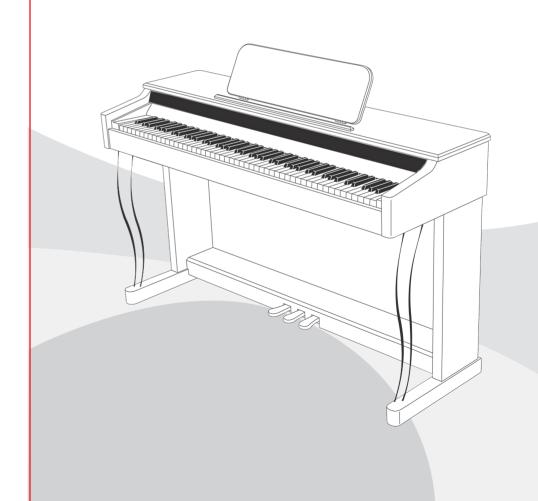

USER MANUAL

— Welcome To Use Digital Piano ——

Thank you for your purchase of this digital keyboard. This digital keyboard is elegant and refined, combined perfectly with handle and timbre of traditional keyboard and latest electronic technology of the present age.

- ◆ Before using this musical instrument, you should read this manual book in detail.
- ♦ please keep all user files properly as to look up when needed in days to come

CONTTENT

1.	Function Introduction	2-3
2.	Safety Caution	4-5
3.	Installation Graphic Representation	5
4.	FUNCTIONAL INDICATOR	6
5.	Connection	7
6.	JACK SOCKET	8
7.	BASIC OPERATION	9-11
8.	Tone List	12-23
9.	Rhythm List ·····	23-30
10.	Demo List ······	
11.	Single Finger Chord List	33
	Multi-Finger Chord List	
13.	Product Maintenance	36-37

Function Introduction

Appealing tone

It adopts Dream source , with digitization sampling, which provide vivid as acoustical experience for your performance

900 tones that are plentiful and top grade

which include 128 standard GM tones,

700 preset rhythms

There are 700 rhythms, including all sorts of accompaniments, ranging from rock-and-roll to pop music and jazz, which enable you to experience various feelings.

110 Demo songs

110 demos of various styles are selected with great care to be played.

USB / MIDI terminal

Use USB or MIDI terminal, and you can connect it to the computer or other MIDI devices for interaction and creation quickly and conveniently .

function list

- 88 Keys Keyboard
- 900Tones
- 700Rhythms
- 110 Demos in the library
- Keyboard percussion
- LED display
- Master volume / Chord volume control
- Tempo control / Transpose control
- chord function
- Accompaniment synchronization
- Keyboard split function
- Touch control / Transfer metronome
- USB/MIDI capability
- Headphone jack / Stereo audio input

Safety Caution

Warning

Smoke, peculiar smell, overheat

When this musical instrument smokes, gives off peculiar smell or is overheat, continuing in service may result in fire and electric shock. When the above cases occur, you shall carry out the following operations immediately.

- 1.turn power off.
- 2.please unplug plug of AC transformer from the outlet.
- 3.contact your dealer.

AC transformer

- The misapplication of AC transformer may result in fire and electric shock. You shall abide by the following caution notes.
- 1. You shall use special AC transformer appointed for this product.
- 2. You shall use AC power supply whose output voltage is within the range of voltage rating marked on the AC transformer.
- 3. You shall not make the outlet and power extension line overload

You shall never touch AC transformer with wet hand, otherwise it may result in electric shock.

- please use AC transformer where may not touch water. Water may result in fire and electric shock.
- You shall never place vase or any other containers with water on AC transformer .Water may result in fire and electric shock

USER MANUAL

Notice

AC transformer

- The misapplication of AC transformer may result in fire and electric shock. You shall abide by the following caution notes.
- 1. You shall never place power line near kiln or other heaters.
- 2. When unplugged from the outlet, the power line shall never be pulled and dragged.


You shall grasp the body of AC transformer plug.

3. You shall insert the AC transformer into the outlet to the end.

Volume


You shall never play music with high volume for a long time. When using earphone, you shall take particular care. Too high volume may do harm to your hearing.

Installation Graphic Representation

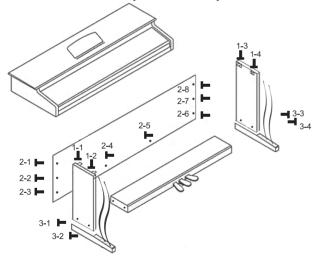

- 1. 1-1 to 1-4 plastic fix part screw M6X25(4PCS)
- 2. 2-1 to 2-8 screws M6X20 (8 PCS)
- 3. 3-1 to 3-4 screws M6X60 (4 PCS)

FUNCTIONAL INDICATOR

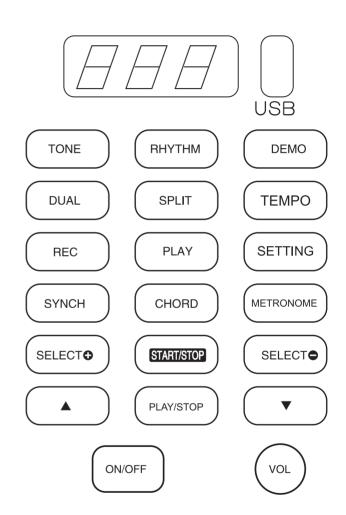

USER MANUAL

Connection

Audio Input Interface

Before external audio signal is connected to this product, please turn down the volume of tone source at first. Adjust the volume to the satisfactory level after connection.

Connecting wire, which is sold into the open where both ends are standard plugs (for instance : for MP3)


or one end is standard plug while the other end is two needle shaped plug $\,$ (for instance : for DCD $\,$) , is used to connect tone source output unit and digital keyboard $\,$, and when you switch on power switches of tone source instrument and digital keyboard, you can play music on the tone source instrument of the digital keyboard, or you can also play music while play the musical instrument

USB / MIDI Interfaces


MIDI is initial letters of Musical Instrument Digital Interface in English. MIDI is the standard connecting system of communication between digital keyboard and music instrument with MIDI USB or MIDI interfaces of this digital keyboard can be used to connected with music instrument accompanied with MIDI and computer.

Earphone Output Terminal

This product has two earphone output faucets, and turn down volume of the digital keyboard at first before connecting earphone. Adjust the volume to the satisfactory level after connection

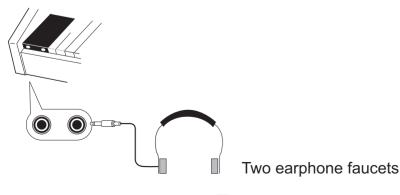

JACK SOCKET

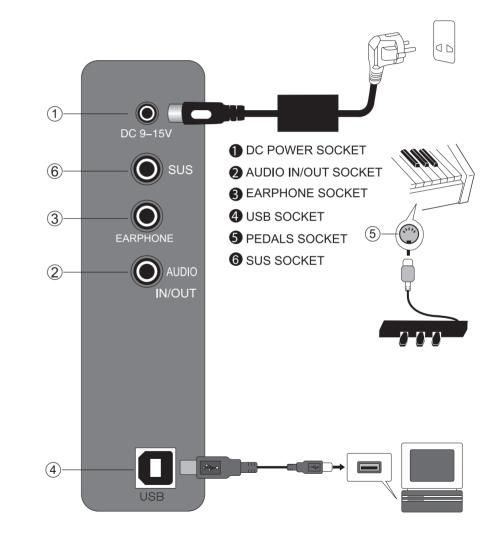

USER MANUAL

Basic Operation

Piano performance

- 1. Press the power switch, Digital display"001" and then you can enter the playing state.
- 2. Play music on the piano keys.

Volume adjustment

Use the volume knob to increase or decrease the volume until you are satisfied.

Timbre selection

- 1. Press " Tone " button, enter timbre mode.
- 2. Press "select +" or "select -" to select any timbre, and the corresponding timbre number will be displayed digitally.
- 3. When the power switch is turned on, it is preset to the piano tone

Rhythm selection

- 1. Press the "Rhythm" button, enters the rhythm mode.
- 2. Press "Select+" or "Select-" to select any rhythm, digital display of the corresponding rhythm number.
- 3. Press the "Start/Stop" key to start playing the selected rhythm. to stop the rhythm play press "Start/Stop".

Speed adjustment

- 1. Press the "TEMPO" button and press "Select+" or "Select-" to adjust the speed and speed.
- 2. Speed control range (20-280), power-up preset in paragraph 120.

Chord accompaniment

- 1. Select the desired rhythm to play.
- 2. Press the "chord" buttons at the same time to enter the chord state.
- 3. Playing chords can be played differently on the accompaniment keyboard (1-34 keys from left) according to different fingering.
- 4. Press the " chord " buttons again to turn off the chord function.

Synchronous start

Select the rhythm to use before beginning, set the speed value and select the chord accompaniment.

- 1. In the rhythmic state, press the "synch" button to enter the synchronous start state.
- 2. Play chords (1-34 keys from the left of the keyboard), and the accompaniment will start playing automatically.
- 3. To cancel the synchronization function, press the "start/stop" button.

Setting/strength function

- 1. Press the "SETTING" button for the first time, and then press "select +" or "select -" to turn the force on or off.
- 2. Press the "SETTING" button for the second time, and then press "select +" or " select -" to select different rhythm volume (0-32).
- 3. Press the "SETTING" button for the third time, and then press "select +" or " select -" to select different shifts (-12—12).

Metronome features

Press the metronome button, the light lights up, the metronome function starts, and then press the key metronome function off.

Built-in Demo Song

- 1. Press the "demo" button to display the current demo number and start playing the demo. Press this key again to stop.
- 2. After entering the demo mode, you can also select different demo songs by "select +" or "select -".

Recording

1. Key disc note recording

Press the " REC " buttons simultaneously to digitally display

"REC" into recording mode, recording 5000 notes.

2. Press the "play" buttom digitally display "'PLY" to play the recorded notes.

SPLIT

- 1. Enter the timbre mode first and choose an instrument as the main timbre.
- 2. Press the "SPLIT" button to enter the timbre selection mode.
- 3. Use "SELECT +" or "SELECT -" to select another instrument as the split tone.
- 4. Play notes on the key disc. At this time, play notes on the left and right sides of the key disc and make corresponding musical instrument sounds.
- 5. Press the "SPLIT" button again to cancel the segmentation of the key disk and return to the normal keyboard state.

The dual tone

- 1. Enter the timbre mode first and choose an instrument as the main timbre.
- 2. Press the "DUAL" button to enter the second tone selection mode.
- 3. Use "SELECT +" or "SELECT -" to select another instrument as the second tone.
- 4. Play notes on the key disc, in which case two corresponding resonant sounds can be produced simultaneously.
- 5. Press the "DUAL" button again to return to the normal tone state.

MP3 Play

- 1. Plug the flash drive with MP3-format songs into the "USB" socket.
- 2. Press the "Play/Stop" button to play or stop MP3 songs.
- 3. During playback, you can press "Previous" or "Next Song" to select different MP3 songs.

USER MANUAL

TONE LIST:

Number	Instrument	
PIANO		
001	GRAND PIANO 1	
002	BRIGHT PIANO 1	
003	PIANO ELEC	
004	HONKY-TONK	
005	E PIANO1	
006	E PIANO2	
007	GRAND HARPSICHORD	
008	CLAVI CHORD 1	
GLOCK		
009	CELESTA	
010	GLOCKENSPIEL 1	
011	MUSIC BOX 1	
012	VIBRAPHONE 1	
013	MARIMBA 1	
014	XYLOPHONE 1	
015	TUBULR BELLS 1	
016	DULCIMER 1	
ORGAN		\dashv
017	HAND ORGAN 1	
018	PERCHY ORGAN 1	
019	ROCK ORGAN	
020	CHURCH ORGAN 1	
021	REED ORGAN 1	
022	ACCORDN 1	
023	HARMONICA 1	$\exists \mid$
024	TANGO ACCORDN 1	
GUITAR		
025	GUITAR NYLON 1	
026	GUITAR STEEL 1	
027	GUITAR JAZZ 1	
028	GUITAR CLEAN 1	

029	GUITAR MUTED 1
030	GUITAR OVRDRV
031	GUITAR DISTRT 1
032	GUITAR HRMNX
BASS	
033	ACOUSTIC BASS 1
034	FINGER BASS 1
035	ELECT BASS 1
036	FRETLS BASS
037	SLAP BASS 1
038	SLAP BASS 2
039	SYN BASS 1
040	SYN BASS 2
STRING	
041	VIOLIN 1
042	VIOLA 1
043	CELLO 1
044	CONTRABASS 1
045	STR TREM 1
046	STR PIZZ
047	HARP 1
048	TIMPANI 1
CONCERT	
049	STRINGS 1
050	STRINGS 2
051	STR SYN 1
052	STR SYN 2
053	CHOIR AAHS 1
054	VOICE OOHS 1
055	VOICE SYN
056	ORCH HIT 1
BRASS	
057	TRUMPT 1
058	TROMBONE 1
059	TUBA 1
060	MUTE TPT 1
061	FR HORN 1
062	BRASS SECT 1
063	BRASS SYN 1
064	BRASS SYN 2
PIPE	

138	GRAND :
139	GRAND :
	138 139

USER MANUAL

		•
BRIGHT FX		Ĺ
GOBLIN FX		L
ECHO FX		L
SCI-FI FX		Ĺ
		ī

003	DAM BOT MATO
066	SAX ALTO 1
067	SAX TENOR 1
068	SAX BTONE 1
069	OBOE 1
070	ENG HORN 1
071	BASSON 1
072	CLARINET 1
WOODPIPE	
073	PICCOLO 1
074	FLUTE 1
075	RECORDER 1
076	PAN FLUTE
077	BOTTLE BLOWN
078	SHAKHACHI
079	WHISTLE 1
080	OCARINA
SYNTH PIPE	
081	SQR WAVE
082	SAW TOOTH
083	CALLIOPE
084	CHIFF
085	CHARANG
086	VOICE
087	FIFTHS
088	BASS LEAD
SYNTH VOICE	
089	NEW AGE
090	WARM PAD
091	POLY SYNTH
092	CHOIR PAD 1
093	BOW GLASS 1
094	METAL PAD 1

HALO PAD 1

SWEEP

RAIN FX

SNDTRK FX CRYSTAL FX

ATMOSPH FX

095

096

098

100

SYNTH EFFECT

SAX SOPRANO

065

101	BRIGHT FX
102	GOBLIN FX
103	ECHO FX
104	SCI-FI FX
FOLK SOUND	
105	SITAR 1
106	BANJO 1
107	SHAMISEN 1
108	KOTO 1
109	KALIMBA
110	BAGPIPE
111	FIDDLE
112	SHANAI
PERCUSSION	
113	TINKLE BELL
114	AGOGO
115	STEEL DRM
116	WOODBLK
117	TAIKO DRM
118	MLDY TOM
119	SYNTH DRM
120	REVRS CYM
EFFECT	
121	GTR NOISE
122	BREATH 1
123	SEASHORE
124	BIRD TWEET 1
125	TELEPHONE
126	HELICOPTER
127	APPLAUSE
128	GUNSHOT 1
129	GRAND PIANO2
130	GRAND PIANO3
131	GRAND PIANO4
132	GRAND PIANO /W 1
133	GRAND PIANO /W 2
134	GRAND PIANO /W 3
135	BRIGHTNESS PIANO 1
136	BRIGHTNESS PIANO 2
137	BRIGHTNESS PIANO 3

138	GRAND PIANO DARK 1
139	GRAND PIANO DARK 2
140	VELOCITY CROSS PIANO 1
141	VELOCITY CROSS PIANO 2
142	SOFT GRAND PIANO 1
143	SOFT GRAND PIANO 2
144	SOFT GRAND PIANO 3
145	STEREO BRIGHT PIANO
146	BRIGHT PIANO 2
147	BRIGHT PIANO 3
148	BRIGHT PIANO 4
149	BRIGHT PIANO 5
150	BRIGHT PIANO /W 1
151	BRIGHT PIANO /W 2
152	SOFT BRIGHT PIANO 1
153	SOFT BRIGHT PIANO 2
154	DEEP BRIGHT PIANO
	VELOCITY CROSS BRIGHT
155	PIANO
156	DETUNED E.PIANO 1
157	DETUNED E.PIANO 2
158	DETUNED E.PIANO 3
159	BRIGHT E.PIANO 1
160	BRIGHT E.PIANO 2
161	BRIGHT E.PIANO 3
162	BRIGHT E.PIANO 4
163	E.PIANO/W 1
164	E.PIANO /W 2
165	E.PIANO /W 3
166	E.PIANO /W 4
167	DARK E.PIANO 1
168	DARK E.PIANO 2
169	DARK E.PIANO 3
170	DARK E.PIANO 4
171	SOFT HONKY-TONK 1
172	SOFT HONKY-TONK 2
173	VELOCITY CROSS HONKY-TONK
174	DARK HONKY-TONK 1
175	DARK HONKY-TONK 2
176	HONKY-TONK /W 1
177	HONKY-TONK /W 2
	-

178	HONKY-TONK /W 3
179	HONKY-TONK /W 4
180	SHORT HONKY-TONK 1
181	SHORT HONKY-TONK 2
182	E PIANO 1/W
183	E PIANO 2/W
184	E PIANO 3/W
185	E PIANO 4/W
186	E PIANO 5/W
187	E PIANO 6/W
188	SOFT E.PIANO 1
189	SOFT E.PIANO 2
190	SOFT E.PIANO 3
191	SOFT E.PIANO 4
192	HARD E.PIANO 1
193	HARD E.PIANO 2
194	SHORT E.PIANO 1
195	SHORT E.PIANO 2
196	BRIGHTNESS E.P 1
197	BRIGHTNESS E.P 2
198	HARPSICHORD 1
199	HARPSICHORD 2
200	SOFT HARPSICHORD 1
201	SOFT HARPSICHORD 2
202	BRIGHT HARPSICHORD 1
203	BRIGHT HARPSICHORD 2
204	DARK HARPSICHORD 1
205	DARK HARPSICHORD 2
206	HARD HARPSICHORD 1
207	HARD HARPSICHORD 2
208	CLAVI CHORD 2
209	CLAVI CHORD 3
210	CLAVI/W
211	BRIGHT CLAVI
212	DARK CLAVI
213	PERCHY CLAVI
214	BRIGHT CELESTA
215	SHORT CELESTA
216	PERCHY CELESTA

13 $\widehat{14}$

USER MANUAL

218	CELESTA HARMONIC
219	GLOCKENSPIEL 2
220	GLOCKENSPIEL 3
221	GLOCKENSPIEL 4
222	BRIGHT GLOCKENSPIEL
223	DARK GLOCKENSPIEL
224	GLOCKENSPIEL /W 1
225	GLOCKENSPIEL /W 2
226	MUSIC BOX 2
227	MUSIC BOX 3
228	MUSIC BOX 4
229	TOY MUSIC BOX
230	BRIGHT MUSIC BOX
231	DARK MUSIC BOX
232	VIBRAPHONE 2
233	VIBRAPHONE 3
234	SYN VIBRAPHONE
235	HARD VIBRAPHONE
236	VIBRAPHONE /W 1
237	VIBRAPHONE /W 2
238	VIBRAPHONE SOFT
239	MARIMBA 2
240	MARIMBA /W
241	DARK MARIMBA
242	BRIGHT MARIMBA
243	DUTED MARIMBA
244	DARK MARIMBA
245	XYLOPHONE 2
246	XYLOPHONE 3
247	VELOCITY CROSS XYLOPHONE
248	DISTRT XYLOPHONE
249	BRIGHT XYLOPHONE
250	FAST XYLOPHONE
251	SLOW XYLOPHONE
252	TUBULR BELLS 2
253	TUBULR BELLS 3
254	TUBULR BELLS 4
255	SYN TUBULR BELLS
256	TUBULR BELLS DARK
257	DULCIMER 2
258	DULCIMER 3
	·

259	SANTUR
260	HAND ORGAN 2
261	HAND ORGAN 3
262	SOFT HAND ORGAN
263	BRIGHT SOFT HAMND ORGAN
264	HAMND ORGAN DETUNED
265	PERCHY ORGAN 2
266	PERCHY ORGAN 3
267	BRIGHT PERCHY ORGAN
268	DISTRT PERCHY ORGAN
269	ROTART ORGAN
270	SLOW ROTART ORGAN
271	1960 ROCK ORGAN
272	1980 ROCK ORGAN
273	BRIGHT ROCK ORGAN
274	DARK ROCK ORGAN
275	SOFT ROCK ORGAN
276	CHURCH ORGAN 2
277	CHURCH ORGAN 3
278	CHURCH ORGAN 4
279	CHURCH ORGAN 5
280	CHURCH ORGAN 6
281	CHURCH ORGAN /W 1
282	CHURCH ORGAN /W 2
283	BIRGHT CHURCH ORGAN 1
284	BIRGHT CHURCH ORGAN 2
285	DARK CHURCH ORGAN 1
286	DARK CHURCH ORGAN 2
287	SOUL CHURCH ORGAN
288	CHURCH ORGAN HARMONIC
289	CHURCH ORGAN SLOW
290	CHURCH ORGAN FAST
291	SOFT CHURCH ORGAN
292	REED ORGAN 2
293	REED ORGAN 3
294	REED ORGAN 4
295	REED ORGAN 5
296	BRIGHT REED ORGAN
297	DARK REED ORGAN
298	REED ORGAN /W
299	FAST REED ORGAN

300	SLOW REED ORGAN
301	SOFT REED ORGAN
302	HARD REED ORGAN
303	JAZZ REED ORGAN
304	ACCORDN 2
305	ACCORDN 3
306	ACCORDN 4
307	ACCORDN 5
308	DISTRT ACCORDN
309	BRIGHT ACCORDN
310	ACCORDN HARMONIC
311	ROCK ACCORDN
312	SWEET ACCORDN
313	DARK ACCORDN
314	FAST ACCORDN
315	SLOW ACCORDN
316	HARMONICA 2
317	HARMONICA 3
318	HARMONICA 4
319	HARMONICA 5
320	SWEET HARMONICA
321	DISTRT HARMONICA
322	SLOW HARMONICA
323	FAST HARMONICA
324	BRIGHT HARMONICA
325	DARK HARMONICA
326	SOFT HARMONICA
327	HARMONICA /W 1
328	HARMONICA /W 2
329	HARMONICA MUTED
330	TANGO ACCORDN 2
331	TANGO ACCORDN 3
332	1960 TANGO ACCORDN
333	1980 TANGO ACCORDN
334	BRIGHT TANGO ACCORDN
335	DARK TANGO ACCORDN
336	SOFT TANGO ACCORDN
337	HARD TANGO ACCORDN
338	TANGO ACCORDN /W 1
339	TANGO ACCORDN /W 2
340	SLOW TANGO ACCORDN

341	FAST TANGO ACCORDN
342	GUITAR NYLON 2
343	GUITAR NYLON 3
344	GUITAR NYLON 4
345	GUITAR NYLON 5
346	GUITAR NYLON 6
347	GUITAR NYLON 7
348	GUITAR NYLON RELEASE
349	VELOCITY CROSS RUITAR
350	DETUNED GUITAR NYLON
351	BIRGHT GUITAR NYLON
352	DARK GUITAR NYLON
353	GUITAR NYLON HARMONIC 1
354	GUITAR NYLON HARMONIC 2
355	GUITAR NYLON/W 1
356	GUITAR NYLON/W 2
357	GUITAR NYLON FAST
358	GUITAR NYLON SLOW
359	HARD GUITAR NYLON
360	SOFT GUITAR NYLON
361	GUITAR STEEL 2
362	GUITAR STEEL 3
363	GUITAR STEEL 4
	VELOCITY CROSS GUITAR
364	STEEL
365	DARK GUITAR STEEL
366	BRIGHT GUITAR STEEL
367	GUITAR STEEL HARMONIC 1
368	GUITAR STEEL HARMONIC 2
369	HARD GUITAR STEEL
370	SOFT GUITAR STEEL
371	FAST GUITAR STEEL
372	SLOW GUITAR STEEL
373	VELOCITY GUITAR STEEL
374	GUITAR STEEL REALSE
375	GUITAR STEEL /W 1
376	GUITAR STEEL /W 2
377	GUITAR JAZZ 2
378	GUITAR JAZZ 3
379	GUITAR JAZZ 4
380	GUITAR JAZZ 5

15

USER	MAN	UAL
-------------	-----	------------

381	DARK GUITAR JAZZ
382	BRIGHT GUITAR JAZZ
383	SOFT GUITAR JAZZ
384	HARD GUITAR JAZZ
385	GUITAR JAZZ VELOCITY
386	GUITAR JAZZ RELEASE
387	GUITAR JAZZ HARMONIC
388	SOFT GUITAR JAZZ
389	GUITAR JAZZ /W 1
390	GUITAR JAZZ /W 2
391	GUITAR CLEAN 2
392	GUITAR CLEAN 3
393	GUITAR CLEAN 4
394	GUITAR CLEAN 5
395	VELOCITY CLEAN GUITAR
396	DUTED CLEAN GUITAR
397	BRIGHT CLEAN GUITAR
398	CLEAN GUITAR HARMONIC
399	CLEAN GUITAR /W 1
400	CLEAN GUITAR /W 2
401	SOFT CLEAN GUITAR
402	FAST CLEAN GUITAR
403	SLOW CLEAN GUITAR
404	CLEAN GUITAR RELEASE
405	GUITAR MUTED 2
406	GUITAR MUTED 3
407	GUITAR MUTED 4
408	GUITAR MUTED 5
409	BRIGHT GUITAR MUTED
410	DARK GUITAR MUTED
411	GUITAR MUTED HARMONIC
412	GUITAR MUTED RELEASE
413	GUITAR MUTED CHORUS
414	GUITAR MUTED HARD
415	GUITAR MUTED SOFT
416	GUITAR MUTED /W 1
417	GUITAR MUTED /W 2
418	GUITAR OVRDRV 2
419	GUITAR OVRDRV 3
420	GUITAR OVRDRV 4
421	FUNK GUITAR

422	GUITAR OVRDRV HARMONIC
423	BRIGHT GUITAR OVRDRV
424	DARK GUITAR OVRDRV
425	GUITAR OVRDRV RELEASE
426	HARD GUITAR OVRDRV
427	SOFT GUITAR OVRDRV
428	GUITAR OVRDRV /W 1
429	GUITAR OVRDRV /W 2
430	GUITAR DISTRT 2
431	GUITAR DISTRT 3
432	GUITAR DISTRT 4
433	GUITAR DISTRT 5
434	GUITAR DISTRT 6
435	GUITAR DISTRT HARMONIC
436	GUITAR DISTRT RELEASE
437	BRIGHT GUITAR DISTRT
438	DARK GUITAR DISTRT
439	SOFT GUITAR DISTRT
440	HARMONIC GUITAR DISTRT
441	HARD GUITAR DISTRT
442	GUITAR DISTRT /W 1
443	GUITAR DISTRT /W 2
444	SOFT GUITAR HRMNX
445	HARD GUITAR HRMNX
446	BRIGHT GUITAR HRMNX
447	DARK GUITAR HRMNX
448	FAST GUITAR HRMNX
449	SLOW GUITAR HRMNX
450	GUITAR HRMNX RELEASE
451	GUITAR HRMNX /W 1
452	GUITAR HRMNX /W 2
453	ACOUSTIC BASS 2
454	ACOUSTIC BASS 3
455	ACOUSTIC BASS 4
456	ACOUSTIC BASS 5
457	DETUNED BASS
458	BASS AND FILTER
459	SOFT BASS
460	BASS & RELEASE
461	FAST BASS
462	SLOW BASS

463	BRIGHT BASS	504	SLOW SLAP BASS 2
464	DARK BASS	505	SLAP BASS HARMONIC 1
465	BASS /W 1	506	SLAP BASS HARMONIC 2
466	BASS /W 2	507	SLAP BASS RELEASE 1
467	FINGER BASS 2	508	SLAP BASS RELEASE 2
468	FINGER BASS HARMONIC	509	SYN BASS 3
469	SOFT FINGER BASS	510	SYN BASS 4
470	FINGER BASS RELEASE	511	SYN BASS 5
471	ELECT BASS 2	512	SYN BASS 6
472	ELECT BASS 3	513	SYN BASS HARMONIC 1
473	ELECT BASS 4	514	SYN BASS HARMONIC 2
474	ELECT BASS 5	515	FAST SYN BASS 1
475	ELECT BASS 6	516	FAST SYN BASS 2
476	ELECT BASS RELEASE	517	SOFT SYN BASS 1
477	ELECT BASS HARMONIC	518	SOFT SYN BASS 2
478	SOFT ELECT BASS	519	SLOW SYN BASS 1
479	FAST ELECT BASS	520	SLOW SYN BASS 2
480	PICK BASS	521	FAST SYN BASS 1
481	BRIGHT ELECT BASS 1	522	FAST SYN BASS 2
482	BRIGHT ELECT BASS 2	523	BRIGHT SYN BASS 1
483	DARK ELECT BASS 1	524	BRIGHT SYN BASS 2
484	DARK ELECT BASS 2	525	DARK SYN BASS 1
485	SOFT FRETLS BASS	526	DARK SYN BASS 2
486	FAST FRETLS BASS	527	SYN BASS RELEASE 1
487	FRETLS BASS RELEASE	528	SYN BASS RELEASE 2
488	FRETLS BASS HARMONIC	529	VIOLIN 2
489	FRETLESS BASS	530	VIOLIN 3
490	FAST FRETLESS BASS	531	VIOLIN 4
491	SLAP BASS 3	532	VIOLIN 5
492	SLAP BASS 4	533	VIOLIN ENSEMBLE 1
493	SLAP BASS 5	534	VIOLIN ENSEMBLE 2
494	SLAP BASS 6	535	SLOW VIOLIN
495	BRIGHT SLAP BASS 1	536	FAST VOLIN
496	BRIGHT SLAP BASS 2	537	VOLIN /W
497	DARK SLAP BASS 1	538	BRIGHT VOLIN
498	DARK SLAP BASS 2	539	DARK VOLIN
499	SOFT SLAP BASS 1	540	SOFT VOLIN
500	SOFT SLAP BASS 2	541	VIOLA 2
501	FAST SLAP BASS 1	542	VIOLA 3
502	FAST SLAP BASS 2	543	VIOLA 4
503	SLOW SLAP BASS 1	544	DARK VIOLA

(17)

 $\overline{18}$

USER MANUAL

545	HARD VIOLA
546	VIOLA ENSEMBLE
547	SLOW VIOLA
548	VIOLA VIBRATO
549	VIOLA /W
550	BRIGHT VIOLA
551	FAST VIOLA
552	SOFT VIOLA
553	CELLO 2
554	CELLO 3
555	CELLO 4
556	DARK CELLO
557	HARD CELLO
558	CELLO ENSEMBLE 1
559	CELLO ENSEMBLE 2
560	SLOW CELLO
561	FAST CELLO
562	CELLO /W
563	BRIGHT CELLO
564	SOFT CELLO
565	CONTRABASS 2
566	CONTRABASS 3
567	CONTRABASS 4
568	CONTRA BASS ENSEMBLE 1
569	CONTRA BASS ENSEMBLE 2
570	CONTRA BASS ENSEMBLE 3
571	CONTRA BASS ENSEMBLE 4
572	DARK CONTRA BASS
573	CONTRA BASS VIBRATO
574	STR TREM 2
575	STR TREM 3
576	STR TREM 4
577	STR TREM SLOW
578	STR TREM FAST
579	STR TREM /W
580	BRIGHT STR TREM
581	DARK STR TREM
582	SOFT STR TREM
583	BRIGHT STR PIZZ
584	DARK STR PIZZ
585	STR PIZZ HARMONIC
	· ·

586	STR PIZZ /W
587	FAST STR PIZZ
588	SLOW STR PIZZ
589	SOFT STR PIZZ
590	METAL STR PIZZ
591	HARP 2
592	HARP 3
593	HARP 4
594	HARP /W 1
595	HARP /W 2
596	BRIGHT HARP 1
597	BRIGHT HARP 2
598	DARK HARP 1
599	DARK HARP 2
600	HARP HARMONIC
601	SOFT HARMONIC
602	TIMPANI 2
603	TIMPANI 3
604	TIMPANI 4
605	TIMPANI /W 1
606	TIMPANI /W 2
607	BRIGHT TIMPANI
608	DARK TIMPANI
609	STRINGS 3
610	STRINGS 4
611	STRINGS 5
612	STRINGS 6
613	SLOW STRINGS 1
614	SLOW STRINGS 2
615	FAST STRINGS 1
616	FAST STRINGS 2
617	DARK STINGS 1
618	DARK STINGS 2
619	BRIGHT STINGS 1
620	BRIGHT STINGS 2
621	RESONANT STRINGS
622	SFORZATO STRINGS
623	STR SYN 3
624	STR SYN 4
625	STR SYN 5
626	STR SYN 6

627	1960 STRINGS
628	1970 STRINGS
629	SLOW STRINGS 1
630	SLOW STRINGS 2
631	FAST STRINGS 1
632	FAST STRINGS 2
633	LEGATO STRINGS 1
634	LEGATO STRINGS 2
635	BRIGHT LEGATO STRINGS
636	DARK LEGATO STRINGS
637	CHOIR AAHS 2
638	CHOIR AAHS 3
639	CHOIR AAHS 4
640	CHOIR AAHS 5
641	WARM CHOIR AAHS
642	CHOIR AAHS /W 1
643	CHOIR AAHS /W 2
644	CHOIR AAHS HARMONIC
645	BRIGHT CHOIR AAHS
646	DARK CHOIR AAHS
647	FAST CHOIR AAHS
648	SLOW CHOIR AAHS
649	VOICE OOHS 2
650	WARM VOICE OOHS 1
651	WARM VOICE OOHS 2
652	VOICE OOHS /W
653	BRIGHT VOICE OOHS
654	DARK VOICE OOHS
655	FAST VOICE OOHS
656	SLOW VOICE OOHS
657	VOICE SYN HARMONIC
658	SLOW VOICE SYN
659	FAST VOICE SYN
660	BRIGHT VOICE SYN
661	ELE.VOICE SYN
662	ORCH HIT 2
663	ORCH HIT /W
664	BRIGHT ORCH HIT
665	ORCH HIT HARMONIC
666	SLOW ORCH HIT
667	FAST ORCH HIT

668	DARK ORCH HIT
669	SOFT ORCH HIT
670	TRUMPT 2
671	TRUMPT 3
672	TRUMPT 4
673	TRUMPT 5
674	TRUMPT 6
675	TRUMPT 7
676	DARK TRUMPT
677	BRIGHT TRUMPT
678	SWEET TRUMPT
679	MUTE TRUMPT
680	TRUMPT/W 1
681	TRUMPT /W2
682	TROMBONE 2
683	TROMBONE 3
684	TROMBONE 4
685	TROMBONE 5
686	TROMBONE 6
687	TROMBONE 7
688	DARK TROMBONE
689	BRIGHT TROMBONE
690	SLOW BRIGHT TROMBONE
691	MUTE TROMBONE
692	TROMBONE /W
693	TUBA 2
694	TUBA 3
695	TUBA 4
696	TUBA 5
697	TUBA 6
698	SOFT TUBA
699	SLOW TUBA
700	TUBA SOLO
701	TUBA /W
702	BRIGHT TUBA
703	DARK TUBA
704	MUTE TUBA
705	MUTE TPT 2
706	DARK MUTE TPT
707	BRIGHT MUTE TPT
708	MUTE TPT /W

19

709	SWEET MUTE TPT
710	FR HORN 2
711	FR HORN 3
712	FR HORN 4
713	FR HORN 5
714	FR HORN 6
715	SWEET FR HORN
716	SLOW FR HORN
717	FAST FR HORN
718	BRIGHT FR HORN
719	DARK FR HORN
720	BRASS SECT 2
721	BRASS SECT 3
722	BRASS SECT 4
723	BRASS SECT 5
724	BRASS SECT 6
725	DARK BRASS SECT
726	BRASS SECT WELL
727	BRIGHT BRASS SECT
728	FAST BRASS SECT
729	SLOW BRASS SECT
730	BRASS SECT /W
731	BRASS SYN 3
732	BRASS SYN 4
733	BRASS SYN 5
734	BRASS SYN 6
735	BRASS SYN 7
736	SOFT BRASS SYN
737	SFORZATO BRASS SYN
738	DARK BRASS SYN
739	BRIGHT BRASS SYN
740	WELL BRASS SYN
741	MUTE BRASS SYN
742	SWEET BRASS SYN
743	HOMONIC BRASS SYN
744	SLOW BRASS SYN
745	FAST BRASS SYN
746	SAX ALTO 2
747	SAX ALTO 3
748	SAX ALTO 4
749	SAX ALTO 5

750	SAX ALTO 6
751	SAX ALTO BRIGHT
752	SAX ALTO MUTE
753	SAX ALTO /W
754	SOFT SAX ALTO
755	SLOW SAX ALTO
756	SWEET SAX ALTO
757	SAX TENOR 2
758	SAX TENOR 3
759	SAX TENOR 4
760	SAX TENOR 5
761	SAX TENOR 6
762	SWEET SAX TENOR
763	DARK SAX TENOR
764	SUPER SAX TENOR
765	SAX TENOR /W 1
766	SAX TENOR /W 2
767	SAX TENOR HARMONIC
768	SAX TENOR BRIGHT
769	SAX BTONE 2
770	SAX BTONE 3
771	SAX BTONE 4
772	SAX BTONE 5
773	SAX BTONE WELL
774	MUTE SAX BTONE
775	SWEET SAX BTONE
776	DARK SAX BTONE
777	OBOE 2
778	OBOE 3
779	OBOE 4
780	OBOE 5
781	SWEET OBOE
782	OBOE WELL
783	BRIGHT OBOE
784	DARK OBOE
785	MUTE OBOE
786	ENG HORN 2
787	ENG HORN 3
788	ENG HORN 4
789	ENG HORN 5
1	

ENG HORN 6

USER MANUAL

791	ANALOG ENG HORN
792	WOODWINDS
793	BASSON 2
794	BASSON 3
795	BASSON 4
796	BASSON 5
797	BRIGHT BASSON
798	DARK BASSON
799	BASSON WELL
800	BRIGHT BASSON
801	MUTE BASSON
802	SOFT BASSON
803	CLARINET 2
804	CLARINET 3
805	CLARINET 4
806	CLARINET 5
807	CLARINET HARMONIC
808	DARK CLARINET
809	BRIGHT CLARINET
810	CLARINET WELL
811	CLARINET MUTE
812	CLARINET SOFT
813	PICCOLO 2
814	PICCOLO 3
815	PICCOLO 4
816	PICCOLO DARK
817	PICCOLO HARMONIC
818	BRIGHT PICCOLO
819	SOFT PICCOLO
820	FLUTE 2
821	FLUTE 3
822	FLUTE 4
823	FLUTE HARMONIC
824	DARK FLUTE
825	BRIGHT FLUTE
826	FLUTE MUTE
827	SOFT FLUTE
828	RECORDER 2
829	RECORDER 3
830	RECORDER 4
831	PAN FLUTE SLOW
031	ILVILE OF OM

832	PAN FLUTE FAST	
833	PAN FLUTE HARMONIC	
834	PAN FLUTE DUTE	
835	PAN FLUTE/W	
836	BRIGHT PAN FLUTE	
837	BOTTLE BLOWN DARK	
838	BOTTLE BLOWN BRIGHTNESS	
839	BOTTLE BLOWN WARM	
840	SOFT BOTTLE BLOWN	
841	SHAKHACHI HARMONIC	
842	SHAKHACHI BRIGHT	
843	SHAKHACHI DARK	
844	SLOW SHAKHACHI	
845	FAST SHAKHACHI	
846	WHISTLE 2	
847	WHISTLE 3	
848	WHISTLE 4	
849	WHISTLE 5	
850	SQUARE	
851	SINE LEAD	
852	SINE SLOW	
853	SINE FAST	
854	SAW SLOW	
855	SAW FAST	
856	SAW HARMONIC	
857	VOICE LEAD	
858	VOICE SLOW	
859	VOICE FAST	
860	SOFT 5TH LEAD	
861	5TH LEAD	
862	MASSINESS	
863	BASS & LEAD	
864	NEW AGE SLOW	
865	NEW AGE FAST	
866	NEW AGE HARMONIC	
867	WARM PAD FAST	
868	WARM PAD SLOW	
869	WARM PAD HARMONIC	
870	PWM PAD	
871	POLY SYNTH SLOW	
872	POLY SYNTH FAST	

USER	MA	M.	JAL
------	----	----	-----

873	CLICK PAD
874	ANALOG PAD
875	POLY PAD
876	CHOIR PAD 2
877	CHOID PAD HARMONIC
878	BOW GLASS 2
879	BOW GLASS HARMONIC
880	METAL PAD 2
881	PAN PAD 1
882	PAN PAD 2
883	HALO PAD 2
884	HALO PAD 3
885	DISPERSE
886	RISING
887	CONGREGATE
888	PROGENITOR
889	PRELUDE
890	WARM AIR
891	SMOG
892	PAN ECHO
893	LARGE PAN
894	ECHO SLOW
895	FANTASYLAND
896	SITAR 2
897	SITAR 3
898	SITAR 4
899	DISTRT SITAR
900	BRIGHT SITAR

	Number	Instrument
8 BEAT	001	8 Beat 1A
ĺ	002	8 Beat 2A
	003	8 Beat 3A
Γ	004	8 Beat 4A
[005	8 Beat HeatA
[006	8 Beat Pop 1A
	007	8 Beat Pop 2A
BALLAD	008	Ballad 1A
	009	Ballad 2A
	010	Guitar BalladA
[011	Organ BalladA
[012	Bluse BalladA
[013	Epic BalladA
Γ	014	Rock BalladA
[015	Slow BalladA
ſ	016	Pop Ballad
[017	Electro Pop Ballad
	018	Polk BalladA
16 BEAT	019	16 Beat 1A
	020	16 Beat 2A
	021	16 Beat 3A
[022	16 Beat 4A
[023	16 Beat FunkA
[024	16 Beat Pop A
	025	16 Beat BalladA
LATIN	026	Bossa Nova 1A
	027	Guitar BossaA
	028	Pop BossaA
	029	TangoA
[030	Cha ChaA
	031	RhumbaA
	032	TEX TEXA
COUNTRY	033	CountryA
	034	Country RockA
	035	Country ShuffleA
[036	Country SwingA
[037	Country BalladA
	038	Country WaltzA
ROCK R&B	039	50's RockA
	040	Heavy MetalA
	041	Rock 1A
	042	Rock 2A
	043	Soft RockA
Γ	044	Slow RockA

	045	Hard RockA		092	TarantellaA
	046	Rock & Roll 1A	l t	093	Slow WaltzA
	047	Rock & Roll 2A		094	Ober WaltzA
RHYTHM&BLUES	048	Chicago BluesA	PINIST	095	Piano BalladA
	049	Fast GospelA		096	Waltz 2A
	050	Groove SoulA		097	Guitar WaltzA
	051	RapA		098	2/4 Piano 1A
	052	Gospe1S1A		099	3/4 Piano 1A
	053	BluesA		100	4/4 Piano 1A
	054	Slow BluesA	8 BEAT	101	8 Beat 1B
	055	FoxtrotA		102	8 Beat 2B
Disco	056	Disco TropicA		103	8 Beat 3B
	057	Disco HandsA		104	8 Beat 4B
	058	Two StepA		105	8 Beat HeatB
	059	Polk PopA		106	8 Beat Pop 1B
	060	Waltz 1A		107	8 Beat Pop 2B
	061	Waltz Pop 1A	BALLAD	108	Ballad 1B
	062	Waltz Pop 2A		109	Ballad 2B
WORLD MUSIC	063	RaiA		110	Guitar BalladB
	064	Twist 1A		111	Organ BalladB
	065	Twist 2A		112	Bluse BalladB
	066	Miami PopA		113	Epic BalladB
	067	MotownA		114	Rock BalladB
	068	ReggaeA		115	Slow BalladB
	069	Swing ReggaeA		116	Pop BalladB
	070	MamboA		117	Electro Pop Ball
	071	BeguineA		118	Polk BalladB
	072	MusetteA	16 BEAT	119	16 Beat 1B
DANCE	073	HouseA		120	16 Beat 2B
	074	Slow FoxA		121	16 Beat 3B
	075	Vienna WaltzA		122	16 Beat 4B
	076	SalsaA		123	16 Beat FunkB
	077	DiscoA		124	16 Beat Pop B
	078	Hip Hop PopA		125	16 Beat BalladB
	079	Analog PopA	LATIN	126	Bossa Nova 1B
	080	Club DanceA		127	Guitar BossaB
JAZZ&SWING	081	BoogieA		128	Pop BossaB
	082	Funky PopA		129	TangoB
	083	Jazz RockA		130	Cha ChaB
	084	Swing 1A		131	RhumbaB
	085	DixielandA		132	TEX TEXB
	086	Jazz SambaA	COUNTRY	133	CountryB
TRADITIONAL	087	MarchA		134	Country RockB
	088	US. MarchA		135	Country ShuffleB
	089	Samba A		136	Country SwingB
	090	PolkaA		137	Country BalladB
	091	Polka OberA	ı [138	Country WaltzB

 $\frac{23}{}$

USER MANUAL

ROCK R&B	139	50's RockB
	140	Heavy MetalB
	141	Rock 1B
	142	Rock 2B
	143	Soft RockB
	144	Slow RockB
	145	Hard RockB
	146	Rock & Roll 1B
	147	Rock & Roll 2B
RHYTHM&BLUES	148	Chicago BluesB
	149	Fast GospelB
	150	Groove SoulB
	151	RapB
	152	GospelS1B
	153	BluesB
	154	Slow BluesB
	155	FoxtrotB
Disco	156	Disco TropicB
21500	157	Disco HandsB
	158	Two StepB
	159	Polk PopB
	160	Waltz 1B
	161	Waltz Pop 1B
	162	Waltz Pop 2B
WORLD MUSIC	163	RaiB
WORLD MODIC	164	Twist 1B
	165	Twist 2B
	166	Miami PopB
	167	MotownB
	168	ReggaeB
	169	Swing ReggaeB
	170	MamboB
	171	BeguineB
	172	MusetteB
DANCE	173	HouseB
DILIOD	174	Slow FoxB
	175	Vienna WaltzB
	176	SalsaB
	177	DiscoB
	178	Hip Hop PopB
	179	Analog PopB
	180	Club DanceB
JAZZ&SWING	181	BoogieB
JIIDDWO II IIIU	182	Funky PopB
	183	Jazz RockB
	184	Swing 1B
	185	DixielandB
	100	DIVICIONAD

		_
	186	Jazz SambaB
TRADITIONAL	187	MarchB
	188	US. MarchB
	189	SambaB
	190	Po1kaB
	191	Polka OberB
	192	TarantellaB
	193	Slow WaltzB
	194	Ober WaltzB
PINIST	195	Piano BalladB
	196	Waltz 2B
	197	Guitar WaltzB
	198	2/4 Piano 1B
	199	3/4 Piano 1B
	200	4/4 Piano 1B
8 BEAT	201	8 Beat 1I
	202	8 Beat 2I
	203	8 Beat 3I
	204	8 Beat 4I
	205	8 Beat HeatI
	206	8 Beat Pop 1I
	207	8 Beat Pop 2I
BALLAD	208	Ballad 1I
31111111	209	Ballad 2I
	210	Guitar BalladI
	211	Organ BalladI
	212	Bluse BalladI
	213	Epic BalladI
	214	Rock BalladI
	215	Slow BalladI
	216	Pop BalladI
	217	Electro Pop Ballad
-	218	Polk BalladI
16 BEAT	219	16 Beat 1I
10 DEM1	220	16 Beat 2I
	221	16 Beat 3I
-	222	16 Beat 4I
	223	16 Beat FunkI
-	224	16 Beat Pop I
 	225	16 Beat BalladI
LATIN	226	Bossa Nova 1I
TVIII	227	Guitar BossaI
		- i
⊢	228 229	Pop BossaI
⊢		Tango I
	230	Cha ChaI
	231	RhumbaI
	232	TEX TEXI

		•
COUNTRY	233	CountryI
	234	Country RockI
	235	Country ShuffleI
	236	Country SwingI
	237	Country BalladI
-		
DOOK DAD	238	Country WaltzI
ROCK R&B	239	50's RockI
	240	Heavy MetalI
	241	Rock 1I
	242	Rock 2I
	243	Soft RockI
	244	Slow RockI
	245	Hard RockI
	246	Rock & Roll 1I
	247	Rock & Roll 2I
RHYTHM&BLUES	248	Chicago BluesI
VIII IIIM@DLUE2		
	249	Fast GospelI
- ⊢	250	Groove SoulI
L	251	RapI
L	252	GospelS1I
L	253	BluesI
	254	Slow BluesI
	255	FoxtrotI
Disco	256	Disco TropicI
	257	Disco HandsI
		DISCO Hallasi
		Two StopI
	258	Two StepI
	258 259	Polk PopI
	258 259 260	Polk PopI Waltz 1I
	258 259 260 261	Polk PopI Waltz 1I Waltz Pop 1I
	258 259 260 261 262	Polk PopI Waltz 1I Waltz Pop 1I Waltz Pop 2I
WORLD MUSIC	258 259 260 261 262 263	Polk PopI Waltz 1I Waltz Pop 1I Waltz Pop 2I RaiI
WORLD MUSIC	258 259 260 261 262	Polk PopI Waltz 1I Waltz Pop 1I Waltz Pop 2I RaiI Twist 1I
WORLD MUSIC	258 259 260 261 262 263	Polk PopI Waltz 1I Waltz Pop 1I Waltz Pop 2I RaiI Twist 1I Twist 2I
WORLD MUSIC	258 259 260 261 262 263 264	Polk PopI Waltz 1I Waltz Pop 1I Waltz Pop 2I RaiI Twist 1I
WORLD MUSIC	258 259 260 261 262 263 264 265	Polk PopI Waltz 1I Waltz Pop 1I Waltz Pop 2I RaiI Twist 1I Twist 2I
WORLD MUSIC	258 259 260 261 262 263 264 265 266 267	Polk PopI Waltz 1I Waltz Pop 1I Waltz Pop 2I RaiI Twist 1I Twist 2I Miami PopI MotownI
WORLD MUSIC	258 259 260 261 262 263 264 265 266 267 268	Polk PopI Waltz 1I Waltz Pop 1I Waltz Pop 2I RaiI Twist 1I Twist 2I Miami PopI MotownI ReggaeI
WORLD MUSIC	258 259 260 261 262 263 264 265 266 267 268 269	Polk PopI Waltz 1I Waltz Pop 1I Waltz Pop 2I RaiI Twist 1I Twist 2I Miami PopI MotownI ReggaeI Swing ReggaeI
WORLD MUSIC	258 259 260 261 262 263 264 265 266 267 268 269 270	Polk PopI Waltz 1I Waltz Pop 1I Waltz Pop 2I RaiI Twist 1I Twist 2I Miami PopI MotownI ReggaeI Swing ReggaeI MamboI
WORLD MUSIC	258 259 260 261 262 263 264 265 266 267 268 269 270	Polk PopI Waltz 1I Waltz Pop 1I Waltz Pop 2I RaiI Twist 1I Twist 2I Miami PopI MotownI ReggaeI Swing ReggaeI MamboI BeguineI
	258 259 260 261 262 263 264 265 266 267 268 269 270 271	Polk PopI Waltz 1I Waltz Pop 1I Waltz Pop 2I RaiI Twist 1I Twist 2I Miami PopI MotownI ReggaeI Swing ReggaeI MamboI BeguineI MusetteI
WORLD MUSIC	258 259 260 261 262 263 264 265 266 267 268 269 270 271 272	Polk PopI Waltz 1I Waltz Pop 1I Waltz Pop 2I RaiI Twist 1I Twist 2I Miami PopI MotownI ReggaeI Swing ReggaeI MamboI BeguineI MusetteI HouseI
	258 259 260 261 262 263 264 265 266 267 268 269 270 271 272 273 274	Polk PopI Waltz 1I Waltz Pop 1I Waltz Pop 2I RaiI Twist 1I Twist 2I Miami PopI MotownI ReggaeI Swing ReggaeI MamboI BeguineI HouseI Slow FoxI
	258 259 260 261 262 263 264 265 266 267 268 269 270 271 272 273 274 275	Polk PopI Waltz 1I Waltz Pop 1I Waltz Pop 2I RaiI Twist 1I Twist 2I Miami PopI MotownI ReggaeI Swing ReggaeI MamboI BeguineI MusetteI HouseI Slow FoxI Vienna WaltzI
	258 259 260 261 262 263 264 265 266 267 268 269 270 271 272 273 274	Polk PopI Waltz 1I Waltz Pop 1I Waltz Pop 2I RaiI Twist 1I Twist 2I Miami PopI MotownI ReggaeI Swing ReggaeI MamboI BeguineI HouseI Slow FoxI
	258 259 260 261 262 263 264 265 266 267 268 269 270 271 272 273 274 275	Polk PopI Waltz 1I Waltz Pop 1I Waltz Pop 2I RaiI Twist 1I Twist 2I Miami PopI MotownI ReggaeI Swing ReggaeI MamboI BeguineI MusetteI HouseI Slow FoxI Vienna WaltzI
	258 259 260 261 262 263 264 265 266 267 268 269 270 271 272 273 274 275 276	Polk PopI Waltz 1I Waltz Pop 1I Waltz Pop 2I RaiI Twist 1I Twist 2I Miami PopI MotownI ReggaeI Swing ReggaeI MamboI BeguineI MusetteI HouseI Slow FoxI Vienna WaltzI SalsaI

	000	C1 1 D T
TA GGO CWITNO	280	Club DanceI
JAZZ&SWING	281	BoogieI
	282	Funky PopI
	283	Jazz RockI
	284	Swing 1I
	285	DixielandI
	286	Jazz SambaI
TRADITIONAL	287	MarchI
	288	US. MarchI
	289	SambaI
	290	PolkaI
	291	Polka OberI
	292	TarantellaI
	293	Slow WaltzI
	294	Ober WaltzI
PINIST	295	Piano BalladI
1111101	296	Waltz 2I
	297	Guitar WaltzI
	298	2/4 Piano 1I
_	299	3/4 Piano 1I
-		
O DDAM	300	4/4 Piano 1I
8 BEAT	301	8 Beat 1E
	302	8 Beat 2E
_	303	8 Beat 3E
_	304	8 Beat 4E
	305	8 Beat HeatE
_	306	8 Beat Pop 1E
	307	8 Beat Pop 2E
BALLAD	308	Ballad 1E
	309	Ballad 2E
	310	Guitar BalladE
	311	Organ BalladE
	312	Bluse BalladE
Г	313	Epic BalladE
	314	Rock BalladE
	315	Slow BalladE
	316	Pop BalladE
	317	Electro Pop Ballad
	318	Polk BalladE
16 BEAT	319	16 Beat 1E
IO DUILI	320	16 Beat 2E
	321	16 Beat 3E
<u> </u>		
⊢	322	16 Beat 4E
<u> </u>	323	16 Beat FunkE
<u> </u>	324	16 Beat Pop E
	325	16 Beat BalladE
LATIN	326	Bossa Nova 1E

USER MANUAL

LATIN	327	Guitar BossaE
	328	Pop BossaE
	329	TangoE
	330	Cha ChaE
	331	RhumbaE
	332	TEX TEXE
COUNTRY	333	CountryE
	334	Country RockE
	335	Country ShuffleE
	336	Country SwingE
	337	Country BalladE
	338	Country WaltzE
ROCK R&B	339	50's RockE
	340	Heavy MetalE
	341	Rock 1E
	342	Rock 2E
	343	Soft RockE
	344	Slow RockE
	345	Hard RockE
	346	Rock & Roll 1E
	347	Rock & Roll 2E
RHYTHM&BLUES	348	Chicago BluesE
	349	Fast GospelE
	350	Groove SoulE
	351	RapE
	352	Gospe1S1E
	353	BluesE
	354	Slow BluesE
	355	FoxtrotE
Disco	356	Disco TropicE
	357	Disco HandsE
	358	Two StepE
	359	Polk PopE
	360	Waltz 1E
	361	Waltz Pop 1E
	362	Waltz Pop 2E
WORLD MUSIC	363	RaiE
	364	Twist 1E
	365	Twist 2E
	366	Miami PopE
	367	MotownE
	368	ReggaeE
	369	Swing ReggaeE
	370	MamboE
	371	BeguineE
	372 373	MusetteE HouseE

DANCE MUSIC	374	Slow FoxE
	375	Vienna WaltzE
Γ	376	SalsaE
	377	DiscoE
	378	Hip Hop PopE
Γ	379	Analog PopE
	380	Club DanceE
JAZZ&SWING	381	BoogieE
	382	Funky PopE
	383	Jazz RockE
	384	Swing 1E
	385	DixielandE
	386	Jazz SambaE
TRADITIONAL	387	MarchE
	388	US. MarchE
	389	SambaE
	390	PolkaE
	391	Polka OberE
Γ	392	TarantellaE
	393	Slow WaltzE
	394	Ober WaltzE
PINIST	395	Piano BalladE
	396	Waltz 2E
	397	Guitar WaltzE
	398	2/4 Piano 1E
	399	3/4 Piano 1E
	400	4/4 Piano 1E
8 BEAT	401	8 Beat 1AF
	402	8 Beat 2AF
	403	8 Beat 3AF
	404	8 Beat 4AF
	405	8 Beat HeatAF
	406	8 Beat Pop 1AF
	407	8 Beat Pop 2AF
BALLAD	408	Ballad 1AF
	409	Ballad 2AF
	410	Guitar BalladAF
	411	Organ BalladAF
	412	Bluse BalladAF
	413	Epic BalladAF
	414	Rock BalladAF
Γ	415	Slow BalladAF
	416	Pop BalladAF
	417	Electro Pop BalladAF
	418	Polk BalladAF
16 BEAT	419	16 Beat 1AF
	420	16 Beat 2AF

	421	16 Beat 3AF
	422	16 Beat 4AF
	423	16 Beat FunkAF
	424	16 Beat Pop AF
	425	16 Beat BalladAF
LATIN	426	Bossa Nova 1AF
LITTIN	427	Guitar BossaAF
	428	Pop BossaAF
-	429	TangoAF
-		
-	430	Cha ChaAF
_	431	RhumbaAF
	432	TEX TEXAF
COUNTRY	433	CountryAF
	434	Country RockAF
	435	Country ShuffleAF
	436	Country SwingAF
	437	Country BalladAF
	438	Country WaltzAF
ROCK R&B	439	50's RockAF
	440	Heavy MetalAF
	441	Rock 1AF
	442	Rock 2AF
-	443	Soft RockAF
_	444	Slow RockAF
_	444	Hard RockAF
-		
_	446	Rock & Roll 1AF
	447	Rock & Roll 2AF
RHYTHM&BLUES	448	Chicago BluesAF
	449	Fast GospelAF
	450	Groove SoulAF
	451	RapAF
	452	GospelS1AF
	453	B1uesAF
	454	Slow BluesAF
	455	FoxtrotAF
Disco	456	Disco TropicAF
İ	457	Disco HandsAF
	458	Two StepAF
	459	Polk PopAF
—	460	Waltz 1AF
-	461	Waltz Pop 1AF
		
WODI D. MICTO	462	Waltz Pop 2AF
WORLD MUSIC	463	RaiAF
	464	Twist 1AF
	465	Twist 2AF
	466	Miami PopAF
	467	MotownAF

	468	Do maro o AE
<u> </u>		ReggaeAF
<u> </u>	469	Swing ReggaeAF
	470	MamboAF
-	471	BeguineAF
	472	MusetteAF
DANCE	473	HouseAF
	474	Slow FoxAF
_	475	Vienna WaltzAF
_	476	SalsaAF
_	477	DiscoAF
	478	Hip Hop PopAF
	479	Analog PopAF
	480	Club DanceAF
JAZZ&SWING	481	BoogieAF
	482	Funky PopAF
	483	Jazz RockAF
	484	Swing 1AF
	485	DixielandAF
	486	Jazz SambaAF
TRADITIONAL	487	MarchAF
	488	US. MarchAF
	489	SambaAF
	490	PolkaAF
	491	Polka OberAF
	492	TarantellaAF
	493	Slow WaltzAF
	494	Ober WaltzAF
PINIST	495	Piano BalladAF
	496	Waltz 2AF
	497	Guitar WaltzAF
	498	2/4 Piano 1AF
	499	3/4 Piano 1AF
	500	4/4 Piano 1AF
8 BEAT	501	8 Beat 1BF
O DERII	502	8 Beat 2BF
	503	8 Beat 3BF
	504	8 Beat 4BF
⊢	505	8 Beat HeatBF
	506	8 Beat Pop 1BF
<u> </u>	507	8 Beat Pop 2BF
BALLAD	508	Ballad 1BF
DVLFVA	509	Ballad 2BF
-	510	
⊢		Guitar BalladBF
⊢	511	Organ BalladBF
⊢	512	Bluse BalladBF
	513	Epic BalladBF
	514	Rock BalladBF

(27)

USER MANUAL

	515	Slow BalladBF
	516	Pop BalladBF
	517	Electro Pop BalladBF
	518	Polk BalladBF
16 BEAT	519	16 Beat 1BF
	520	16 Beat 2BF
	521	16 Beat 3BF
	522	16 Beat 4BF
	523	16 Beat FunkBF
	524	16 Beat Pop BF
	525	16 Beat BalladBF
LATIN	526	Bossa Nova 1BF
	527	Guitar BossaBF
	528	Pop BossaBF
	529	TangoBF
	530	Cha ChaBF
	531	RhumbaBF
	532	TEX TEXBF
COUNTRY	533	CountryBF
	534	Country RockBF
	535	Country ShuffleBF
	536	Country SwingBF
	537	Country BalladBF
	538	Country WaltzBF
ROCK R&B	539	50's RockBF
	540	Heavy Meta1BF
	541	Rock 1BF
	542	Rock 2BF
	543	Soft RockBF
	544	Slow RockBF
	545	Hard RockBF
	546	Rock & Roll 1BF
	547	Rock & Roll 2BF
RHYTHM&BLUES	548	Chicago BluesBF
	549	Fast GospelBF
	550	Groove SoulBF
	000	-
	551	RapBF
	551 552	RapBF Gospe1S1BF
	551	RapBF GospelS1BF BluesBF
	551 552 553 554	RapBF GospelS1BF BluesBF Slow BluesBF
	551 552 553 554 555	RapBF GospelS1BF BluesBF Slow BluesBF FoxtrotBF
Disco	551 552 553 554	RapBF GospelS1BF BluesBF Slow BluesBF
Disco	551 552 553 554 555	RapBF GospelS1BF BluesBF Slow BluesBF FoxtrotBF Disco TropicBF Disco HandsBF
Disco	551 552 553 554 555 556	RapBF GospelS1BF BluesBF Slow BluesBF FoxtrotBF Disco TropicBF Disco HandsBF Two StepBF
Disco	551 552 553 554 555 556 557	RapBF GospelS1BF BluesBF Slow BluesBF FoxtrotBF Disco TropicBF Disco HandsBF Two StepBF Polk PopBF
Disco	551 552 553 554 555 556 557 558	RapBF GospelS1BF BluesBF Slow BluesBF FoxtrotBF Disco TropicBF Disco HandsBF Two StepBF

	562	Waltz Pop 2BF
WORLD MUSIC	563	RaiBF
	564	Twist 1BF
	565	Twist 2BF
	566	Miami PopBF
	567	MotownBF
	568	ReggaeBF
	569	Swing ReggaeBF
	570	MamboBF
	571	BeguineBF
	572	MusetteBF
DANCE	573	HouseBF
	574	Slow FoxBF
	575	Vienna WaltzBF
	576	SalsaBF
	577	DiscoBF
	578	Hip Hop PopBF
	579	Analog PopBF
	580	Club DanceBF
JAZZ&SWING	581	BoogieBF
	582	Funky PopBF
L	583	Jazz RockBF
	584	Swing 1BF
	585	DixielandBF
	586	Jazz SambaBF
TRADITIONAL	587	MarchBF
	588	US. MarchBF
<u> </u>	589	SambaBF
<u> </u>	590	PolkaBF
<u> </u>	591	Polka OberBF
<u> </u>	592	TarantellaBF
<u> </u>	593	Slow WaltzBF
DTVITO-	594	Ober WaltzBF
PINIST	595	Piano BalladBF
	596	Waltz 2BF
<u> </u>	597	Guitar WaltzBF
<u> </u>	598	2/4 Piano 1BF
<u> </u>	599	3/4 Piano 1BF
0. PP4#	600	4/4 Piano 1BF
8 BEAT	601	8 Beat 1C
	602	8 Beat 2C
<u> </u>	603	8 Beat 3C
⊢	604	8 Beat 4C
<u> </u>	605	8 Beat HeatC
<u> </u>	606	8 Beat Pop 1C
<u> </u>	607	8 Beat Pop 2C
I .	608	Ballad 1C

	609	Ballad 2C
	610	Guitar BalladC
	611	Organ BalladC
l F	612	Bluse BalladC
l F	613	Epic BalladC
16 BEAT	614	Rock BalladC
TO BENT	615	Slow BalladC
	616	Pop BalladC
	617	Electro Pop Ballad(
	618	Polk BalladC
	619	16 Beat 1C
	620	16 Beat 2C
	621	16 Beat 3C
	622	16 Beat 4C
	623	16 Beat FunkC
	624	16 Beat Pop C
	625	16 Beat BalladC
	626	Bossa Nova 1C
	627	Guitar BossaC
	628	Pop BossaC
	629	TangoC
BALLAD	630	Cha ChaC
DALLAD	631	RhumbaC
-	632	TEX TEXC
	633	CountryC
	634	Country RockC
	635	Country ShuffleC
	636	Country SwingC
	637	Country BalladC
	638	Country WaltzC
	639	50's RockC
	640	Heavy MetalC
	641	Rock 1C
	642	Rock 2C
	643	Soft RockC
	644	Slow RockC
	645	Hard RockC
	646	Rock & Roll 1C
	647	Rock & Roll 2C
	648	Chicago BluesC
COUNTRY	649	Fast GospelC
COUNTRI	650	Groove SoulC
	651	RapC
	652	GospelS1C
	653	BluesC
	654	Slow BluesC
	655	
	099	FoxtrotC

_	656	Disco TropicC
	657	Disco HandsC
	658	Two StepC
	659	Polk PopC
DANCE	660	Waltz 1C
	661	Waltz Pop 1C
	662	Waltz Pop 2C
	663	RaiC
	664	Twist 1C
	665	Twist 2C
	666	Miami PopC
	667	MotownC
	668	ReggaeC
Γ	669	Swing ReggaeC
Γ	670	MamboC
Γ	671	BeguineC
	672	MusetteC
	673	HouseC
	674	Slow FoxC
	675	Vienna WaltzC
	676	SalsaC
	677	DiscoC
	678	Hip Hop PopC
	679	Analog PopC
	680	Club DanceC
	681	BoogieC
F	682	Funky PopC
一	683	Jazz RockC
<u> </u>	684	Swing 1C
<u> </u>	685	DixielandC
	686	Jazz SambaC
<u> </u>	687	MarchC
	688	US. MarchC
	689	SambaC
	690	PolkaC
	691	Polka OberC
	692	TarantellaC
	693	Slow WaltzC
AZZ&SWING	694	Ober WaltzC
ILLUCO II IIIU	695	Piano BalladC
	696	Waltz 2C
	697	Guitar WaltzC
<u> </u>	698	2/4 Piano 1C
⊢	699	3/4 Piano 1C
∟	700	4/4 Piano 1C

<u>29</u>

USER MANUAL

DEMO LIST:


	•		
NO	SongName	029	HapyBirh
001	MinutWlz	030	PraiseSng
002	DJ Dance	031	Dolly
003	Fountian	032	Market
004	SpanGirl	033	Family
005	SonataPn	034	A cradle
006	SuperSng	035	At Home
007	LittlBee	036	Seasons
008	HorseRac	037	YearsAgo
009	Nocturne	038	Pigeons
010	TheSpain	039	InnerVic
011	BusyTran	040	Violin
012	Mexico	041	Swan
013	MozartPn	042	Musettes
014	Minuet	043	GypsyRnd
015	Nifuma	044	Serenade
016	Disco	045	Polka
017	FolkSong	046	SoilPull
018	Girl Sea	047	Trout
019	LittStar	048	Send-off
020	KindeGtn	049	March
021	Wahaha	050	ForElise
022	Duck&Cik	051	SwaniRiv
023	Humorous	052	France
024	Joy Song	053	Danube
025	GoingHom	054	Hungary
026	Dove	055	Spaceman
027	Auldlang	056	Patriot
028	Moonligh	057	Cuckoo
(31)			

058	SingKite	
059	TongChil	
060	DoReMi	
061	We Happy	
062	LittlBee	
063	Russia	
064	Plaster	
065	Foison	
066	JingleBe	
067	PaperBoy	
068	Swallow	
069	New Year	
070	Edelweis	
071	MoonRivr	
072	Beyer 10	
073	Beyer 20	
074	Beyer 30	
075	Beyer 40	
076	Beyer 50	
077	Beyer 60	
078	Beyer 70	
079	Beyer 71	
080	Beyer 72	
081	Beyer 75	
082	Beyer 76	
083	Beyer 77	
084	Beyer 78	
085	Beyer 79	
086	Beyer 80	


087	Beyer 90
088	Beyer 98
089	Beyer 99
090	Beyer 26
091	Beyer 27
092	Beyer 28
093	Beyer 29
094	Beyer 31
095	Beyer 106
096	Beyer 48
097	Beyer 52
098	Beyer 107
099	Beyer 18
100	Beyer 21
101	Beyer 23
102	Beyer 25
103	Beyer 36
104	Beyer 84
105	Beyer 88
106	Beyer 32
107	Beyer 35
108	Beyer 11
109	Beyer 16
110	Beyer 18

USER MANUAL

Single Finger Chord List

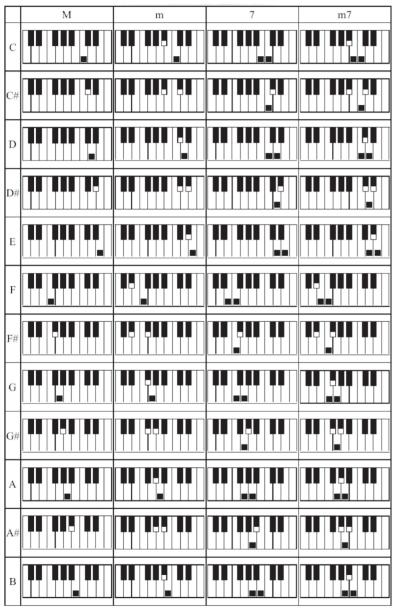

Multi-finger Chord List

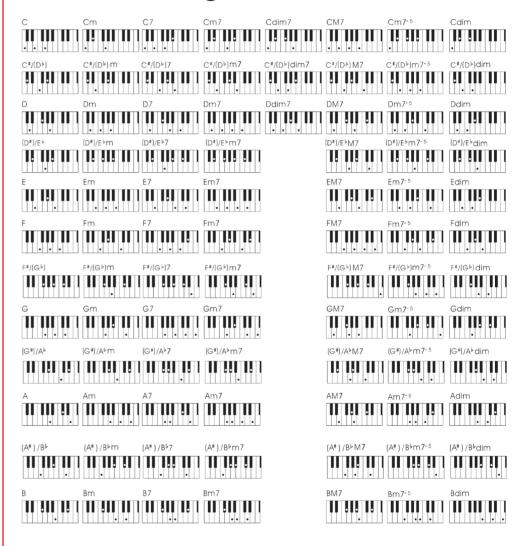

USER MANUAL

C7sus4 Cm add9 CmM7 C7-5 Cadd9 Caug Csus4 $C^{*}/(D^{b})$ m add9 C#/(Db)add9 C#/(Db)aua C#/(Db)7sus4 DmM7 Dadd9 Daug D7sus4 Dm add9 (D#)/Ebaua (D#)/E 7 Sus 4 (D#)/E hmM7 (D#)/Eb add9 Eadd9 F7sus4 FmM7 Em add9 11 111 11 Fsus4 F7sus4 Fm add9 FmM7 F7-5 Fadd9 F#/(Gb)7sus4 F#/(G1) m add9 F#/(Gb)mM7 F#/(Gb)7-5 F#/(Gb)add9 G7sus4 Gm add9 GmM7 Gadd9 (G#)/Absus4 (G#)/Ab mM7 (G#)/Ab7-5 (G#)/Abadd9 (G#)/Ab7sus4 AmM7 A7sus4 Am add9 Aadd9 (A#)/Bbsus4 (A#)/Bb7sus4 (A*)/Bbm add9 (A#)/Bb7-5 (A#1/Bbadd9 B7sus4 Bm add9 BmM7 Badd9

Product Maintenance

Careful and good maintenance and production of this product play a very important role in lengthen service life of the product and decrease fault.

Avoid heating, Damping or direct Sunlight

You shall not have the musical instrument exposed to sunlight in excess, or placed where is near air conditioner or baking hot

you should not use it near TV set or radios

This musical instrument may lead to video or audio disturbance on TV set and

Radio. In that case, you shall move the musical instrument away from TV set or radio

You should not use paint, thinner or similar chemicals to clean

You can clean this product a piece of soft cloth with weak solution and neutral detergent. The piece of cloth shall be dipped and wrung out in the solution until

it is dry approximately.

you should avoid quake and collision

The product shall be handled with care when removing with strict prohibition of strenuous quake and collision in order not to make outer shell or innerelectronic components damaged.

Avoid using where is easy to be affected by abnormal high and low temperatures

Too high or low temperature may make pictures on LCD screen turn to be gray and hard to be identified. When you have the product under normal temperature, the case will be corrected automatically.

Safety warning:

This product is an electronic and electrical product.

The long-term use of the circuit components may cause failures. It is recommended that the safe use period is 2 years.

After the safe use period, please regularly inspect the product. If you find any problems, please do not continue to use it. Cause a safety accident!

USER MANUAL

Warranty Card

- 1. Normal use of this product, if there is a failure due to quality problems, from the date of purchase (the payment voucher on the purchase date shall prevail), you can enjoy one-year free warranty service, and lifetime paid maintenance after the warranty period.
- 2. During the warranty period, if any damage is caused by improper use or storage, a material fee will be charged.
- 3. Free warranty will not be provided in the following cases:
- a: The payment voucher that proves the date of purchase cannot be presented
- b: The purchase date has been modified
- c: Damage caused by incorrect use by the user
- d: Failure caused by irresistible factors such as fire, flood, earthquake, lightning strike, etc.
- e: Failure caused by disassembly without permission