 


Digital Piano

USER MANUAL

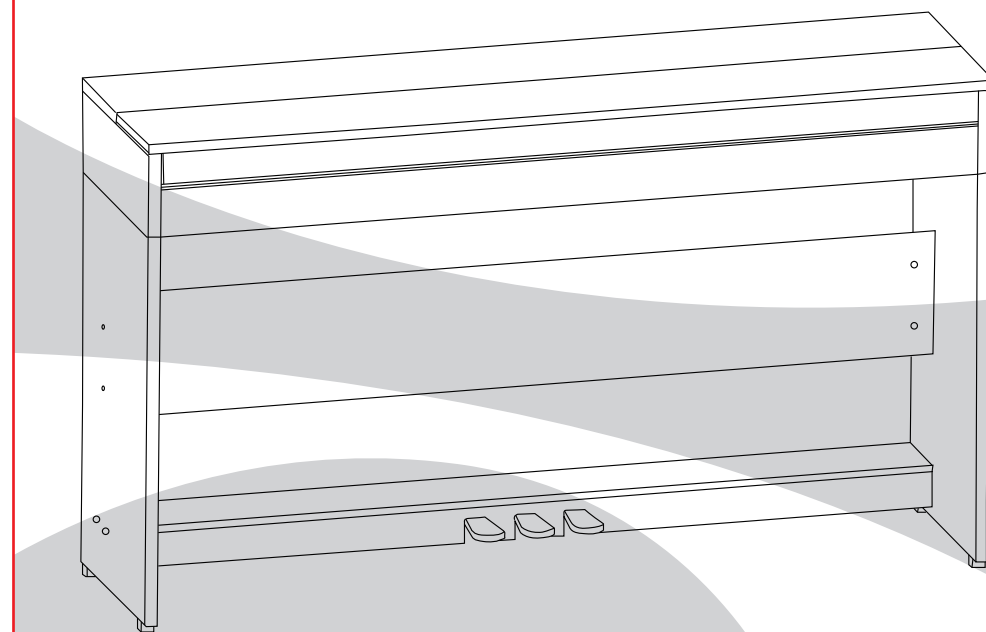

Welcome To Use Digital Piano

Thank you for your purchase of this digital keyboard. This digital keyboard is elegant and refined, combined perfectly with handle and timbre of traditional keyboard and latest electronic technology of the present age.

- ◆ Before using this musical instrument, you should read this manual book in detail.
- ◆ please keep all user files properly as to look up when needed in days to come

CONTTENT

1. Function Introduction	2-3
2. Safety Caution	4-5
3. Installation Graphic Representation	5
4. FUNCTIONAL INDICATOR	6
5. Connection	7
6. JACK SOCKET	8
7. BASIC OPERATION	9-11
8. Tone List	12-16
9. Rhythm List	17-18
10. Demo List	19
11. Single Finger Chord List	20
12. Multi-Finger Chord List	21-22
13. Product Maintenance	23
14. Warranty Card	23
15. Safety warning	24

Function Introduction

Appealing tone

It adopts Dream source, with digitization sampling, which provide vivid as acoustical experience for your performance

380 tones that are plentiful and top grade

which include 128 standard GM tones,

128 preset rhythms

There are 128 rhythms, including all sorts of accompaniments, ranging from rock-and-roll to pop music and jazz, which enable you to experience various feelings.

80 Demo songs

80 demos of various styles are selected with great care to be played.

USB / MIDI terminal

Use USB or MiDI terminal, and you can connect it to the computer or other MIDI devices for interaction and creation quickly and conveniently.

function list

- 88 Keys Keyboard
- 380 Tones
- 128 Rhythms
- 80 Demos in the library
- Keyboard percussion
- LED display
- Master volume / Acc volume control
- Tempo control / Transpose control
- chord function
- Accompaniment synchronization
- Keyboard split function
- Touch control / Transfer metronome
- USB/MIDI capability
- Headphone jack / Stereo audio input

Safety Caution

WARNING

Smoke,peculiar smell,overheat

When this musical instrument smokes, gives off peculiar smell or is overheat, continuing in service may result in fire and electric shock. When the above cases occur, you shall carry out the following operations immediately.

- 1.turn power off .
- 2.please unplug plug of AC transformer from the outlet.
- 3.contact your dealer.

AC transformer

- The misapplication of AC transformer may result in fire and electric shock. You shall abide by the following caution notes.

1. You shall use special AC transformer appointed for this product.
2. You shall use AC power supply whose output voltage is within the range of voltage rating marked on the AC transformer.
3. You shall not make the outlet and power extension line overload

You shall never touch AC transformer with wet hand, otherwise it may result in electric shock.

- please use AC transformer where may not touch water. Water may result in fire and electric shock.
- You shall never place vase or any other containers with water on AC transformer. Water may result in fire and electric shock

Notice

AC transformer

• The misapplication of AC transformer may result in fire and electric shock. You shall abide by the following caution notes.

1. You shall never place power line near kiln or other heaters.
2. When unplugged from the outlet, the power line shall never be pulled and dragged.

 
You shall grasp the body of AC transformer plug.

3. You shall insert the AC transformer into the outlet to the end.

Volume


You shall never play music with high volume for a long time. When using earphone, you shall take particular care. Too high volume may do harm to your hearing.

Installation Graphic Representation

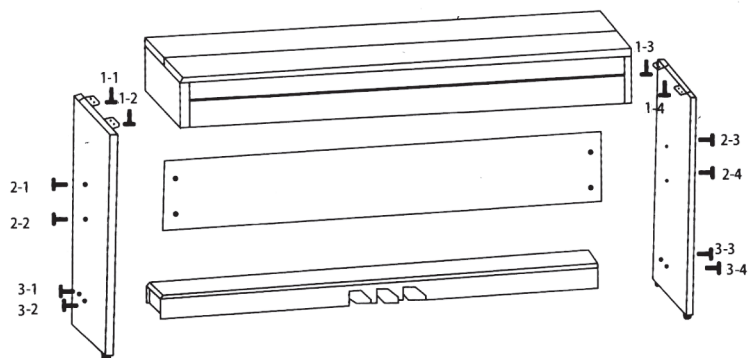


1. 1-1 to 1-4 plastic fix part screw M6X25(4PCS)
2. 2-1 to 2-4 screws M5X50 (4 PCS)
3. 3-1 to 3-4 screws M6X60 (4 PCS)

 FUNCTIONAL INDICATOR

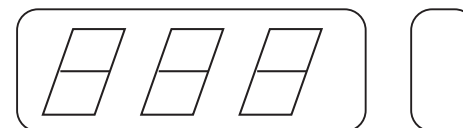

USB

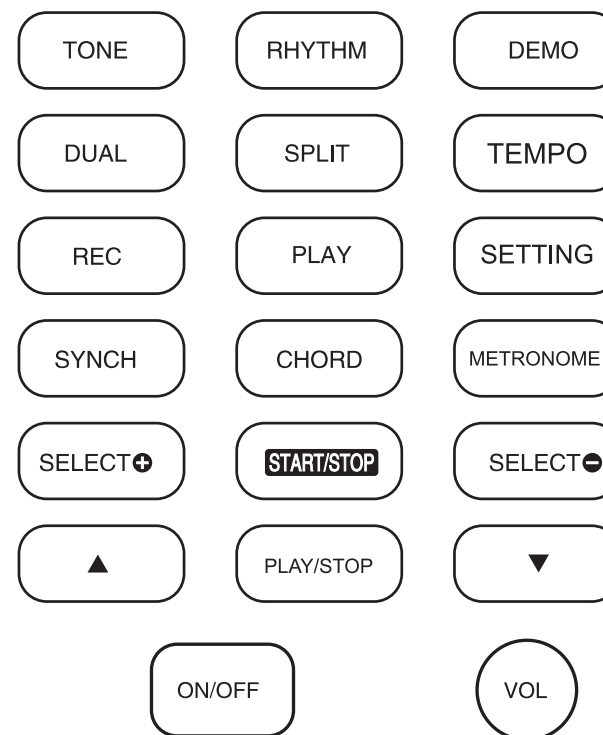 

Connection

Audio Input Interface

Before external audio signal is connected to this product, please turn down the volume of tone source at first. Adjust the volume to the satisfactory level after connection.

Connecting wire, which is sold into the open where both ends are standard plugs (for instance : for MP3)

 
or one end is standard plug while the other end is two needle shaped plug (for instance: for DCD) , is used to connect tone source output unit and digital keyboard, and when you switch on power switches of tone source instrument and digital keyboard, you can play music on the tone source instrument of the digital keyboard, or you can also play music while play the musical instrument

USB / MIDI Interfaces

MIDI is initial letters of Musical Instrument Digital Interface in English. MIDI is the standard connecting system of communication between digital keyboard and music instrument with MIDI USB or MIDI interfaces of this digital keyboard can be used to connected with music instrument accompanied with MIDI and computer.


Earphone Output Terminal

This product has one earphone output faucets, and turn down volume of the digital keyboard at first before connecting earphone. Adjust the volume to the satisfactory level after connection

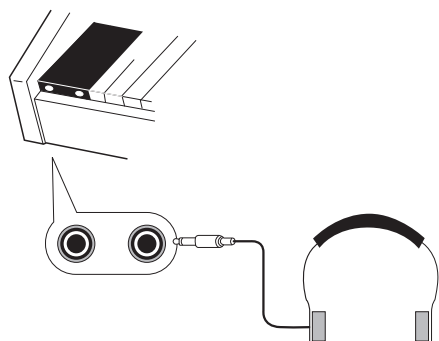

Two earphone faucets

 JACK SOCKET

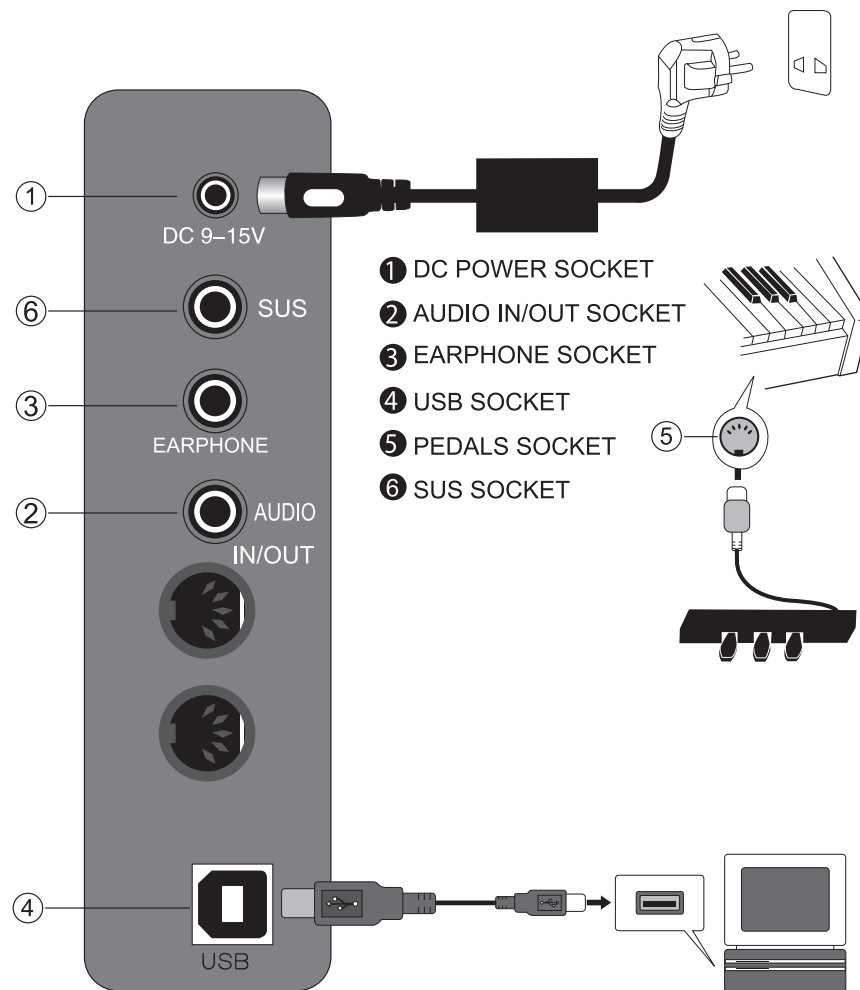

- ① DC POWER SOCKET
- ② AUDIO IN/OUT SOCKET
- ③ EARPHONE SOCKET
- ④ USB SOCKET
- ⑤ PEDALS SOCKET
- ⑥ SUS SOCKET

Basic Operation

Piano performance

1. Press the power switch, Digital display "001" and then you can enter the playing state.
2. Play music on the piano keys.

Volume adjustment

Use the volume knob to increase or decrease the volume until you are satisfied.

Timbre selection

1. Press "TONE" button, enter timbre mode.
2. Press "select +" or "select -" to select any timbre, and the corresponding timbre number will be displayed digitally.
3. When the power switch is turned on, it is preset to the piano tone

Rhythm selection

1. Press the "Rhythm" button, enters the rhythm mode.
2. Press "Select+" or "Select-" to select any rhythm, digital display of the corresponding rhythm number.
3. Press the "Start/Stop" key to start playing the selected rhythm.
to stop the rhythm play press "Start/Stop".

Speed adjustment

1. Press the "TEMPO" button and press "Select+" or "Select-" to adjust the speed and speed.
2. Speed control range (20-280), power-up preset in paragraph 120.

Chord accompaniment

1. Select the desired rhythm to play.
2. Press the "chord" buttons at the same time to enter the chord state.
3. Playing chords can be played differently on the accompaniment keyboard (1-34 keys from left) according to different fingering.
4. Press the "chord" buttons again to turn off the chord function.

Synchronous start

Select the rhythm to use before beginning, set the speed value and select the chord accompaniment.

1. In the rhythmic state, press the "synch" button to enter the synchronous start state.
2. Play chords (1-34 keys from the left of the keyboard), and the accompaniment will start playing automatically.
3. To cancel the synchronization function, press the "start/stop" button.

Setting/strength function

1. Press the "SETTING" button for the first time, and then press "select +" or "select -" to turn the force on or off.
2. Press the "SETTING" button for the second time, and then press "select +" or "select -" to select different rhythm volume (0-32).
3. Press the "SETTING" button for the third time, and then press "select +" or "select -" to select different shifts (-12—12).

Metronome features

Press the metronome button, the light lights up, the metronome function starts, and then press the key metronome function off.

Built-in Demo Song

1. Press the "demo" button to display the current demo number and start playing the demo. Press this key again to stop.
2. After entering the demo mode, you can also select different demo songs by "select +" or "select -".

Recording

1. Key disc note recording

Press the " REC " buttons simultaneously to digitally display "REC" into recording mode, recording 5000 notes.

2. Press the "play" button to digitally display "PLY" to play the recorded notes.

SPLIT

1. Enter the timbre mode first and choose an instrument as the main timbre.
2. Press the "SPLIT" button to enter the timbre selection mode.
3. Use "SELECT +" or "SELECT -" to select another instrument as the split tone.
4. Play notes on the key disc. At this time, play notes on the left and right sides of the key disc and make corresponding musical instrument sounds.
5. Press the "SPLIT" button again to cancel the segmentation of the key disk and return to the normal keyboard state.

The dual tone

1. Enter the timbre mode first and choose an instrument as the main timbre.
2. Press the "DUAL" button to enter the second tone selection mode.
3. Use "SELECT +" or "SELECT -" to select another instrument as the second tone.
4. Play notes on the key disc, in which case two corresponding resonant sounds can be produced simultaneously.
5. Press the "DUAL" button again to return to the normal tone state.

MP3 Play

1. Plug the flash drive with MP3-format songs into the "USB" socket.
2. Press the "Play/Stop" button to play or stop MP3 songs.
3. During playback, you can press "Previous" or "Next Song" to select different MP3 songs.

TONE LIST:

Number	Instrument	Number	Instrument
PIANO(钢琴)		029	GUITAR MUTED 1
001	GRAND PIANO 1	030	GUITAR OVRDRV
002	BRIGHT PIANO 1	031	GUITAR DISTRT 1
003	PIANO ELEC	032	GUITAR HRMNX
004	HONKY-TONK	BASS(贝司)	
005	E PIANO1	033	ACOUSTIC BASS 1
006	E PIANO2	034	FINGER BASS 1
007	GRAND HARPSICHORD	035	ELECT BASS 1
008	CLAVI CHORD 1	036	FRETLB BASS
GLOCK(钟琴)		037	SLAP BASS 1
009	CELESTA	038	SLAP BASS 2
010	GLOCKENSPIEL 1	039	SYN BASS 1
011	MUSIC BOX 1	040	SYN BASS 2
012	VIBRAPHONE 1	STRING(弦乐)	
013	MARIMBA 1	041	VIOLIN 1
014	XYLOPHONE 1	042	VIOLA 1
015	TUBULR BELLS 1	043	CELLO 1
016	DULCIMER 1	044	CONTRABASS 1
ORGAN(风琴)		045	STR TREM 1
017	HAND ORGAN 1	046	STR PIZZ
018	PERCHY ORGAN 1	047	HARP 1
019	ROCK ORGAN	048	TIMPANI 1
020	CHURCH ORGAN 1	CONCERT(合奏)	
021	REED ORGAN 1	049	STRINGS 1
022	ACCORDN 1	050	STRINGS 2
023	HARMONICA 1	051	STR SYN 1
024	TANGO ACCORDN 1	052	STR SYN 2
GUITAR(吉它)		053	CHOIR AAHS 1
025	GUITAR NYLON 1	054	VOICE OOHS 1
026	GUITAR STEEL 1	055	VOICE SYN
027	GUITAR JAZZ 1	056	ORCH HIT 1
028	GUITAR CLEAN 1	BRASS(铜管乐)	
		057	TRUMPT 1
		058	TROMBONE 1
		059	TUBA 1
		060	MUTE TPT 1
		061	FR HORN 1
		062	BRASS SECT 1
		063	BRASS SYN 1
		064	BRASS SYN 2
		PIPE(管乐器)	

USER MANUAL

065	SAX SOPRANO	101	BRIGHT FX
066	SAX ALTO 1	102	GOBLIN FX
067	SAX TENOR 1	103	ECHO FX
068	SAX BTONE 1	104	SCI-FI FX
069	OBOE 1	FOLK SOUND(民族乐器)	
070	ENG HORN 1	105	SITAR 1
071	BASSON 1	106	BANJO 1
072	CLARINET 1	107	SHAMISEN 1
WOODPIPE(木管乐器)		108	KOTO 1
073	PICCOLO 1	109	KALIMBA
074	FLUTE 1	110	BAGPIPE
075	RECORDER 1	111	FIDDLE
076	PAN FLUTE	112	SHANAI
077	BOTTLE BLOWN	PERCUSSION(打击乐器)	
078	SHAKHACHI	113	TINKLE BELL
079	WHISTLE 1	114	AGOGO
080	OCARINA	115	STEEL DRM
SYNTH PIPE(合成管乐)		116	WOODBLK
081	SQR WAVE	117	TAIKO DRM
082	SAW TOOTH	118	MLDY TOM
083	CALLIOPE	119	SYNTH DRM
084	CHIFF	120	REVRS CYM
085	CHARANG	EFFECT(效果音色)	
086	VOICE	121	GTR NOISE
087	FIFTHS	122	BREATH 1
088	BASS LEAD	123	SEASHORE
SYNTH VOICE(合成音色)		124	BIRD TWEET 1
089	NEW AGE	125	TELEPHONE
090	WARM PAD	126	HELICOPTER
091	POLY SYNTH	127	APPLAUSE
092	CHOIR PAD 1	128	GUNSHOT 1
093	BOW GLASS 1	其它音色	
094	METAL PAD 1	129	GRAND PIANO2
095	HALO PAD 1	130	GRAND PIANO3
096	SWEEP	131	GRAND PIANO4
SYNTH EFFECT(合成效果)		132	GRAND PIANO /W 1
097	RAIN FX	133	GRAND PIANO /W 2
098	SNDTRK FX	134	GRAND PIANO /W 3
099	CRYSTAL FX	135	BRIGHTNESS PIANO 1
100	ATMOSPH FX	136	BRIGHTNESS PIANO 2
		137	BRIGHTNESS PIANO 3

USER MANUAL

138	GRAND PIANO DARK 1	178	HONKY-TONK /W 3
139	GRAND PIANO DARK 2	179	HONKY-TONK /W 4
140	VELOCITY CROSS PIANO 1	180	SHORT HONKY-TONK 1
141	VELOCITY CROSS PIANO 2	181	SHORT HONKY-TONK 2
142	SOFT GRAND PIANO 1	182	E PIANO 1/W
143	SOFT GRAND PIANO 2	183	E PIANO 2/W
144	SOFT GRAND PIANO 3	184	E PIANO 3/W
145	STEREO BRIGHT PIANO	185	E PIANO 4/W
146	BRIGHT PIANO 2	186	E PIANO 5/W
147	BRIGHT PIANO 3	187	E PIANO 6/W
148	BRIGHT PIANO 4	188	SOFT E.PIANO 1
149	BRIGHT PIANO 5	189	SOFT E.PIANO 2
150	BRIGHT PIANO /W 1	190	SOFT E.PIANO 3
151	BRIGHT PIANO /W 2	191	SOFT E.PIANO 4
152	SOFT BRIGHT PIANO 1	192	HARD E.PIANO 1
153	SOFT BRIGHT PIANO 2	193	HARD E.PIANO 2
154	DEEP BRIGHT PIANO	194	SHORT E.PIANO 1
155	VELOCITY CROSS BRIGHT PIANO	195	SHORT E.PIANO 2
156	DETUNED E.PIANO 1	196	BRIGHTNESS E.P 1
157	DETUNED E.PIANO 2	197	BRIGHTNESS E.P 2
158	DETUNED E.PIANO 3	198	HARPSICHORD 1
159	BRIGHT E.PIANO 1	199	HARPSICHORD 2
160	BRIGHT E.PIANO 2	200	SOFT HARPSICHORD 1
161	BRIGHT E.PIANO 3	201	SOFT HARPSICHORD 2
162	BRIGHT E.PIANO 4	202	BRIGHT HARPSICHORD 1
163	E.PIANO /W 1	203	BRIGHT HARPSICHORD 2
164	E.PIANO /W 2	204	DARK HARPSICHORD 1
165	E.PIANO /W 3	205	DARK HARPSICHORD 2
166	E.PIANO /W 4	206	HARD HARPSICHORD 1
167	DARK E.PIANO 1	207	HARD HARPSICHORD 2
168	DARK E.PIANO 2	208	CLAVI CHORD 2
169	DARK E.PIANO 3	209	CLAVI CHORD 3
170	DARK E.PIANO 4	210	CLAVI /W
171	SOFT HONKY-TONK 1	211	BRIGHT CLAVI
172	SOFT HONKY-TONK 2	212	DARK CLAVI
173	VELOCITY CROSS HONKY-TONK	213	PERCHY CLAVI
174	DARK HONKY-TONK 1	214	BRIGHT CELESTA
175	DARK HONKY-TONK 2	215	SHORT CELESTA
176	HONKY-TONK /W 1	216	PERCHY CELESTA
177	HONKY-TONK /W 2	217	DUET CELESTA

USER MANUAL

218	CELESTA HARMONIC
219	GLOCKENSPIEL 2
220	GLOCKENSPIEL 3
221	GLOCKENSPIEL 4
222	BRIGHT GLOCKENSPIEL
223	DARK GLOCKENSPIEL
224	GLOCKENSPIEL /W 1
225	GLOCKENSPIEL /W 2
226	MUSIC BOX 2
227	MUSIC BOX 3
228	MUSIC BOX 4
229	TOY MUSIC BOX
230	BRIGHT MUSIC BOX
231	DARK MUSIC BOX
232	VIBRAPHONE 2
233	VIBRAPHONE 3
234	SYN VIBRAPHONE
235	HARD VIBRAPHONE
236	VIBRAPHONE /W 1
237	VIBRAPHONE /W 2
238	VIBRAPHONE SOFT
239	MARIMBA 2
240	MARIMBA /W
241	DARK MARIMBA
242	BRIGHT MARIMBA
243	DUTED MARIMBA
244	DARK MARIMBA
245	XYLOPHONE 2
246	XYLOPHONE 3
247	VELOCITY CROSS XYLOPHONE
248	DISTR XYLOPHONE
249	BRIGHT XYLOPHONE
250	FAST XYLOPHONE
251	SLOW XYLOPHONE
252	TUBULR BELLS 2
253	TUBULR BELLS 3
254	TUBULR BELLS 4
255	SYN TUBULR BELLS
256	TUBULR BELLS DARK
257	DULCIMER 2
258	DULCIMER 3

259	SANTUR
260	HAND ORGAN 2
261	HAND ORGAN 3
262	SOFT HAND ORGAN
263	BRIGHT SOFT HAMND ORGAN
264	HAMND ORGAN DETUNED
265	PERCHY ORGAN 2
266	PERCHY ORGAN 3
267	BRIGHT PERCHY ORGAN
268	DISTR PERCHY ORGAN
269	ROTART ORGAN
270	SLOW ROTART ORGAN
271	1960 ROCK ORGAN
272	1980 ROCK ORGAN
273	BRIGHT ROCK ORGAN
274	DARK ROCK ORGAN
275	SOFT ROCK ORGAN
276	CHURCH ORGAN 2
277	CHURCH ORGAN 3
278	CHURCH ORGAN 4
279	CHURCH ORGAN 5
280	CHURCH ORGAN 6
281	CHURCH ORGAN /W 1
282	CHURCH ORGAN /W 2
283	BIRGHT CHURCH ORGAN 1
284	BIRGHT CHURCH ORGAN 2
285	DARK CHURCH ORGAN 1
286	DARK CHURCH ORGAN 2
287	SOUL CHURCH ORGAN
288	CHURCH ORGAN HARMONIC
289	CHURCH ORGAN SLOW
290	CHURCH ORGAN FAST
291	SOFT CHURCH ORGAN
292	REED ORGAN 2
293	REED ORGAN 3
294	REED ORGAN 4
295	REED ORGAN 5
296	BRIGHT REED ORGAN
297	DARK REED ORGAN
298	REED ORGAN /W
299	FAST REED ORGAN

USER MANUAL

300	SLOW REED ORGAN
301	SOFT REED ORGAN
302	HARD REED ORGAN
303	JAZZ REED ORGAN
304	ACCORDN 2
305	ACCORDN 3
306	ACCORDN 4
307	ACCORDN 5
308	DISTR ACCORDN
309	BRIGHT ACCORDN
310	ACCORDN HARMONIC
311	ROCK ACCORDN
312	SWEET ACCORDN
313	DARK ACCORDN
314	FAST ACCORDN
315	SLOW ACCORDN
316	HARMONICA 2
317	HARMONICA 3
318	HARMONICA 4
319	HARMONICA 5
320	SWEET HARMONICA
321	DISTR HARMONICA
322	SLOW HARMONICA
323	FAST HARMONICA
324	BRIGHT HARMONICA
325	DARK HARMONICA
326	SOFT HARMONICA
327	HARMONICA /W 1
328	HARMONICA /W 2
329	HARMONICA MUTED
330	TANGO ACCORDN 2
331	TANGO ACCORDN 3
332	1960 TANGO ACCORDN
333	1980 TANGO ACCORDN
334	BRIGHT TANGO ACCORDN
335	DARK TANGO ACCORDN
336	SOFT TANGO ACCORDN
337	HARD TANGO ACCORDN
338	TANGO ACCORDN /W 1
339	TANGO ACCORDN /W 2
340	SLOW TANGO ACCORDN

341	FAST TANGO ACCORDN
342	GUITAR NYLON 2
343	GUITAR NYLON 3
344	GUITAR NYLON 4
345	GUITAR NYLON 5
346	GUITAR NYLON 6
347	GUITAR NYLON 7
348	GUITAR NYLON RELEASE
349	VELOCITY CROSS RUITAR
350	DETUNED GUITAR NYLON
351	BIRGHT GUITAR NYLON
352	DARK GUITAR NYLON
353	GUITAR NYLON HARMONIC 1
354	GUITAR NYLON HARMONIC 2
355	GUITAR NYLON /W 1
356	GUITAR NYLON /W 2
357	GUITAR NYLON FAST
358	GUITAR NYLON SLOW
359	HARD GUITAR NYLON
360	SOFT GUITAR NYLON
361	GUITAR STEEL 2
362	GUITAR STEEL 3
363	GUITAR STEEL 4
364	VELOCITY CROSS GUITAR STEEL
365	DARK GUITAR STEEL
366	BRIGHT GUITAR STEEL
367	GUITAR STEEL HARMONIC 1
368	GUITAR STEEL HARMONIC 2
369	HARD GUITAR STEEL
370	SOFT GUITAR STEEL
371	FAST GUITAR STEEL
372	SLOW GUITAR STEEL
373	VELOCITY GUITAR STEEL
374	GUITAR STEEL REALSE
375	GUITAR STEEL /W 1
376	GUITAR STEEL /W 2
377	GUITAR JAZZ 2
378	GUITAR JAZZ 3
379	GUITAR JAZZ 4
380	GUITAR JAZZ 5

USER MANUAL

RHYTHM LIST:

	Number	Instrument
8 BEAT	001	8 Beat 1A
	002	8 Beat 2A
	003	8 Beat 3A
	004	8 Beat 4A
	005	8 Beat HeatA
	006	8 Beat Pop 1A
	007	8 Beat Pop 2A
BALLAD	008	Ballad 1A
	009	Ballad 2A
	010	Guitar BalladA
	011	Organ BalladA
	012	Bluse BalladA
	013	Epic BalladA
	014	Rock BalladA
	015	Slow BalladA
	016	Pop Ballad
	017	Electro Pop BalladA
	018	Polk BalladA
16 BEAT	019	16 Beat 1A
	020	16 Beat 2A
	021	16 Beat 3A
	022	16 Beat 4A
	023	16 Beat FunkA
	024	16 Beat Pop A
	025	16 Beat BalladA
LATIN	026	Bossa Nova 1A
	027	Guitar BossaA
	028	Pop BossaA
	029	TangoA
	030	Cha ChaA
	031	RhumbaA
	032	TEX TEXA
	033	CountryA
COUNTRY	034	Country RockA
	035	Country ShuffleA
	036	Country SwingA
	037	Country BalladA
	038	Country WaltzA
	039	50's RockA
ROCK R&B	040	Heavy MetalA
	041	Rock 1A
	042	Rock 2A
	043	Soft RockA
	044	Slow RockA

	045	Hard RockA
	046	Rock & Roll 1A
	047	Rock & Roll 2A
RHYTHM&BLUES	048	Chicago BluesA
	049	Fast GospelA
	050	Groove SoulA
	051	RapA
	052	GospelS1A
	053	BluesA
	054	Slow BluesA
	055	FoxtrotA
Disco	056	Disco TropicA
	057	Disco HandsA
	058	Two StepA
	059	Polk PopA
	060	Waltz 1A
	061	Waltz Pop 1A
	062	Waltz Pop 2A
WORLD MUSIC	063	RaiA
	064	Twist 1A
	065	Twist 2A
	066	Miami PopA
	067	MotownA
	068	ReggaeA
	069	Swing ReggaeA
	070	MamboA
	071	BeguineA
	072	MusetteA
DANCE	073	HouseA
	074	Slow FoxA
	075	Vienna WaltzA
	076	SalsaA
	077	DiscoA
	078	Hip Hop PopA
	079	Analog PopA
	080	Club DanceA
JAZZ&SWING	081	BoogieA
	082	Funky PopA
	083	Jazz RockA
	084	Swing 1A
	085	DixielandA
	086	Jazz SambaA
TRADITIONAL	087	MarchA
	088	US. MarchA
	089	Samba A
	090	PolkaA
	091	Polka OberA

USER MANUAL

	092	TarantellaA
	093	Slow WaltzA
	094	Ober WaltzA
PINIST	095	Piano BalladA
	096	Waltz 2A
	097	Guitar WaltzA
	098	2/4 Piano 1A
	099	3/4 Piano 1A
	100	4/4 Piano 1A
8 BEAT	101	8 Beat 1B
	102	8 Beat 2B
	103	8 Beat 3B
	104	8 Beat 4B
	105	8 Beat HeatB
	106	8 Beat Pop 1B
	107	8 Beat Pop 2B
BALLAD	108	Ballad 1B
	109	Ballad 2B
	110	Guitar BalladB
	111	Organ BalladB
	112	Bluse BalladB
	113	Epic BalladB
	114	Rock BalladB
	115	Slow BalladB
	116	Pop BalladB
	117	Electro Pop BalladB
	118	Polk BalladB
16 BEAT	119	16 Beat 1B
	120	16 Beat 2B
	121	16 Beat 3B
	122	16 Beat 4B
	123	16 Beat FunkB
	124	16 Beat Pop B
	125	16 Beat BalladB
LATIN	126	Bossa Nova 1B
	127	Guitar BossaB
	128	Pop BossaB

















































USER MANUAL

DEMO LIST:

NO	SongName		
001	MinutWlz	041	Swan
002	DJ Dance	042	Musettes
003	Fountian	043	GypsyRnd
004	SpanGirl	044	Serenade
005	SonataPn	045	Polka
006	SuperSng	046	SoilPull
007	LittlBee	047	Trout
008	HorseRac	048	Send-off
009	Nocturne	049	March
010	TheSpain	050	ForElise
011	BusyTran	051	SwaniRiv
012	Mexico	052	France
013	MozartPn	053	Danube
014	Minuet	054	Hungary
015	Nifuma	055	Spaceman
016	Disco	056	Patriot
017	FolkSong	057	Cuckoo
018	Girl Sea	058	SingKite
019	LittStar	059	TongChil
020	KindeGtn	060	DoReMi
021	Wahaha	061	We Happy
022	Duck&Cik	062	LittlBee
023	Humorous	063	Russia
024	Joy Song	064	Plaster
025	GoingHom	065	Foison
026	Dove	066	JingleBe
027	Auldlang	067	PaperBoy
028	Moonligh	068	Swallow
029	HapyBirh	069	New Year
030	PraiseSng	070	Edelweis
031	Dolly	071	MoonRivr
032	Market	072	Beyer 10
033	Family	073	Beyer 20
034	A cradle	074	Beyer 30
035	At Home	075	Beyer 40
036	Seasons	076	Beyer 50
037	YearsAgo	077	Beyer 60
038	Pigeons	078	Beyer 70
039	InnerVic	079	Beyer 71
040	Violin	080	Beyer 72

USER MANUAL

Single Finger Chord List

	M	m	7	m7
C				
C#				
D				
D#				
E				
F				
F#				
G				
G#				
A				
A#				
B				

Multi-finger Chord List

C	Cm	C7	Cm7	Cdim7	CM7	Cm7 ⁻⁵	Cdim
C [♯] /(D [♭])	C [♯] /(D [♭])m	C [♯] /(D [♭])7	C [♯] /(D [♭])m7	C [♯] /(D [♭])dim7	C [♯] /(D [♭])M7	C [♯] /(D [♭])m7 ⁻⁵	C [♯] /(D [♭])dim
D	Dm	D7	Dm7	Ddim7	DM7	Dm7 ⁻⁵	Ddim
(D [♯])/E [♭]	(D [♯])/E [♭] m	(D [♯])/E [♭] 7	(D [♯])/E [♭] m7		(D [♯])/E [♭] M7	(D [♯])/E [♭] m7 ⁻⁵	(D [♯])/E [♭] dim
E	Em	E7	Em7		EM7	Em7 ⁻⁵	Edim
F	Fm	F7	Fm7		FM7	Fm7 ⁻⁵	Fdim
F [♯] /(G [♭])	F [♯] /(G [♭])m	F [♯] /(G [♭])7	F [♯] /(G [♭])m7		F [♯] /(G [♭])M7	F [♯] /(G [♭])m7 ⁻⁵	F [♯] /(G [♭])dim
G	Gm	G7	Gm7		GM7	Gm7 ⁻⁵	Gdim
(G [♯])/A [♭]	(G [♯])/A [♭] m	(G [♯])/A [♭] 7	(G [♯])/A [♭] m7		(G [♯])/A [♭] M7	(G [♯])/A [♭] m7 ⁻⁵	(G [♯])/A [♭] dim
A	Am	A7	Am7		AM7	Am7 ⁻⁵	Adim
(A [♯])/B [♭]	(A [♯])/B [♭] m	(A [♯])/B [♭] 7	(A [♯])/B [♭] m7		(A [♯])/B [♭] M7	(A [♯])/B [♭] m7 ⁻⁵	(A [♯])/B [♭] dim
B	Bm	B7	Bm7		BM7	Bm7 ⁻⁵	Bdim

Caug	Csus4	C7sus4	Cm add9	CmM7	C7 ⁻⁵	Cadd9
C [♯] /(D [♭])aug	C [♯] /(D [♭])sus4	C [♯] /(D [♭])7sus4	C [♯] /(D [♭])m add9	C [♯] /(D [♭])mM7	C [♯] /(D [♭])7 ⁻⁵	C [♯] /(D [♭])add9
Daug	Dsus4	D7sus4	Dm add9	DmM7	D7 ⁻⁵	Dadd9
(D [♯])/E [♭] aug	(D [♯])/E [♭] sus4	(D [♯])/E [♭] 7sus4	(D [♯])/E [♭] m add9	(D [♯])/E [♭] mM7	(D [♯])/E [♭] 7 ⁻⁵	(D [♯])/E [♭] add9
Esus4	E7sus4	Em add9	EmM7	E7 ⁻⁵	Eadd9	
Fsus4	F7sus4	Fm add9	FmM7	F7 ⁻⁵	Fadd9	
F [♯] /(G [♭])sus4	F [♯] /(G [♭])7sus4	F [♯] /(G [♭])m add9	F [♯] /(G [♭])mM7	F [♯] /(G [♭])7 ⁻⁵	F [♯] /(G [♭])add9	
Gsus4	G7sus4	Gm add9	GmM7	G7 ⁻⁵	Gadd9	
(G [♯])/A [♭] sus4	(G [♯])/A [♭] 7sus4	(G [♯])/A [♭] m add9	(G [♯])/A [♭] mM7	(G [♯])/A [♭] 7 ⁻⁵	(G [♯])/A [♭] add9	
Asus4	A7sus4	Am add9	AmM7	A7 ⁻⁵	Aadd9	
(A [♯])/B [♭] sus4	(A [♯])/B [♭] 7sus4	(A [♯])/B [♭] m add9	(A [♯])/B [♭] mM7	(A [♯])/B [♭] 7 ⁻⁵	(A [♯])/B [♭] add9	
Bsus4	B7sus4	Bm add9	BmM7	B7 ⁻⁵	Badd9	

Product Maintenance

Careful and good maintenance and production of this product play a very important role in lengthen service life of the product and decrease fault.

Avoid heating, Damping or direct Sunlight

You shall not have the musical instrument exposed to sunlight in excess, or placed where is near air conditioner or baking hot

you should not use it near TV set or radios

This musical instrument may lead to video or audio disturbance on TV set and

Radio. In that case, you shall move the musical instrument away from TV set or radio

You should not use paint, thinner or similar chemicals to clean

You can clean this product a piece of soft cloth with weak solution and neutral detergent. The piece of cloth shall be dipped and wrung out in the solution until

it is dry approximately.

you should avoid quake and collision

The product shall be handled with care when removing with strict prohibition of strenuous quake and collision in order not to make outer shell or innerelectronic components damaged.

Avoid using where is easy to be affected by abnormal high and low temperatures

Too high or low temperature may make pictures on LCD screen turn to be gray and hard to be identified. When you have the product under normal temperature, the case will be corrected automatically.

Safety warning:

This product is an electronic and electrical product.

The long-term use of the circuit components may cause failures. It is recommended that the safe use period is 2 years.

After the safe use period, please regularly inspect the product. If you find any problems, please do not continue to use it. Cause a safety accident!

Warranty Card

1. Normal use of this product, if there is a failure due to quality problems, from the date of purchase (the payment voucher on the purchase date shall prevail), you can enjoy one-year free warranty service, and lifetime paid maintenance after the warranty period.

2. During the warranty period, if any damage is caused by improper use or storage, a material fee will be charged.

3. Free warranty will not be provided in the following cases:

- a: The payment voucher that proves the date of purchase cannot be presented
- b: The purchase date has been modified
- c: Damage caused by incorrect use by the user
- d: Failure caused by irresistible factors such as fire, flood, earthquake, lightning strike, etc.
- e: Failure caused by disassembly without permission