 


Digital piano

Instruction manual

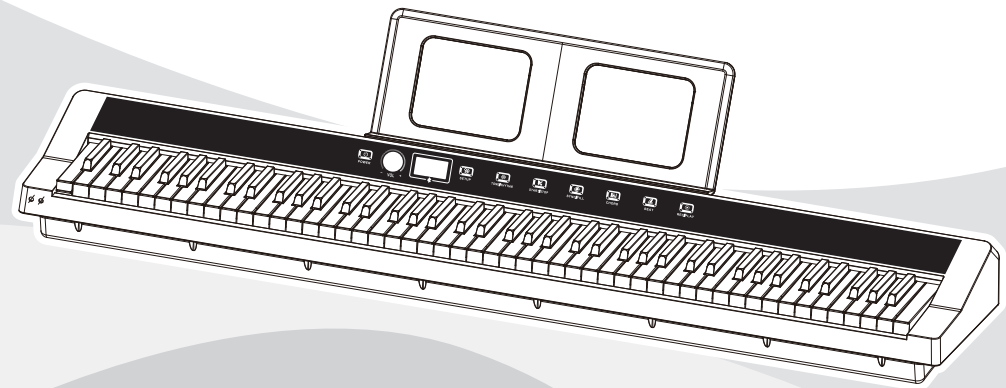

This product is subject to change without notice!

Thank you for choosing this digital piano from our company.
This digital piano is elegant and exquisite, a perfect combination of the latest electronic technology.
You must read this instruction carefully before using this instrument.

Use the DREAM audio source

Its core adopts the top French DREAM sound source, digital sampling, to bring you performance a realistic listening experience.

88 progressive heavy hammer keys, all with heavy hammer keyboard

The 88-keys progressive lever hammer keyboard gives you the real feel of playing on a grand piano.

Headphone jack

External headphone jack, in the front of the digital piano function box, enabling you to play without affecting others.

Audio jack

External sound socket, function board at the back of digital piano, can be convenient for external sound, performance and playing.

Special Reminder:

This product is an electronic electroacoustic musical instrument. It is normal for there to be a little current sound in the horn (two horns or one of the horns, or plugged in earphones) after electricity. Please keep this instrument away from radio, television, antenna receiver, router, refrigerator, electrical appliances with motors and other RF electrical interference sources while using.

Assembly diagram

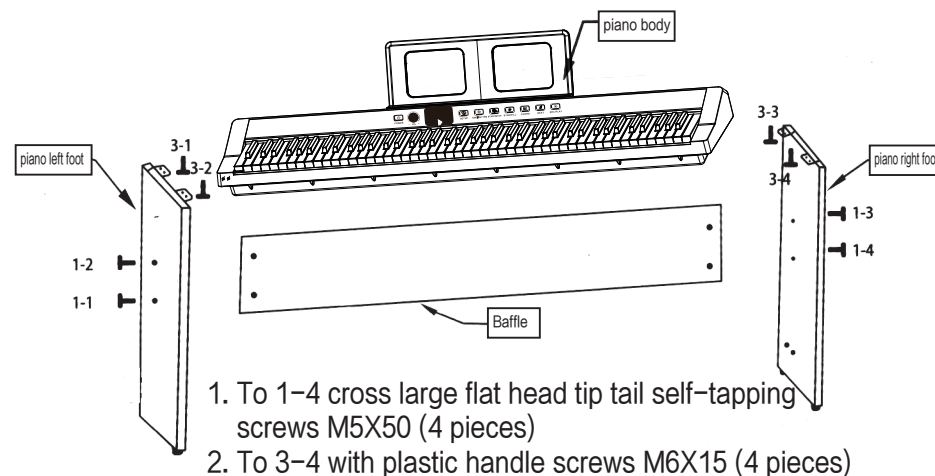 


Figure 1

 


Figure 3

 
M4 M5X50 tip tail self-tapping screws, as shown in Figure 1

M6X15 with 4 screws of plastic handle, as shown in Figure 3

Installation steps:

1. Fix the left and right supporting plates and the middle fixing plate with ① PM5x50(4PCS) screws;
2. Place the body on the left and right support boards and fix it with screw ③M6x15(4PSC).

Note: The portable model does not include the left and right side panels and the baffle.

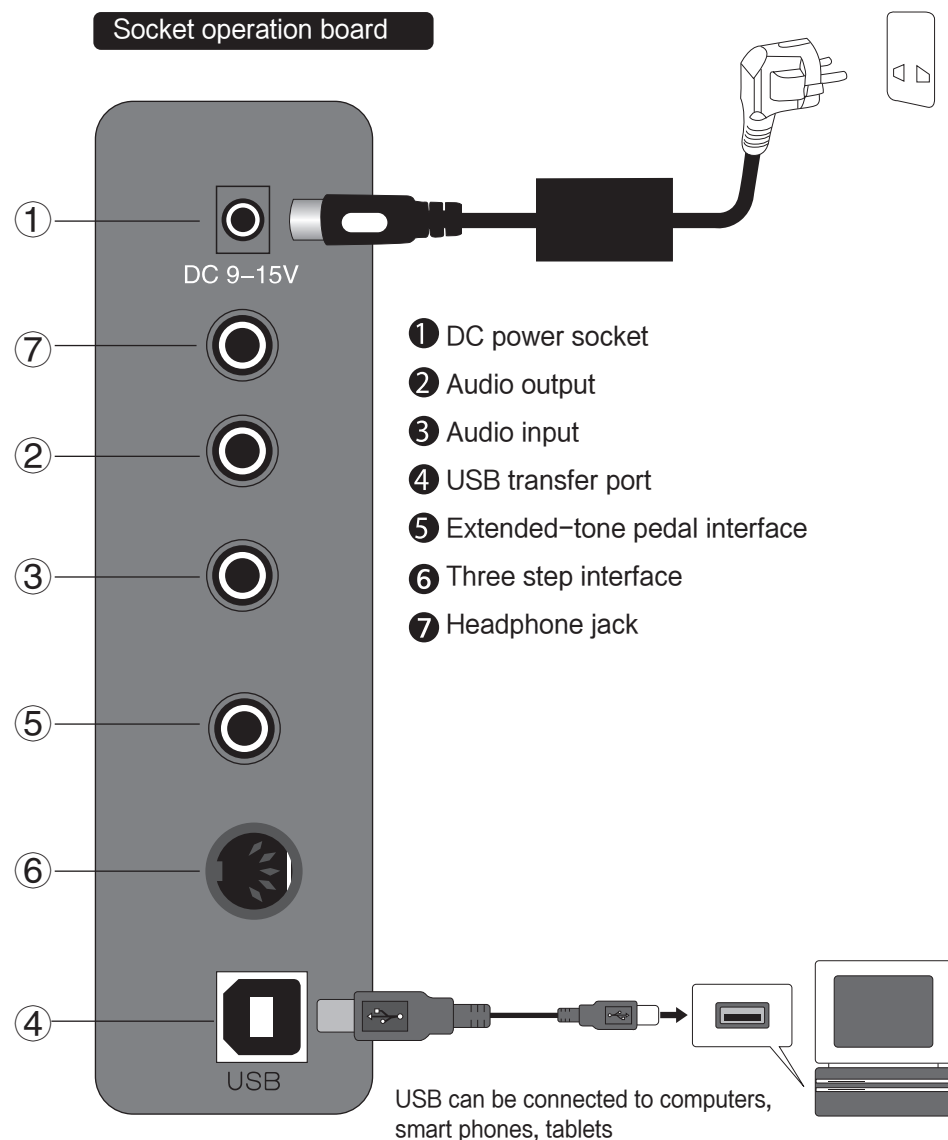

1 Power cable Connection

1. Connect the power cord according to the diagram when using. one end is inserted into the power socket in the operating board at the bottom of the piano, and the other end is inserted into the household power socket. (figure 1)
2. If you do not use this product for a long time, please unplug the power cord and keep it properly.

2 Audio input/output jack

1. Audio output socket can be connected to large speakers
2. The audio input jack can connect the external audio source to the electric piano for playing. (Figure 2 Figure 3)

3 Headphone jack

Connecting headphones will automatically cut off the output from the internal speakers, making it easy to play without disturbing others. (figure 7)

4 USB transmission interface

 
The USB transmission interface of the digital piano can be connected to the computer. Through the pre-installed music software on the computer, learning or playing the keyboard to perform, compose, storage and other functions. Edited music and music software built-in accompaniment, can be connected to the digital piano through the software to play, or according to the accompaniment music to play. (figure 4)

5 Extended-tone pedal interface

Insert the end plug of the pedal line into the pedal interface, you can connect the sound effect function of the pedal! (Figure 5) Insert the pedal into the three-step interface according to the 6-hole jack in the figure, and the pedal will have three effects. (soft, sostenuto, sustain)(Figure 6)



Panel figure

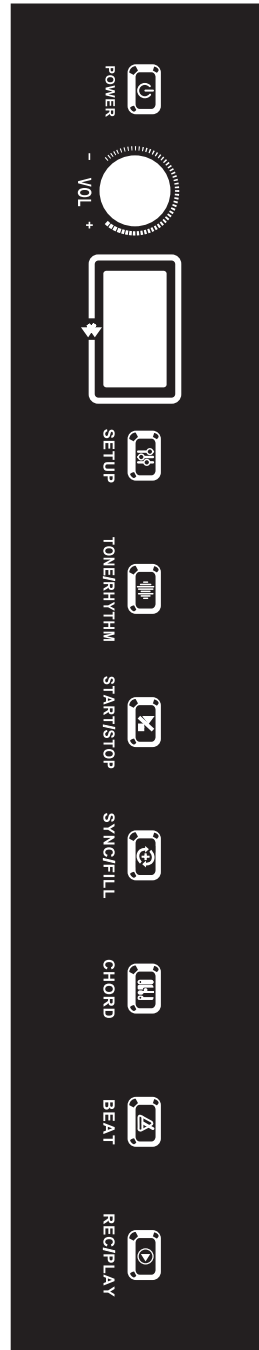

- Keyboard :88 keys with heavy hammer keyboard
 - Timbre: 128 timbres
 - Rhythms: 100 rhythms
 - Demonstration songs: 80
 - Output function: LCD display
 - Timbre control: dual timbre and dual keyboard metronome shift intensity equalizer
 - Chord control: single – and multi-fingered chords
 - Recording control: Powerful program recording playback function
 - Button control: touch effect
 - Other ports: USB ports. Audio input/output interface.
- Power port Headphone port Pedal interface
- Dual Bluetooth system: audio Bluetooth + data Bluetooth
 - Bluetooth password: 8888
 - Polyphonic number: 128

1 Power

1. Tap the "Power" bottom, the power indicator and LCD screen will light up, you can enter the performance state.
 2. Play music on the piano keyboard.
 3. Turn off the power supply when it is not in use.
- The processor chip of this product is complex, similar to the computer system, and sometimes it cannot respond. Please turn off the power switch and then open it to work normally.

2 Tone

1. Tap the "Timbre/Rhythm" button and the button indicator will light up to enter the timbre mode. Boot the default tone mode.
2. Press the volume knob and adjust the volume knob to select any tone color. The LCD displays the corresponding tone number.
3. Find the timbre you need in the timbre list in the Appendix. There are 128 timbres.

3 Rhythm

1. Press the "Timbre/Rhythm" button to turn off the indicator and enter the rhythm mode.
2. Press and adjust the volume knob to select any rhythm.
3. Press the "Start/Stop" button to play the selected rhythm, and then tap the key to stop playing the rhythm.
4. Find the rhythm you need in the appendix rhythm list. There are 100 rhythms.

4 Demo

1. Press the first and last keys at the same time to display the number of the current demo song on the LCD and start playing the demo song.
2. When entering the demonstration mode, you can also adjust the volume knob to select different demonstration songs. Press the volume knob to enter the volume adjustment mode. The volume can be adjusted (0-64). The default value is 55.
3. Press the first and last white key again to stop playing the demo song.
4. Find the music you need in the appendix song list

Note!

The built-in music library of this product contains 80 songs, which can be used for playing and listening or you can follow the melody on the keyboard with the learning function.

5 Synchronize/plug in

When you tap the "Synchronize/Insert" button, the corresponding indicator blinks and the synchronization function starts. Press any key to play the rhythm synchronously. Press the "Sync/Insert" button during the rhythm playing which will insert a small drumbeat.

6 Metronome

Tap the "metronome" button, corresponding to the indicator light flash with the beat, display "001", this is the first beat, the second touch display "002", this is the second beat, the third touch display "003", this is the third beat, the fourth touch display "004", this is the fourth beat, the fifth touch metronome closed.

7 Chord

1. Select the rhythm you want to play. For details, refer to the rhythm operation in Point 4.
2. Tap the "Chord" button and the corresponding indicator lights up, and the LCD displays that the chord starts to enter the chord state. The use of single multi-finger multiplexing chord mode, where in line with the multi-finger chord playing method, then the piano response to multi-finger chord; Where does not conform to the multi-fingered chord playing method, then identifies the response according to the single fingered chord.
3. Playing chords can be performed on the accompaniment keyboard (1-34 keys from left) according to different fingerings.
4. Press the "Chord" button again to close the chord state.

8 Record/play sound

 
1. Keyboard note recording: Hold down the first white key on the left and touch the "Record/Play" key at the same time to enter the recording mode. Play the keyboard key to enter the note recording, and touch the "Record/Play" again to finish the recording. In keyboard note recording mode, timbre can be changed for recording, and 5000 notes can be recorded.
2. Playback Touch "Record/Playback" to play the recorded note.
3. Press Reset or power off to clear the recording.



9 Function

1. For the first time, enter the shift LCD display "0", use the volume knob to adjust the shift size (-12-12).
2. Touch the function button for the second time to enter the speed mode. LCD displays "120" and the volume knob can be used to adjust the speed (20-280).
3. Touch the function button for the third time to enter the accompaniment volume mode. On the LCD display, "24" can be used to adjust the accompaniment volume with the volume knob (0-32).
4. Touch the function button for the fourth time to enter the equalizer bass mode. LCD display "96" can adjust the bass size with the volume knob (0-127).
5. Touch the function button for the fifth time to enter the equalizer treble mode. LCD display "96", use the volume knob to adjust the treble size (0-127).
6. Touch the function button for the sixth time to enter the percussion selection mode (61 percussion instruments) and use the volume knob to open or close the percussion function.
7. Touch the function button for the seventh time to enter the dual-keyboard selection mode, and use the volume knob to open or close the dual-keyboard function.
8. Touch the function button for the eighth time to enter the dual timbre selection mode. Use the volume knob to open or close the dual timbre function.
9. Touch the function button for the ninth time to enter the intensity selection mode. LCD displays the standard available volume knob to adjust the intensity level (light-standard - heavy-off).
10. Touch the function button for the tenth time to enter the reset selection mode. At this time, touch the chord key to restore to the initial state.

Double keyboard

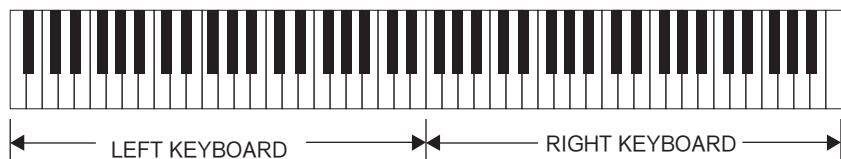

10 Bluetooth mode

Turn on the power to connect bluetooth automatically.

The password for connecting Bluetooth is 8888

1. Connect mobile phones, tablets and computers: open Bluetooth devices such as mobile phones and connect to piano-Audioxxxx , complete the connection with the piano.
2. Audio Bluetooth introduction: Use the music player APP of mobile phone and other devices to connect to the electronic piano through Bluetooth, you can play music and enjoy songs on the piano
3. Introduction of data Bluetooth: Using the music play APP of mobile phone and other devices, , with data bluetooth, you can connect the piano to those apps for learning and practicing purpose.

Note!

After Bluetooth is started, there will be Bluetooth communication and the sound of data scanning chip motherboard, which is a normal phenomenon. Please feel free to use it. After Bluetooth is finished, please turn off Bluetooth in time and disconnect the Bluetooth of mobile phones and other devices.

Piano-audio XXXX: XXXX represents the last 4 bits code for connecting Bluetooth devices such as mobile phones. Because each Bluetooth plate is different, the connection code is different, which is a normal phenomenon.

Bluetooth password :8888



Please note that this electronic instrument needs basic maintenance and good care to enhance its service life

1 Avoid heat, moisture or direct sunlight

Do not overexpose the product to direct sunlight, or place it near air conditioning, or in extremely hot places.

2 Do not use near TV or radio

This product may cause video or audio interference to TV and radio reception. If this happens, the product should be removed from the TV or radio.

3 Do not use paint, thinner or similar chemicals for cleaning

Clean the product with a soft cloth moistened with a weak aqueous solution and a neutral detergent. Soak the cloth in the solution and wring until it is nearly dry.

4 Do not shake, avoid collision

The product should be carefully handled when moving, and violent vibration and collision are strictly prohibited to avoid damage to the shell or the internal electronic components.



TONE LIST:

Number	Instrument
PIANO	
001	GRAND PIANO 1
002	BRIGHT PIANO 1
003	PIANO ELEC
004	HONKY-TONK
005	E PIANO1
006	E PIANO2
007	GRAND HARPSICHORD
008	CLAVI CHORD 1
GLOCK	
009	CELESTA
010	GLOCKENSPIEL 1
011	MUSIC BOX 1
012	VIBRAPHONE 1
013	MARIMBA 1
014	XYLOPHONE 1
015	TUBULR BELLS 1
016	DULCIMER 1
ORGAN	
017	HAND ORGAN 1
018	PERCHY ORGAN 1
019	ROCK ORGAN
020	CHURCH ORGAN 1
021	REED ORGAN 1
022	ACCORDN 1
023	HARMONICA 1
024	TANGO ACCORDN 1
GUITAR	
025	GUITAR NYLON 1
026	GUITAR STEEL 1
027	GUITAR JAZZ 1
028	GUITAR CLEAN 1

029	GUITAR MUTED 1
030	GUITAR OVRDRV
031	GUITAR DISTRT 1
032	GUITAR HRMNX
BASS	
033	ACOUSTIC BASS 1
034	FINGER BASS 1
035	ELECT BASS 1
036	FRETLS BASS
037	SLAP BASS 1
038	SLAP BASS 2
039	SYN BASS 1
040	SYN BASS 2
STRING	
041	VIOLIN 1
042	VIOLA 1
043	CELLO 1
044	CONTRABASS 1
045	STR TREM 1
046	STR PIZZ
047	HARP 1
048	TIMPANI 1
CONCERT	
049	STRINGS 1
050	STRINGS 2
051	STR SYN 1
052	STR SYN 2
053	CHOIR AAHS 1
054	VOICE OOHS 1
055	VOICE SYN
056	ORCH HIT 1
BRASS	
057	TRUMPT 1
058	TROMBONE 1
059	TUBA 1
060	MUTE TPT 1
061	FR HORN 1
062	BRASS SECT 1
063	BRASS SYN 1
064	BRASS SYN 2
PIPE	



TONE LIST:

Number	Instrument
PIANO	
001	GRAND PIANO 1
002	BRIGHT PIANO 1
003	PIANO ELEC
004	HONKY-TONK
005	E PIANO1
006	E PIANO2
007	GRAND HARPSICHORD
008	CLAVI CHORD 1
GLOCK	
009	CELESTA
010	GLOCKENSPIEL 1
011	MUSIC BOX 1
012	VIBRAPHONE 1
013	MARIMBA 1
014	XYLOPHONE 1
015	TUBULR BELLS 1
016	DULCIMER 1
ORGAN	
017	HAND ORGAN 1
018	PERCHY ORGAN 1
019	ROCK ORGAN
020	CHURCH ORGAN 1
021	REED ORGAN 1
022	ACCORDN 1
023	HARMONICA 1
024	TANGO ACCORDN 1
GUITAR	
025	GUITAR NYLON 1
026	GUITAR STEEL 1
027	GUITAR JAZZ 1
028	GUITAR CLEAN 1

029	GUITAR MUTED 1
030	GUITAR OVRDRV
031	GUITAR DISTRT 1
032	GUITAR HRMNX
BASS	
033	ACOUSTIC BASS 1
034	FINGER BASS 1
035	ELECT BASS 1
036	FRETLS BASS
037	SLAP BASS 1
038	SLAP BASS 2
039	SYN BASS 1
040	SYN BASS 2
STRING	
041	VIOLIN 1
042	VIOLA 1
043	CELLO 1
044	CONTRABASS 1
045	STR TREM 1
046	STR PIZZ
047	HARP 1
048	TIMPANI 1
CONCERT	
049	STRINGS 1
050	STRINGS 2
051	STR SYN 1
052	STR SYN 2
053	CHOIR AAHS 1
054	VOICE OOHS 1
055	VOICE SYN
056	ORCH HIT 1
BRASS	
057	TRUMPT 1
058	TROMBONE 1
059	TUBA 1
060	MUTE TPT 1
061	FR HORN 1
062	BRASS SECT 1
063	BRASS SYN 1
064	BRASS SYN 2
PIPE	



RHYTHM LIST:

8 BEAT	001	8 Beat 1A
	002	8 Beat 2A
	003	8 Beat 3A
	004	8 Beat 4A
	005	8 Beat HeatA
	006	8 Beat Pop 1A
	007	8 Beat Pop 2A
BALLAD	008	Ballad 1A
	009	Ballad 2A
	010	Guitar BalladA
	011	Organ BalladA
	012	Bluse BalladA
	013	Epic BalladA
	014	Rock BalladA
	015	Slow BalladA
	016	Pop Ballad
	017	Electro Pop BalladA
	018	Polk BalladA
16 BEAT	019	16 Beat 1A
	020	16 Beat 2A
	021	16 Beat 3A
	022	16 Beat 4A
	023	16 Beat FunkA
	024	16 Beat Pop A
	025	16 Beat BalladA
LATIN	026	Bossa Nova 1A
	027	Guitar BossaA
	028	Pop BossaA
	029	TangoA
	030	Cha ChaA
	031	RhumbaA
	032	TEX TEXA
COUNTRY	033	CountryA
	034	Country RockA
	035	Country ShuffleA
	036	Country SwingA
	037	Country BalladA
	038	Country WaltzA

ROCK R&B	039	50's RockA
	040	Heavy MetalA
	041	Rock 1A
	042	Rock 2A
	043	Soft RockA
	044	Slow RockA
	045	Hard RockA
	046	Rock & Roll 1A
	047	Rock & Roll 2A
RHYTHM&BLUES	048	Chicago BluesA
	049	Fast GospelA
	050	Groove Soula
	051	RapA
	052	GospelS1A
	053	BluesA
	054	Slow BluesA
	055	FoxtrotA
Disco	056	Disco TropicA
	057	Disco HandsA
	058	Two StepA
	059	Polk PopA
	060	Waltz 1A
	061	Waltz Pop 1A
	062	Waltz Pop 2A
WORLD MUSIC	063	RaiA
	064	Twist 1A
	065	Twist 2A
	066	Miami PopA
	067	MotownA
	068	ReggaeA
	069	Swing ReggaeA
	070	MamboA
	071	BeguineA
	072	MusetteA

DANCE	073	HouseA
	074	Slow FoxA
	075	Vienna WaltzA
	076	SalsaA
	077	DiscoA
	078	Hip Hop PopA
	079	Analog PopA
	080	Club DanceA
JAZZ&SWING	081	BoogieA
	082	Funky PopA
	083	Jazz RockA
	084	Swing 1A
	085	DixielandA
	086	Jazz SambaA
TRADITIONAL	087	MarchA
	088	US. MarchA
	089	Samba A
	090	PolkaA
	091	Polka OberA
	092	TarantellaA
	093	Slow WaltzA
	094	Ober WaltzA
PINIST	095	Piano BalladA
	096	Waltz 2A
	097	Guitar WaltzA
	098	2/4 Piano 1A
	099	3/4 Piano 1A
	100	4/4 Piano 1A

DEMO LIST:

NO	SongName
001	MinutWlz
002	DJ Dance
003	Fountian
004	SpanGirl
005	SonataPn
006	SuperSng
007	LittlBee
008	HorseRac
009	Nocturne
010	TheSpain
011	BusyTran
012	Mexico
013	MozartPn
014	Minuet
015	Nifuma
016	Disco
017	FolkSong
018	Girl Sea
019	LittStar
020	KindeGtn
021	Wahaha
022	Duck&Cik
NO	SongName
023	Humorous
024	Joy Song
025	GoingHom
026	Dove
027	Auldlang
028	Moonligh
029	HapyBirh

NO	SongName
030	PraiseSng
031	Dolly
032	Market
033	Family
034	A cradle
035	At Home
036	Seasons
037	YearsAgo
038	Pigeons
039	InnerVic
040	Violin
041	Swan
042	Musettes
043	GypsyRnd
044	Serenade
045	Polka
046	SoilPull
047	Trout
048	Send-off
049	March
050	ForElise
051	SwaniRiv
052	France
053	Danube
054	Hungary
055	Spaceman
056	Patriot
057	Cuckoo
058	SingKite
059	TongChil



NO	SongName
060	DoReMi
061	We Happy
062	LittlBee
063	Russia
064	Plaster
065	Foison
066	JingleBe
NO	SongName
067	PaperBoy
068	Swallow
069	New Year
070	Edelweis
071	MoonRivr
072	Beyer 10
073	Beyer 20
074	Beyer 30
075	Beyer 40
076	Beyer 50
077	Beyer 60
078	Beyer 70
079	Beyer 71
080	Beyer 72



One finger chord table

YAMAHA One finger chord table example

	M	m	7	m7
C				
C#				
D				
D#				
E				
F				
F#				
G				
G#				
A				
A#				
B				

Multifingered chord table

Chord Type Root	M	m	7	m7	dim7	M7	m7-5	dim
C								
C ⁺ /(D ^b)								
D								
(D ⁺)/E ^b								
E								
F								
F ⁺ /(G ^b)								
G								
(G ⁺)/A ^b								
A								
(A ⁺)/B ^b								
B								

MIDI Message

Function		Midi Out	Midi In	Remarks
Basic Channel	Default	1	1 ~ 16	
	Changed	1 ~ 16	1 ~ 16	
Mode		Mode3	Mode3	
Note Number		21 ~ 109	21 ~ 109	
Velocity	Note On	V = 1 ~ 127	V = 1 ~ 127	
	Note Off	8nH V = 64	9nH V = 0, 8nH V = XX	XX: 無關
Pitch Bend		X	O	
Control Change	1	X	O	Modulation
	7	X	O	Volume
	10	X	O	Pan
	1	X	O	Expression
	64	O	O	Sustain
	67	O	O	Soft Pedal
	121	X	O	Reset All Controller
Program Change	123	X	O	All Sound Off
		0 ~ 127	0 ~ 127	
Aux Messages	Local On/Off	X	X	
	All notes Off	X	O	
	Active Sense	X	O	
	Reset	X	X	

Power

This product can be powered by standard indoor wall sockets, please use only 3C certified power adapters that meet the standard requirements. When not in use temporarily, please turn off the power. When not in use for a long time, please unplug the power cable and keep it properly.



Mark

In order to ensure your safe and correct use of the product, to prevent harm to users and others and financial damage, this manual and the product are marked with a series of safety marks. The symbols and their meanings are as follows:

Warning


This mark indicates that there is a potential danger of death or serious injury if the mark is ignored and the product is incorrectly operated.

Attention


This mark indicates that there is a potential danger of personal injury or other financial damage if the mark is ignored and the product is operated incorrectly.

Sign sample




This triangle flag () represents what users should be aware of. (The left example is careful electric shock)



Circular signs () with slash lines indicate prohibited items. A graphic representation in or next to a sign indicating specific prohibited content. (For the left example, disassembly is prohibited)



Black dots () indicate things that must be observed. The icon in this sign represents the content of a specific, subject matter to be complied with. (The left example is that the power plug must be pulled out of the socket)







Warning




Smoke, smell, overheating

When this product smoke, smell or overheat, use may lead to fire and electric shock hazard. If the above situation occurs, perform the following operations immediately.



1. Turn off the power.
2. Remove the plug from the power socket.
3. Contact your distributor

The power cord

- Improper use of power cables may cause fire and electric shock. 
The following precautions must be observed.
 - The special power cord specified for this product must be used. 
 - Use an AC power supply whose output voltage is within the rated of the household voltage.
 - Do not overload power sockets and power extension cords. 
- Improper handling of power cables, resulting in damage or breakage, may cause fire and electric shock. The following precautions must be observed.
 - Do not place heavy objects or heat the power cord. 
 - Do not attempt to modify or excessively bend the power cord.
 - Do not twist or pull the power cord.
 - If the power cable or plug is damaged, replace it with a power cable of the same specification and type. 
- Do not touch the power cord and plug with wet hands, otherwise there is a risk of electric shock. 

- Please use the power cord where water will not splash. Water is a hazard of fire and electric shock. 
- Do not place vases or any other containers containing water on this product. Water is a hazard of fire and electric shock. 
- Do not allow minors to plug or touch the power cord or connecting plate. Minors have no electrical safety knowledge and may cause electric shock. 

Attention

- Improper use of power cables may cause fire and electric shock. The following precautions must be observed.
 - Do not place the power cord near the furnace or other heat source.
 - Do not pull the power cord when removing it from the power socket. Must hold the plug body. 
 - The power cord plug must be inserted into the power socket to the end.
 - Make sure the power supply is switched off before connecting or cutting off the power cord. 
 - Unplug the power cord from a wall outlet in the event of a thunderstorm or before traveling or other extended absences.
 - At least once a year, unplug the power cord from the wall outlet and clean the dust that accumulates around the plug.

Do not burn this product

Do not expose the product to fire. Otherwise, wood products will burn and their internal electronic components will explode, resulting in fire and injury risk.

**Water and foreign matter**

Water, other liquids and (metal sheet, etc.) entering the product may cause fire hazard and electric shock.



If the above situation occurs, perform the following operations immediately.

1. Turn off the power.
2. If the power cord is being used for power supply, unplug it from the wall outlet.
3. Contact your dealer.

Dismantlement and transformation

Do not disassemble or modify the product in any way. Otherwise, there is a risk of electric shock, scalding or other personal injury. Delegate all inspections, adjustments and maintenance to your dealer.

**To fall or hit.**

There is danger of fire and electric shock after the product is damaged by falling or strong impact. If the above situation occurs, perform the following operations immediately.



1. Turn off the power.
2. If the power cord is being used for power supply, remove it from the wall outlet.
3. Contact your dealer.

Plastic bags

Do not allow anyone to put this product packaging plastic bag on the head or into the mouth, otherwise there is a risk of suffocation, special attention should be paid to families with young children.

**Keep your distance from this product and support**

Climbing on the piano body or its support can cause it to topple or damage, especially for families with young children.

**Put**

Avoid placing the product on uneven surfaces or in any other unstable place. Otherwise, the product will fall, and there is a risk of injury.

**Product movement**

Before removing the product, unplug the power cord plug from the wall outlet and unplug all other cables and connectors. Otherwise, it may lead to wire damage, fire and electric shock risk.

**Clean**

Before cleaning the product, remove the power cord plug from the wall outlet, otherwise there is a risk of fire and electric shock.

**Interface**

Only specified devices and devices can be connected to the interface of this product. Danger of fire and electric shock when connecting undesignated equipment or devices.

**Location choice**

Avoid placing the product in the following places. Otherwise there is a risk of fire electric shock.



- A hot or dusty place.
- Kitchen or other smoky area.
- Exposure to direct sunlight, or any other place that will cause high temperature of the product.

Volume

Do not play music at high volume for a long time. Be careful when using headphones. Too high a volume can damage your hearing.

**Weight**

Do not place heavy objects on the product. Otherwise, the top of the product will be too heavy, causing the objects on it fall off, which may lead to the risk of injury.

**Proper assembly of bracket**

Improper assembly of the bracket will cause it to tip over, causing the product to fall, which may lead to the risk of injury.



Therefore, assembly must be carried out in accordance with the instructions in the accompanying manual to ensure that the product is properly mounted on its bracket.

Safety warning!

Electrical appliances will be aging after long-term use.

It is recommended to test the products regularly after the one-year warranty period is exceeded.

If there is any abnormal phenomenon, please suspend the use and hand over to professional maintenance personnel to avoid safety accidents!

Please cut off the power after each use!

Attachment list

Name	Number
Power adapter	1 PCS
Body	1 PCS
Left/right support plate	2 PCS
Intermediate plate	1 PCS
Screw	8 PCS
Instructions	1 PCS

Instrument parameters

Keys: 88	Intonation: ≤ 3 the sound
Range: A2 ~ C5	Output power : $\geq 15W \times 2$
Style: Portable vertical	Power supply: DC 12V2A 50/60Hz

Troubleshooting

Fault	Possible causes/Solutions
When the power is switched on, a puffing sound is produced	This is a normal phenomenon, please do not worry
When the power is turned on, pressing the keyboard does not make any sound.	Make sure the main volume control is set in the appropriate position. Or check whether there is any other device connected to the earphone output jack, so the built-in speaker system automatically disconnects
Note quality is slightly different from note quality under the same timbre	This is a normal phenomenon, due to the different timbre sampling range and produce different sound quality
When using the duration function, some timbre duration is long, and some timbre duration is short.	This is normal because the duration of the different timbre of the instrument has been set to the maximum length
The volume is too small	Make sure the master volume control is set in the appropriate position
Some MIDI data cannot be transmitted correctly (even when the MIDI cable is properly connected)	This is a normal phenomenon and is related to the initial setting state of the piano
When using mobile phone or mobile phone close to the horn noise phenomenon will occur	Mobile phones can cause interference. To avoid this noise, turn off your mobile phone or use it away from your keyboard
The pitch of the keyboard does not match the position of the keyboard when it is played.	You may turn on the double keyboard or move the function, at this time turn off the double keyboard or move reset to zero; You can also turn off the power switch to restart.
You can't change the tone while playing, and the pitch of the keyboard doesn't match the actual position of the keyboard	You may turn on the double keyboard function, turn off the double keyboard function at this time; You can also turn off the power switch to restart.
Playing demo song sound distortion or discontinuous	The possible reason is that the over-heated circuit self-protection system of the power amplifier is started due to the long time of high-power playback. At this time, it can be recovered by turning down the volume or turning off the power for a period of time
There are two timbre occurring at the same time	The likelihood is you opened double tone function, close double tone function right now can

Note: The equipment has been tested and complies with national safety regulations and EMC and other relevant regulations. Radio communication may cause interference to the equipment, or the equipment may affect radio or TV reception. Users should take one or more of the following measures to correct interference:

- Reposition or replace the receiving antenna.
- Increased direct isolation between device and receiver.
- The receiver connects the device to sockets on different lines.
- Consult dealers or experienced radio/television technicians.

Warning user: Any unreasonable changes or modifications may affect the normal operation of the device.

Records of the warranty

warranty date	Fault and handling methods	Completion date

Product certificate

Product Name: Digital piano

Product Model:

Factory Date:

Inspector:

Warranty card

Dear users:

Thank you for choosing digital piano series products. When you purchase products, please ask the dealer to fill in the date of purchase, product model and stamp the shop seal, and keep this card properly.

Purchase date	
Product model	
Dealer phone	
Dealership chapter	

THE warranty

1. Under normal circumstances, our factory guarantees the products free of charge for one year from the date of purchase.
2. During the warranty period, if there is any damage caused by use, storage, improper or self-disassembly, the material fee shall be charged accordingly.
3. If the warranty period exceeds, the cost shall be charged accordingly.
4. Please contact the dealer directly for repair service.